 





# User Manual For Portable Biometric Compact Safe

## PARTS OF THE SAFE

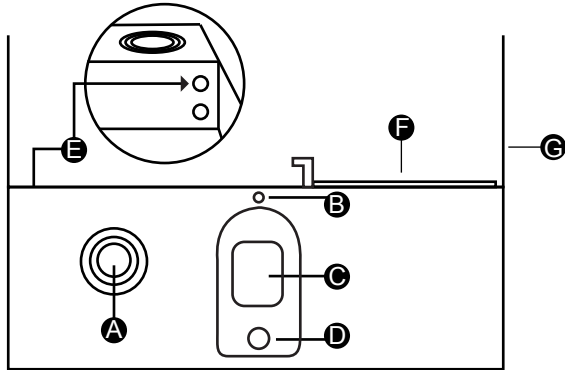

### Parts of the Safe

 - A. Key Entry
- B. Indicator Light
- C. Fingerprint Scanner
- D. Wake Up Button
- E. Initialization Button
- F. Battery Compartment and Cover
- G. Cable Slot
- H. Mounting Holes (located under the safe)

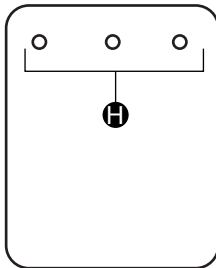

### WARNING

Avoid leaving safe door open and unattended; it will allow unauthorized individuals to add their fingerprint and/or reprogram the safe, gaining full access to the safe and the contents.

## OPENING THE SAFE WITH ACCESS KEY

1. Insert access key into key entry, turn clockwise to open, partially lift lid of safe and remove access key by turning it counter clockwise
2. Open safe by lifting the lid of the safe

### NOTE

Store access keys in a secure place. NOT inside of safe

When calling for replacement or additional access keys have the access key code number ready. The access key code is etched in the key entry and on the access keys.

## BATTERIES

1. Locate the battery compartment and remove battery cover
2. Gently slide battery holder out of the compartment
3. Place 4, AA batteries and pay attention to the polarity of each battery
4. Gently slide battery holder back into place
5. Replace battery cover

## REPLACING BATTERIES

The red indicator light will start flashing and a continuous beeping sound will be heard. This indicates that the batteries are low.

1. Open safe by using the access key; turn clockwise
2. Repeat steps 1-5 of "Batteries" and replace old batteries with new batteries
3. Close safe and ensure that the safe is locked

### NOTE

After replacing the batteries safe retains registered fingerprints

## REGISTERING A FINGERPRINT

The safe is in demo mode, ANY fingerprint can open the safe

1. With the safe open press and release the initialization button
2. A beep will be heard and scanner will flash red
3. Immediately place desired finger on the scanner
  - Hold finger still, until registration process is complete
4. Registration process is complete when a total three beeps are heard. See below

### Successful Save

- Indicator light will flash green, followed by one beep, indicator light will flash green twice and two consecutive beeps
- Registration has been successful

### Unsuccessful Save

- Indicator light will flash green, followed by one beep, indicator light will flash red and two consecutive beeps
- Repeat registration process again

### NOTE

- To add more fingerprints/users repeat steps above
- Stores up to 120 fingerprints
- For security purposes wipe fingerprint off scanner

## For Accurate and Consistent Fingerprint Scanning

- Use scanner in low light conditions
- Use the index finger
- Place and hold finger firmly on the scanner
- Each user should register 2-3 different fingerprints

## TESTING A REGISTERING A FINGERPRINT

1. With safe lid open, press the wake up button
2. Place registered finger on the scanner

### Successfully Saved Fingerprint

- Indicator light will flash green indicating a valid fingerprint
- You will hear the safe unlock

### Unsuccessful Fingerprint

- Indicator light will flash red and green consecutively indicating that the fingerprint is not valid
- Repeat steps in "Registering A Fingerprint"

4. Close safe and ensure that the safe is locked
5. For security purposes wipe fingerprint off scanner

## OPENING THE SAFE USING A FINGERPRINT

1. Press the wake up button
2. Place registered finger on the scanner
3. The indicator light will flash green indicating a valid fingerprint
4. Gently lift the door of the safe
5. Close safe and ensure that the safe is locked
6. For security purposes wipe fingerprint off scanner

## DELETING ALL FINGERPRINTS

1. With the safe open locate the battery compartment and remove battery cover
2. Gently slide battery holder out of the compartment
3. Remove all 4, AA batteries from battery holder
4. Press wake up button a few times to release remaining electronic power
5. Re-insert 3, AA batteries and pay attention to the polarity of each battery
6. Press and hold down the initialization button
7. Re-insert the last AA battery you will hear 2 beeps, release initialization button
8. Gently slide battery holder back into place and replace battery cover

See reverse side for more information



# User Manual For Portable Biometric Compact Safe

## DELETING ALL FINGERPRINTS continued

 
- All fingerprints stored in the safe have been deleted.
- The safe is in demo mode, ANY fingerprint can open the safe

## INSTALLING THE CABLE

Included with the safe is a steel cable that may be attached to any stationary item for increased security. The cable hole is located on the side of the safe.

### Installing the Cable

- Locate the stationary item you would like the safe to be attached to and wrap the cable around the stationary item
- Thread one end of the cable through the other loop of the cable. The loop that was just created in this step should be wrapped around the stationary item
- Open safe by using the personal pin code or access key
- Locate the cable slot
- Place the unused loop of the steel cable with the with the metal stopper portion in the safe through the cable slot
- Close safe and ensure that the safe is locked
- Slightly tug on the cable to ensure that the cable is securely attached to the safe

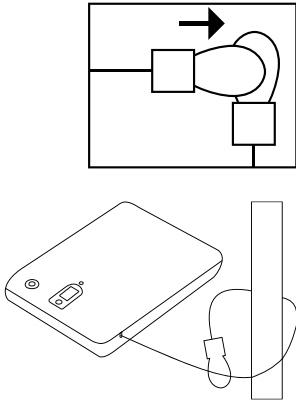

### Removing the Cable

- Open safe by using a registered fingerprint or access key
- Lift steel cable out of the cable slot
- Pull the one end of the cable through the other loop of the cable
- Store cable in a safe place

## MOUNTING

The safe may be mounted to a wall or to the floor. The three pre-drilled mounting holes are located under the safe and can be exposed by gently removing the rubber pads out of it's place.

### NOTE On Wall Mounting:

When mounting to a wall, be aware of the load bearing to ensure safety of safe and contents. Failure to do so could result in the safe falling and damaging property and/or people.

**DO NOT** mount safe without anchoring to the wall behind the safe!

When mounting to a wall check the wall or cabinet for structural soundness

- Check location for concealed items such as wires, pipes etc
- Get the appropriate anchors for the type of floor or wall you will be mounting the safe to (wood, tile, concrete etc)
- Mark the surface to drill holes for the anchors you will be using
- Drill the appropriate size hole for the anchors you will be using
- Once mounted, test the strength to make sure the safe is securely mounted

## CARE AND MAINTENANCE

- For security purposes wipe fingerprint off scanner when opening and/or closing the safe
- If necessary use a damp cloth to clean the safe. **DO NOT** use chemicals or cleaning agents
- Keep liquids away from the control panel. Spills on the control panel will cause damage and possibly electric shock
- Secure safe in a proper area to prevent it from falling and causing damage or injury
- **DO NOT** over stuff the contents of the safe, it can damage the motor mechanism or the contents
- **DO NOT** disassemble the product. For all repairs and maintenance, contact authorized service centers or distributor BARSKA Customer Service
- **DO NOT** place emergency keys inside of safe



## 1 YEAR LIMITED WARRANTY

### COMPACT SAFE

BARSKA warrants this new safe to be free of original defects in material and/or workmanship under normal use for a period of twelve (12) months from the date product is received by purchaser. This warranty does not include damage caused by improper installation or maintenance. Damage from misuse, abuse, accident (such as dropping), normal wear and tear, fire, flood, or acts of nature. Damage from service or repairs other than those performed by BARSKA. Labor, cost and shipping charges for the removal and replacement of defective parts beyond the initial twelve-month warranty period. All transportation and shipping charges. Removing or altering the seal under any circumstances will automatically void the warranty.

This warranty is limited to original purchaser and is not transferable. This warranty applies only to products purchased in the United States.

Please email [info@barska.com](mailto:info@barska.com) or call 1.888.666.6769 for Return Merchandise Number (RMA#) before any returns. The RMA number must appear on the outside of the shipping package. Product must be packed carefully and sturdily in its original packaging to prevent damage in transit and returned freight pre-paid to:

BARSKA OPTICS  
Repair Department  
1721 Wright Avenue  
La Verne, CA 91750

Please include all of the following when returning BARSKA products for service and/or replacement:

- Please write your complete details (Name, Address, Telephone #, E-mail address, RMA#, etc.)
- Purchase receipt or Proof of Purchase. (Original/Copy)
- A brief explanation of the defect.
- A Check/Money Order of \$20.00 to cover inspection, shipping and handling.

\*Please allow 6-8 weeks for delivery.

BARSKA will examine and test returned product and repair or replace defective part(s) or units with new part(s) or a new unit if necessary within the warranty period. Purchaser is required to remit \$20.00 to BARSKA for return shipping and handling at time product is returned. If repair is required after warranty period expiration, purchaser will be charged for replacement parts and return shipping.

BARSKA® Optics shall not be liable for any consequential, incidental and/or contingent damages whatsoever. We will not pay shipping, insurance or transportation charges from you to us, or any import fees, duties and or taxes. This warranty supersedes all previous BARSKA® Optics warranties.

BC216

8/12

© 2012 BARSKA®  
1721 Wright Ave | La Verne, CA 91750 | USA  
(t) 888.666.6769 | (f) 909.445.8169 | [www.barska.com](http://www.barska.com)

**Replacement Keys:** When calling for replacement or additional access keys have the access key code number ready. The access key code is etched in the key entry AND on the access keys.