





OWNERS MANUAL


RESERVE™ SERIES OVER/UNDER BREAK- ACTION SHOTGUN


IMPORTANT: “SAFETY WARNINGS” — NOTE THE SYMBOL 


THESE SAFETY WARNINGS ARE FOR YOUR PROTECTION AS WELL AS THE SAFETY OF OTHERS. DISREGARDING INFORMATION IN THIS MANUAL COULD CAUSE DEATH, SERIOUS INJURY OR PROPERTY DAMAGE TO YOU OR THOSE AROUND YOU.


 Do not attempt to load, handle or use your firearm until you read and understand the information contained in this owner's manual. Understand and follow all instructions and warnings in their entirety. Before handling your firearm, you should learn how it operates and how to maintain it. This includes knowing its basic parts, how the manual safety and other safety features operate, how to safely open and close the action, and how to safely load and unload ammunition from the firearm. Improper use and handling is dangerous and could cause death, serious injury or property damage to you or those around you. All users of the firearm must become thoroughly familiar with the instructions in this manual.

 This manual is not a comprehensive guide to firearm safety. Mossberg recommends that new firearm owners and/ or shooters seek professional training from qualified instructors prior to handling any firearm.

 Be certain this owner's manual is available for reference and is kept with this firearm if transferred to another party. If this manual is lost or misplaced, contact the Product Service Center for a free replacement copy or visit www.mossberg.com.

 After performing any work on your firearm such as cleaning, adjustments, disassembly or installation of any accessory, the firearm should be re-checked for proper functioning before using and/or firing live ammunition.

 Firearms are complex mechanisms. Any modification, alteration, or improper fitting of parts may result in a dangerous malfunction, damage to the firearm, and could cause death, serious injury or property damage to you or those around you. The firearm's owner must accept full responsibility for the correct reassembly and functioning of the firearm after any disassembly or replacement of parts.

 If you do not understand any of the material in this manual or have any questions, contact the Product Service Center or a qualified gunsmith.

MOSSBERG INTERNATIONAL, INC.

P.O. BOX 497 • 7 GRASSO AVENUE, NORTH HAVEN, CONNECTICUT 06473
PHONE (800) 363-3555
www.mossberg.com

Safety and safe firearms handling is everyone's responsibility.



As the owner of a firearm, you must undertake the full-time responsibility of safe firearms handling for your own safety and the safety of those around you:

- Keep all firearms and ammunition out of the reach of children, or any unauthorized person.
- Store your firearms and ammunition separately, locked in a secure location.
- Be sure to read how to properly install your trigger lock as instructed in this manual.
- Never store a loaded firearm.
- Never leave a loaded firearm unattended.
- Never transport a loaded firearm in a vehicle. When transporting your firearm, keep it unloaded, stored and secured within the confines of the vehicle.
- Unload your firearm when you have stopped shooting or when you have to climb a tree, fence or cross a slippery surface. Keeping your firearm unloaded when not in use will prevent an unintentional discharge should you accidentally slip, fall, drop or jar your firearm.
- The safety should remain fully rearward in the "ON" (SAFE) position and the firearm unloaded at all times until you are in a place where it is safe to shoot, keeping your finger off the trigger and outside the trigger guard until you are aiming at the intended target and have decided to fire.
- Never shoot at water, rocks, or any hard surfaces. Shots may glance off or ricochet off such surfaces and could cause death, serious injury or property damage to you or those around you.
- Be sure of your target and beyond. Make sure that your back stop is adequate to stop shots prior to firing.
- Do not use alcohol or drugs before or while handling firearms.
- Do not touch the trigger while the safety is being engaged or disengaged.



Remember, a firearm's manual safety is a mechanical device which can never replace safe firearm handling practices.



Never rely on any mechanical mechanism or safety device to prevent the dangers of careless handling or pointing a firearm in an unsafe direction.



Always point the muzzle of your firearm in a safe direction, regardless of whether the firearm is loaded or unloaded. You should become thoroughly familiar with the function and operation of this firearm and the instructions supplied with it.




Always treat every firearm as if it is loaded. Give your firearm to someone with the action open, and the safety fully rearward to the "ON" (SAFE) position, after you verify the firearm is unloaded. Insist on the same procedure when receiving a firearm from someone else. Learn the location of all the safety features of your firearm and how they operate.




Never place your finger inside the trigger guard or on the trigger unless you intend to fire. When you pull the trigger you must expect the firearm to fire and you must take full responsibility for your actions.




Always wear eye and hearing protection when firing a firearm. Firing a firearm without proper hearing protection can cause hearing loss. The use of eye protection during any type of shooting, disassembly, assembly and cleaning is important to protect your vision.




We specifically disclaim any responsibility for damage or injury whatsoever occurring in connection with, or as a result of, the use of faulty, or non-SAAMI standard, or “remanufactured”, or hand-loaded (reloaded) ammunition. Additionally, we disclaim any responsibility for damage or injury which results from any modifications or changes that are not a part of the firearm as delivered from the factory.




Check to be certain that the correct ammunition has been selected for use. Ensure it is the same gauge, length and type of shotshell as designated on the barrel. Failure to do so could cause death, serious injury or property damage to you or those around you.




Always ensure that barrel and action are clear of obstructions before firing. Firing a blocked firearm could cause death, serious injury, or property damage to you or those around you.




Never force the action if a malfunction occurs. This could cause a shotshell to explode resulting in death, serious injury or property damage to you or those around you.




Should any shotshell fail to fire, keep the muzzle pointed in a safe direction for at least thirty (30) seconds in case the shotshell is a “hangfire” (delayed firing of the shotshell after being struck by the firing pin). Move the safety button fully rearward to the “ON” (SAFE) position. Open the action, extract and/or eject the misfired shotshell. Segregate the misfired shotshell from other ammunition. Do not attempt to refire a misfired shotshell. If the indent from the firing pin is light or absent, contact a qualified gunsmith or the Product Service Center.




Do not drop, or allow anything to strike the firearm because, as with any firearm, an accidental discharge may result.



Learn to clean your firearm thoroughly and make certain no oil, grease or other materials are blocking the barrel. Obstructions of any kind can cause death, serious injury or property damage.



Practice proper firearm maintenance and safety. Make sure all exposed metal surfaces are coated with a thin film of oil, especially after being exposed to damp weather. (See the proper section of this manual for cleaning instructions.) Do not plug the barrel or store in a fabric-lined case, which will absorb lubricants from the firearm. Always store this firearm with the chamber empty and magazine tube unloaded. Failure to do so could result in an unintentional discharge.



Before using the firearm after storage, follow complete instructions stated in this manual for re-familiarization with the firearm. A thorough inspection and function test should be performed before going into the field. Have your firearm periodically checked by a qualified gunsmith.



STATE-BY-STATE WARNINGS

Certain states require, by law, that their own specified warning notices, in larger-than-normal type be conspicuously included by the manufacturer, distributor, or retail dealer with firearms sold in that state. Mossberg International™, Inc. (“Mossberg”) sells its products in compliance with applicable laws and regulations. Because our products may be sold in these states, we include the following:



CALIFORNIA:

Firearms must be handled responsibly and securely stored to prevent access by children and other unauthorized users. California has strict laws pertaining to firearms, and you may be fined or imprisoned if you fail to comply with them. Visit the Web site of the California Attorney General at <https://oag.ca.gov/firearms> for information on firearm laws applicable to you and how you can comply. Prevent child access by always keeping guns locked away and unloaded when not in use. If you keep a loaded firearm where a child obtains and improperly uses it, you may be fined or sent to prison.



ADVERTENICA:

Las armas de fuego deben manipularse de manera responsable y segura para evitar el acceso de niños y otros usuarios no autorizados. California tiene leyes estrictas relacionadas con armas de fuego, y usted puede ser multado o encarcelado si no las cumple. Visite la pagina web del Procurador General de California en <https://oag.ca.gov/firearms> para obtener información sobre las leyes de armas de fuego que le son aplicables y cómo puede cumplirlas. Evite el acceso de niños manteniendo siempre las armas bloqueadas y descargadas cuando no estén en uso. Si mantiene un arma de fuego cargada donde un niño obtiene y la usa indebidamente, se le puede multar o enviar a prisión.



CONNECTICUT:

“UNLAWFUL STORAGE OF A LOADED FIREARM MAY RESULT IN IMPRISONMENT OR FINE.”



**FLORIDA:**

“IT IS UNLAWFUL, AND PUNISHABLE BY IMPRISONMENT AND FINE, FOR ANY ADULT TO STORE OR LEAVE A FIREARM IN ANY PLACE WITHIN THE REACH OR EASY ACCESS OF A MINOR UNDER 18 YEARS OF AGE OR TO KNOWINGLY SELL OR OTHERWISE TRANSFER OWNERSHIP OR POSSESSION OF A FIREARM TO A MINOR OR A PERSON OF UNSOUND MIND.”

**MAINE:**

“ENDANGERING THE WELFARE OF A CHILD IS A CRIME. IF YOU LEAVE A FIREARM AND AMMUNITION WITHIN EASY ACCESS OF A CHILD, YOU MAY BE SUBJECT TO FINE, IMPRISONMENT OR BOTH. KEEP FIREARMS AND AMMUNITION SEPARATE. KEEP FIREARMS AND AMMUNITION LOCKED UP. USE TRIGGER LOCKS.”

**MARYLAND:**

“WARNING: Children can operate firearms which may cause death or serious injury. It is a crime to store or leave a loaded firearm in any location where an individual knew or should have known that an unsupervised minor would gain access to the firearm. Store your firearm responsibly!”

**MASSACHUSETTS:**

“WARNING FROM THE MASSACHUSETTS ATTORNEY GENERAL: This handgun is not equipped with a device that fully blocks use by unauthorized users.

More than 200,000 firearms like this one are stolen from their owners every year in the United States. In addition, there are more than a thousand suicides each year by younger children and teenagers who get access to firearms. Hundreds more die from accidental discharge. It is likely that many more children sustain serious wounds, or inflict such wounds accidentally on others. In order to limit the chance of such misuse, it is imperative that you keep this weapon locked in a

secure place and take other steps necessary to limit the possibility of theft or accident. Failure to take reasonable preventative steps may result in innocent lives being lost, and in some circumstances may result in your liability for these deaths.”

“IT IS UNLAWFUL TO STORE OR KEEP A FIREARM, RIFLE, SHOTGUN OR MACHINE GUN IN ANY PLACE UNLESS THAT WEAPON IS EQUIPPED WITH A TAMPER RESISTANT SAFETY DEVICE OR IS STORED OR KEPT IN A SECURELY LOCKED CONTAINER.”



NEW JERSEY:

“IT IS A CRIMINAL OFFENSE TO LEAVE A LOADED FIREARM WITHIN EASY ACCESS OF A MINOR.”



NEW YORK CITY:

“THE USE OF A LOCKING DEVICE OR SAFETY LOCK IS ONLY ONE ASPECT OF RESPONSIBLE WEAPON STORAGE. ALL WEAPONS SHOULD BE STORED UNLOADED AND LOCKED IN A LOCATION THAT IS BOTH SEPARATE FROM THEIR AMMUNITION AND INACCESSIBLE TO CHILDREN AND ANY OTHER UNAUTHORIZED PERSONS. NEW YORK CITY LAW PROHIBITS, WITH CERTAIN EXCEPTIONS, ANY PERSON FROM ACQUIRING MORE THAN ONE FIREARM, OR MORE THAN ONE RIFLE OR SHOTGUN, WITHIN A 90-DAY PERIOD.”



NORTH CAROLINA:

“IT IS UNLAWFUL TO STORE OR LEAVE A FIREARM THAT CAN BE DISCHARGED IN A MANNER THAT A REASONABLE PERSON SHOULD KNOW IS ACCESSIBLE TO A MINOR.”

Any person who resides in the same premises as a minor, owns or possesses a firearm, and stores or leaves the firearm (i) in a condition that the firearm can be discharged and (ii) in a manner that the person knew or should have known that an unsupervised minor would be able to gain access to the firearm, is guilty of a Class 1 misdemeanor if



a minor gains access to the firearm without the lawful permission of the minor's parents or a person having charge of the minor and the minor:

- (1) Possesses it in violation of G.S. 14-269.2(b);
- (2) Exhibits it in a public place in a careless, angry, or threatening manner;
- (3) Causes personal injury or death with it not in self defense; or
- (4) Uses it in the commission of a crime.



TEXAS:

“IT IS UNLAWFUL TO STORE, TRANSPORT, OR ABANDON AN UNSECURED FIREARM IN A PLACE WHERE CHILDREN ARE LIKELY TO BE AND CAN OBTAIN ACCESS TO THE FIREARM.”



WISCONSIN:

“IF YOU LEAVE A LOADED FIREARM WITHIN THE REACH OR EASY ACCESS OF A CHILD YOU MAY BE FINED OR IMPRISONED OR BOTH IF THE CHILD IMPROPERLY DISCHARGES, POSSESSES, OR EXHIBITS THE FIREARM.”





A note about the warnings and information contained in this manual:

The above warnings are not intended to be exhaustive. We strongly suggest that you check with your local licensed retailer or state police for additional information concerning firearms ownership, or hunting or target shooting rules that may be required by local law or regulation. Since such rules and regulations are subject to change, local authorities are in the best position to advise you on such matters.

TABLE OF CONTENTS


	Page
General Information and Mechanical Characteristics	9
The Mechanical Safety	9-10
Unpacking and Assembling Your Firearm/ Assembly	11-13
Operating Instructions/ Opening the Action.....	13
Loading the Firearm	14
Closing the Action	14
Firing	15-16
Unloading the Firearm	16
To Clear A Malfunction	17
Disassembly	18
Cleaning and Lubrication	19-20
Function Testing	21
Choke Tubes	22-23
Comb Adjustments	23-24
Recoil Pad System Adjustments	24-25
Storage	26
Trigger Lock	27
Service Instructions	28
Warranty Information	29-30
Silver Reserve O/U Parts List	31
Silver Reserve O/U Exploded View	32
Gold Reserve O/U Parts List	33
Gold Reserve O/U Exploded View	34
Recoil Pad System Parts List/Exploded View	35
Notes.....	36-39
<i>The Basic Rules of Safe Firearms Handling</i>	Back Cover



WARNING: This product can expose you to chemicals, including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.



GENERAL INFORMATION AND MECHANICAL CHARACTERISTICS

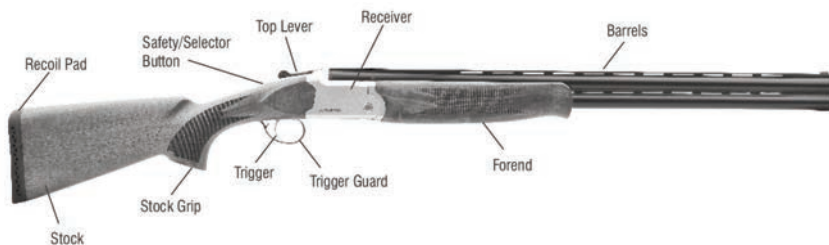

Read and understand this entire manual and its safety warnings before handling this firearm.

Two firing mechanisms are available in your Mossberg International™ Reserve™ series Over/Under shotgun. The box-lock style receiver, houses the firing mechanisms behind a false breech and they are enclosed in a metal frame.

To remove or unload shotshells, your shotgun may have extractors or ejectors. The Silver Reserve models come with extractors. The extractors elevate the head of a live (or fired) shotshell from the chamber so they can be removed manually. The Gold Reserve models come with ejectors. The ejectors eject fired shotshells from the barrels. The ejectors are automatic selective ejectors which mean they eject only fired shotshells.

Mossberg International™ Reserve™ series Over/ Under models come with single selective triggers. A single selective trigger allows you to select which barrel to fire first. The selection is located on the safety. With the safety button in the “ON” (SAFE) position, push the selector to the left side to fire the top barrel first and to the right to fire the bottom barrel first (see The Mechanical Safety and Firing sections of this owner’s manual).

THE MECHANICAL SAFETY

The safety button and barrel selector switch is located on the top rear portion of the receiver (Figure 1a and 1b) and must be manually moved to the desired position by the shooter. The safety button’s position affects both barrels. The barrel selector switch requires the user to move the safety button to the “ON” (SAFE) position before selecting which barrel should be fired first.

To engage the safety button to the “ON” (SAFE) position, the safety button must be moved fully rearward (Figure 1a). The safety button will now expose an “S” located just in front of the safety button. The “S” is a training aid used only to show the direction of the “ON” (SAFE) position and should not be used as an indicator that the safety is “ON” or “OFF.” Moving the safety button fully forward toward the muzzle of the shotgun will place the safety in the “OFF” (FIRE) position (Figure 1b).

With the safety button fully rearward to the “ON” (SAFE) position it can be moved to the left or right depending on which barrel the shooter wants to shoot first. Moving the barrel selector switch to the right will allow the shooter to shoot the bottom barrel first; there will be a visible “U” on the left side of the safety indicating UNDER. Moving the barrel selector switch to the left will allow the shooter to shoot the top barrel first; there will be a visible “O” on the right side of the safety indicating OVER. The barrel selector switch does not need to be switched back to the opposite side to shoot the second barrel.



Remember, a firearm's manual safety is a mechanical device which can never replace safe firearm handling practices.



Never rely on any mechanical mechanism or safety device to prevent the dangers of careless handling or pointing a firearm in an unsafe direction.



Keep your finger off the trigger and outside of the trigger guard until you are aiming at the intended target and have decided to fire. The safety should remain fully rearward to the "ON" (SAFE) position and the firearm unloaded at all times until you are in a place where it is safe to shoot.



The barrel selector switch must be moved fully to either the left or right and must never be set in between these settings as damage to the safety mechanism and/or selector switch can result.



Placing the safety in an intermediate position between the "ON" and "OFF" position can result in the user thinking the firearm is in a SAFE or FIRE position when it is not. Pulling the trigger with the safety in an intermediate position may cause the firearm to fire. Therefore, always move the safety fully to its intended position, "ON" or "OFF", and then check to be sure it is where you want it to be. Never attempt to fire the firearm with the safety only partially engaged, as the firearm may discharge and could result in death, serious injury or property damage.



Figure 1a
"ON" (SAFE)
(REARWARD AS SHOWN)

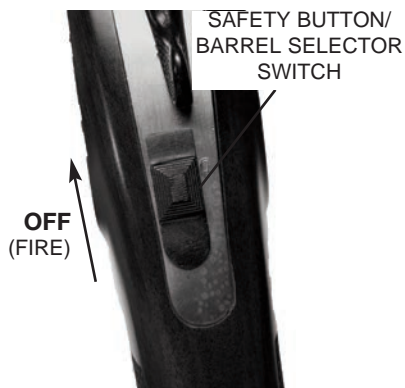


Figure 1b
"OFF" (FIRE)
(FORWARD AS SHOWN)

UNPACKING AND ASSEMBLING YOUR FIREARM



Before assembly and/or performing any work on your firearm, visually and physically inspect the chamber and barrels to be certain that the firearm is completely unloaded. Keep the firearm pointed in a safe direction at all times. Wear eye protection during assembly to protect your eyes from oil spatter. **Ensure there is no presence of ammunition while assembling your firearm.**

When shipping from the factory, the barrel and forearm assemblies are disassembled from the receiver/stock assembly in the shipping carton. Before installing the barrel, visually and physically inspect the barrel and receiver to ensure they are free of any excess oil, grease, or any obstructions. Firing a blocked firearm could cause death, serious injury, or property damage to you or those around you.

ASSEMBLY

MOUNTING THE BARRELS TO THE STOCK/RECEIVER ASSEMBLY

- To assemble the barrels to the stock/receiver assembly you must first remove the forearm. Locate the latch on the underside of the forearm. To remove the forearm, lift the forearm latch and pull the forearm away from the barrels (Figure 2).

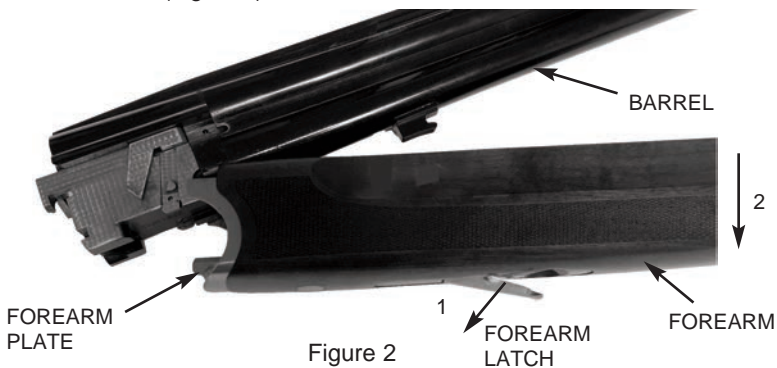


Figure 2

- Apply a small amount of high quality lubricant to all surfaces on both sides marked with a red arrow (Figure 3).



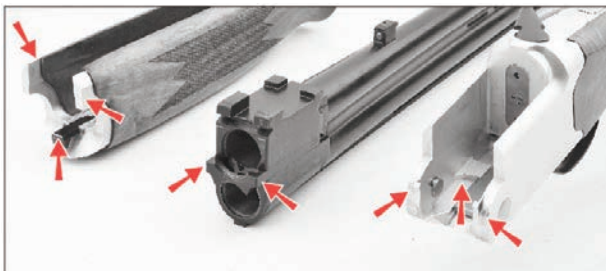


Figure 3


- Take the stock/receiver assembly and make certain that the safety button is fully rearward in the "ON" (SAFE) position (Figure 1a).
- To assemble the barrels to the receiver, the top lever must be locked in the extreme right-hand position. Move the lever to the right until it stops and stays in the extreme right-hand position (Figure 4).

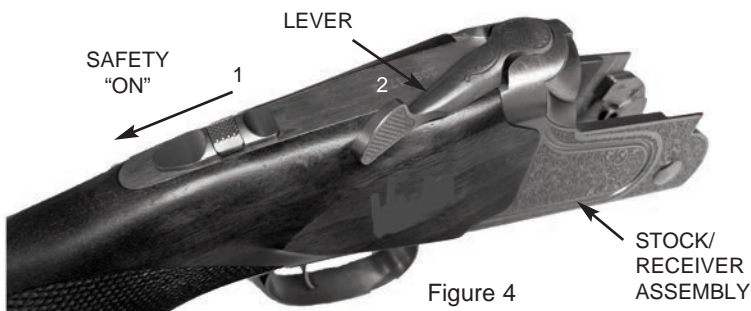

- The stock/receiver assembly is now ready to accept the barrels. To assemble the barrels to the stock/receiver assembly, locate the half-round cuts in the barrel lug (Figure 5) and the round hinge pins inside of the receiver. With the barrels held approximately 45 degrees to the stock/receiver assembly, mate the round cuts of the barrels to pivot on the round receiver hinge pins.

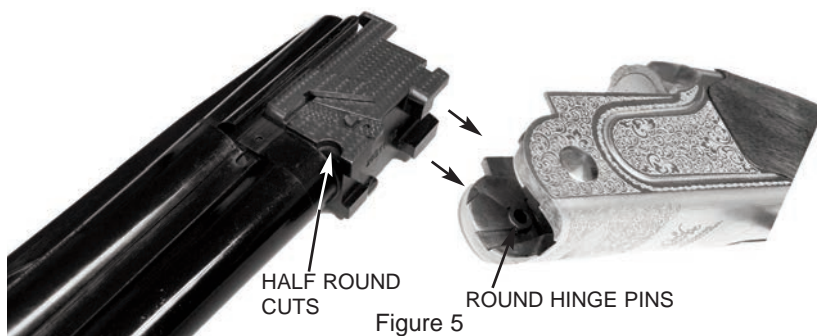

- Swing the barrels up firmly (without forcing) to the fully closed position. The top lever will snap to a centered position. The barreled action is now ready to receive the forearm.
- To install the forearm to the barreled action, mate the rounded surfaces of the forearm plate to the receiver and swing the forearm up firmly against the underside of the barrel (Figure 6). Keeping hands away from the forearm latch, apply pressure to the underside of the forearm until the latch snaps into its "locked" position. The firearm is now fully assembled.

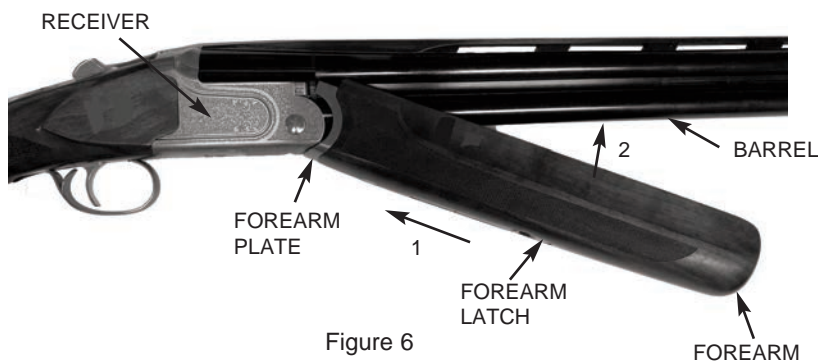

8. On some models, you can adjust the tightness of the forearm latch by tightening the set screw on the barrel (Figure 7a and 7b).
9. With the allen key provided with your firearm, loosen the screw shown in Figure 7b.
10. Adjust the tightness of your forearm latch by adjusting the screw shown in Figure 7a. Once adjusted to your liking, tighten up the screw shown in Figure 7b.

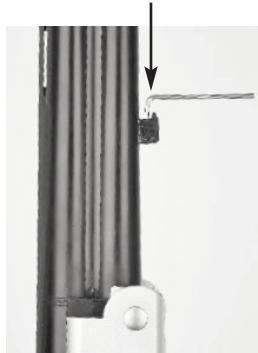


Figure 7a

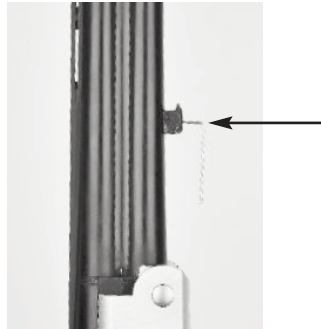


Figure 7b



After performing any work on your firearm such as cleaning, disassembly, or installation of any accessory, check your firearm for proper functioning before firing any live ammunition (See Function Testing section of this owner's manual).

OPERATING INSTRUCTIONS

OPENING THE ACTION

1. With the firearm pointed in a safe direction, open the firearm by moving the top lever fully to the right, and assist the barrel swing with your hand by pulling down on the forearm (Figure 8).

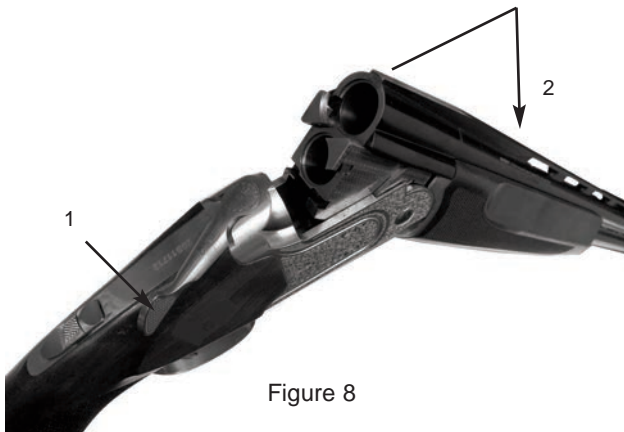


Figure 8

LOADING THE FIREARM



WARNING: This product can expose you to chemicals, including lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.



Before loading, move the safety button fully rearward to the "ON" (SAFE) position (Figure 1a).



Before loading, visually and physically inspect the chamber and bore of the barrel for any obstruction, excessive oil or grease (the chamber is the rearmost part of the inside of the barrel). Obstructions of any kind could cause death, serious injury, or property damage to you or those around you.



During loading, never allow fingers or any objects to contact the trigger. Keep the muzzle pointed in a safe direction at all times.



Do not load firearm until ready to use! Unload firearm when shooting has been completed! The safety button should always be fully rearward in the "ON" (SAFE) position whether or not the firearm is loaded.



Check to be certain that the correct ammunition has been selected for use. Ensure it is the same gauge, length and type of shotshell as designated on the barrel. Failure to do so could cause death, serious injury or property damage to you or those around you.



Always inspect your ammunition before using it. Never use dirty, corroded or damaged ammunition. A shotshell failure could cause death, serious injury or property damage to you or those around you.



Use only new commercially manufactured ammunition which is in strict accordance with the standards of the Sporting Arms and Ammunition Manufacturers' Institute (SAAMI). If you are uncertain, contact your ammunition supplier for verification.

1. Open the firearm by moving the top lever fully to the right, and "break open" the action by pulling down on the forearm (Figure 8).
2. Take the proper gauge shotshells and insert them into the upper or lower barrel of your choice or into both barrels for two shots.

CLOSING THE ACTION

1. To close the action, swing the barrels up firmly (without forcing) to the fully closed position. The top lever will snap to a centered position.



If the firearm does not close readily, **do not force it**. Refer to the Disassembly and Reassembly sections of this owner's manual. It is possible your shotgun is not assembled correctly.



The firearm is now loaded and will fire if the safety is moved to the "OFF" (FIRE) position and the trigger is pulled! The safety button (Figure 1a) should be kept fully rearward in the "ON" (SAFE) position until you are on target and have actually decided to fire. Keep the muzzle pointed in a safe direction at all times, and your fingers and any other objects away from the trigger area.

FIRING

Use of this product, including discharging firearms in poorly ventilated areas, cleaning firearms, or handling ammunition, can result in exposure to chemicals, including lead, which are known to the state of California to cause serious physical injury, including cancer, birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.



Have adequate ventilation at all times and wash hands thoroughly after exposure.



Always wear eye and hearing protection when firing a firearm. Firing a firearm without proper hearing protection can cause hearing loss. The use of eye protection during any type of shooting, disassembly, assembly and cleaning is important to protect your vision.



Be sure of your target and beyond. Make sure that your back stop is adequate to stop shots prior to firing.



When you pull the trigger you must expect the firearm to fire and you must take full responsibility for your actions.



Always ensure that barrel and action are clear of obstructions before firing. Firing a blocked firearm could cause death, serious injury, or property damage to you or those around you.



Do not attempt to remove a bore obstruction using a blank shotshell, or a shell from which the shot charge has been removed, or by shooting it out with another shotshell.



Barrel Selectors - The "O" (over) and the "U" (under) located next to the barrel selector switch are for training purposes only. The barrel selector switch must be moved fully to either the left or right and must never be set in between these settings as damage to the safety mechanism and/or selector switch can result. See Mechanical Safety section of this owner's manual. The safety selector may look different depending on your model, see Figures 9a and 9b.

The barrel selector is integral to the safety button. The selector allows you to choose the barrel that will fire first. To select the barrel that you will fire first, move the safety button fully to the rear "ON" (SAFE) position and fully to the left to fire the top barrel (selector exposes the "O") or fully to the right to fire the lower barrel (selector exposes the "U") (Figures 9a and 9b).

1. With the muzzle pointed in a safe direction and the firearm held in the proper firing position, move the safety button fully forward to the "OFF" (FIRE) position (Figure 1b).
2. Pull the trigger through its full travel to the rear to fire the firearm. This will discharge the shotshell. If both chambers are loaded, pull the trigger a second time to fire the other barrel.



Figure 9a
(SILVER RESERVE
MODELS)



Figure 9b
(GOLD RESERVE
MODELS)



Should any shotshell fail to fire, keep the muzzle pointed in a safe direction for at least thirty (30) seconds in case the shotshell is a “hangfire” (delayed firing of the shotshell after being struck by the firing pin.) Move the safety button fully rearward to the “ON” (SAFE) position. Open the action extract and/or eject the misfired shotshell. Segregate the misfired shotshell from other ammunition. Do not attempt to refire a misfired shotshell. If the indent from the firing pin is light or absent, contact a qualified gunsmith or the Product Service Center.



If at any time during firing, the sound of any shotshell is noticeably louder or softer than previous shotshells fired, STOP! Do not load or fire additional shotshells. Move the safety button fully rearward to the “ON” (SAFE) position. Keep the muzzle pointed in a safe direction and, while keeping the opening of the firearm turned away from your face (to protect your eyes in the event a defective shotshell explodes), safely unload your firearm as instructed in the Unloading the Firearm section of this owner’s manual. Remove the barrels as instructed in the Disassembly section of this owner’s manual. Inspect the barrels and firearm for possible damage or obstructions to the chamber or bore. Firing the firearm with a bore obstruction can cause damage to the firearm and could cause death, serious injury, or property damage to you or those around you.



Some brands of ammunition may cause difficulty in extracting spent shotshell cases from the chamber. If this situation occurs, thoroughly clean the chamber with solvent (refer to Cleaning And Lubrication section of this owner’s manual). If this condition persists, we recommend you change to another brand of ammunition.



Use only new commercially manufactured ammunition which are in strict accordance with the standards of the Sporting Arms and Ammunition Manufacturers’ Institute (SAAMI). If you are uncertain, contact your ammunition supplier for verification.

UNLOADING THE FIREARM



WARNING: This product can expose you to chemicals, including lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.



Set the safety button fully rearward to the “ON” (SAFE) position. During unloading, never allow your fingers or any other object to contact the trigger. **KEEP THE MUZZLE POINTED IN A SAFE DIRECTION AT ALL TIMES.**

1. Open the action by moving the top lever fully to the right, and assist the barrel swing with your hand by pulling down on the forearm (Figure 8).

NOTE: Fired shells will be ejected and unfired shells will be elevated above the chamber on Gold Reserve models with automatic selective ejectors. Silver Reserve models with extractors will only elevate both fired and unfired shells above the chamber and need to be removed manually.



After unloading always visually and physically inspect the chamber, and barrels to be certain all of the shotshells have been removed, and the firearm is completely unloaded!



TO CLEAR A MALFUNCTION

1. Always keep the muzzle pointed in a safe direction. Keep your finger off the trigger and outside the trigger guard. Ensure the safety is fully rearward in the “**ON**” (**SAFE**) position, and that you are wearing proper eye and hearing protection.
2. Open the action and unload the firearm (Refer to Opening the Action and Unloading the Firearm sections of this owner’s manual).
3. Visually and physically inspect the chamber, and barrels to be certain the firearm is unloaded, and that the shotshell that was stuck has been ejected or manually removed during this process. If the shotshell has ejected and the barrel is empty, then properly clean the firearm as instructed in this manual and try different ammunition. You may now resume normal operation. If you still experience a malfunction, contact a qualified gunsmith or the Product Service Center.
4. If a stuck shotshell is in the chamber and does not eject or you can not manually remove it after the above steps, or you experience a possible bore obstruction then do not attempt to close the action. Remove the barrel (refer to the Disassembly section of this owner’s manual). Contact a qualified gunsmith so that the gunsmith may remove the shotshell and/or bore obstruction and verify there is no damage to the firearm.



Do not attempt to remove a bore obstruction using a blank shotshell, or a shell from which the shot charge has been removed, or by shooting it out with another shotshell.



Never force the action if a malfunction occurs. This could cause a shotshell to explode resulting in death, serious injury or property damage to you or those around you.



Do not use a metal tool to attempt to remove an unfired shotshell because it could ignite the primer and fire or rupture sending fragments, with sufficient force that could cause death, serious injury or property damage to you or those around you.



Never pull the trigger if the barrels do not fully close to prevent a possible out of battery firing. If this happens, unload the firearm (refer to Unloading the Firearm section of this owner’s manual). Examine the shotshell that was in the chamber and check the chamber to ensure that there are no obstructions or debris in it.



DISASSEMBLY



Before disassembling the firearm, set the safety button fully rearward to the "ON" (SAFE) position and keep the muzzle pointed in a safe direction. Open the action, visually and physically check the chamber, and barrels to ensure the firearm is completely unloaded (Refer to the Unloading The Firearm section of this owner's manual).

1. To disassemble the barrels from the stock/receiver assembly you must first remove the forearm. To remove the forearm, lift the forearm latch and pull the forearm away from the barrels (Figure 10).

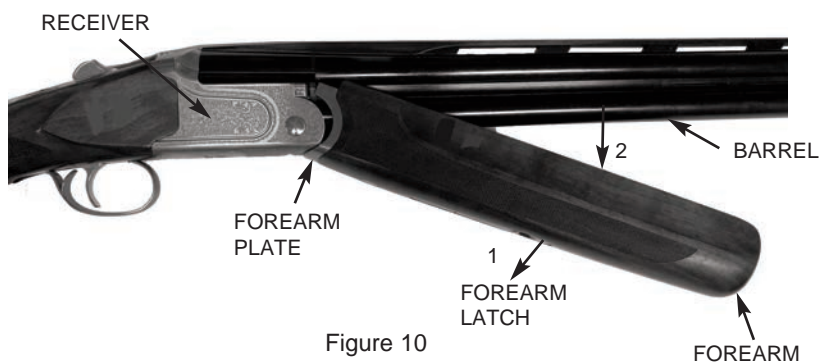


Figure 10

2. Move the top lever fully to the right, and assist the barrel swing with your hand by pulling down the barrels and lifting up to disengage the barrels from the round hinge pins in the stock/receiver assembly (Figure 11).

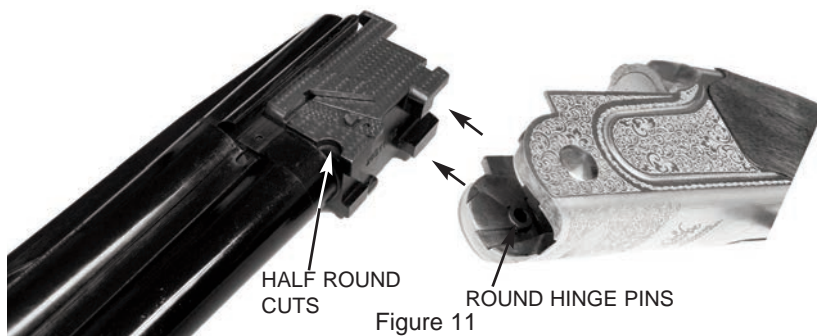


Figure 11



Field disassembly is now complete. Further disassembly should only be performed by a qualified gunsmith or the Product Service Center. Improper disassembly or reassembly, alterations, modifications and/or repairs by a party other than Mossberg could compromise the safety or performance of your firearm, and could result in death, serious injury, or property damage to you or others and will void your warranty.

CLEANING AND LUBRICATION

With proper maintenance and care, your firearm will provide you with years of dependable service. Your firearm should be inspected and cleaned periodically to ensure that it remains in good condition. Clean and lubricate your firearm as soon as possible after use. This is especially important if your firearm has been exposed to moisture. For maximum performance and continued satisfaction with your firearm, periodic cleaning and lubrication are essential. Wear eye protection during cleaning.

To clean and lubricate your firearm, first disassemble it (refer to the Disassembly section of this owner's manual). Use the instructions and equipment provided with a quality firearm cleaning kit as well as the instructions in this owner's manual.



Always be sure that the firearm is unloaded (refer to the Unloading section of this owner's manual) by visually and physically checking the chamber, and barrels before cleaning your firearm. Be sure that the safety is fully rearward to the "ON" (SAFE) position. Wear eye protection during cleaning and assembly to protect your eyes from oil splatter and spring loaded components.



Always make sure that no ammunition is located in the area where you clean your firearm. Cleaner-lubricant-preservative can affect the primer and powder in ammunition and cause it to malfunction. This could result in a shotshell being pushed into the barrel of your firearm and getting stuck. Firing another round with a shotshell stuck in the barrel could cause the barrel to burst and result in death, serious injury, or property damage to you or those around you.



WARNING: This product can expose you to chemicals, including lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

Normal use requires only that the mechanisms be free of excessive shooting residue. Very little lubrication other than a light oiling of internal and external surfaces to prevent rust is needed.

To ensure optimum performance, Mossberg recommends thorough cleaning of your firearm after every 200 rounds. However, unusually dusty, dirty, or harsh weather conditions, or use of ammunition which leaves significant powder residue may require more frequent cleaning.

If the firearm is to be stored for a long period of time, it should be thoroughly cleaned and oiled. Do not plug the barrel or store in a fabric-lined case that will absorb lubricant from the firearm, as this may result in corrosion to the unprotected metal surfaces.

Over-lubrication should be avoided during below freezing conditions. Many lubricants thicken in low temperatures which could affect the operation of the firearm. Exposure to unfavorable weather or moisture from condensation requires additional care to prevent corrosion to the firearm.

1. Make sure the broad, polished, finely fitted mated surface of the breech block and receiver is especially clean with an appropriate firearm cleaning solvent and lightly lubricated with firearm oil. Do not squirt or pour oil into the inside mechanism because it may hinder proper functioning.
2. Run an oil patch through the bore with a cleaning rod starting from the breech end. To prevent leading, use a cleaning solvent and brass brush to clean the bore periodically. Follow this cleaning with one or two clean oil patches.



3. After extended periods of heavy use, it is recommended your firearm be taken to a qualified gunsmith to have the action disassembled for professional cleaning and lubrication.

NOTE: If your firearm is equipped with choke tubes, do not use a brass brush to clean the barrels without having a choke tube installed.

4. Barrels that utilize choke tubes must also have the choke tubes removed to clean and oil the threads inside the barrel and the choke tubes themselves. This will protect the threads and prevent dirt build up that can cause the tubes to become difficult to remove. **Do not over-tighten the choke tubes.**



Never fire your firearm without choke tubes properly installed. Failure to do so will damage the precision threads on the inside of the barrel. Firing the firearm with loose choke tubes may lead to damage to the choke tube and barrel, as well as serious injury to you or those around you.



Make sure the barrel is free of obstructions and excessive lubricant after cleaning. Be sure not to leave cleaning patches, excessive oil or grease in the bore. Obstructions of any kind can cause damage to the firearm and could cause death, serious injury, or property damage to you or those around you.

5. Reassemble your firearm after cleaning and lubrication, see the Assembly section of this owner's manual.



After performing any work on your firearm such as cleaning, disassembly, or installation of any accessory, check your firearm for proper functioning before firing any live ammunition (See Function Testing section of this owner's manual).



FUNCTION TESTING



AFTER PERFORMING ANY WORK ON YOUR FIREARM SUCH AS CLEANING, DISASSEMBLY, OR INSTALLATION OF ANY ACCESSORY, CHECK YOUR FIREARM FOR PROPER FUNCTIONING BEFORE USING AND/OR FIRING ANY LIVE AMMUNITION.



Set the safety button fully rearward to the "ON" (SAFE) position and keep the muzzle pointed in a safe direction. Open the action, visually and physically check the chamber, and barrels to ensure the firearm is completely unloaded (Refer to the Unloading section of this owner's manual).



KEEP THE MUZZLE POINTED IN A SAFE DIRECTION AT ALL TIMES THROUGHOUT THE FOLLOWING STEPS! FAILURE TO DO SO COULD CAUSE DEATH, SERIOUS INJURY, OR PROPERTY DAMAGE TO YOU OR THOSE AROUND YOU IF THE FIREARM HAS NOT BEEN PROPERLY UNLOADED AND FIRES WHILE YOU ARE TESTING ITS FUNCTION!

1. Open the firearm by moving the top lever fully to the right, and assist the barrel swing with your hand by pulling down on the forearm (Figure 8).
2. Close the action. Swing the barrels up firmly (without forcing) to the fully closed position. The top lever will snap to a centered position.

NOTE: If the firearm does not close readily, **do not force it**. Refer to the Disassembly and Assembly sections of this Owner's Manual. It is possible your shotgun is not assembled correctly.

3. Leave the safety button fully rearward in the "ON" (SAFE) position. Pull the trigger fully rearward. The hammer should not fall (NO FIRE).
4. Remove your finger from the trigger. Move the safety button to the "OFF" (FIRE) position. The hammer should not fall (NO FIRE).
5. Leave the safety button in the "OFF" (FIRE) position. Pull the trigger fully rearward. The first hammer should fall (FIRE). Release the trigger and pull the trigger fully rearward a second time. The second hammer should fall (FIRE).
6. Open the firearm by moving the top lever fully to the right, and assist the barrel swing with your hand by pulling down on the forearm (Figure 8). Move the safety button fully rearward to the "ON" (SAFE) position.



IF YOUR FIREARM DOES NOT PERFORM AS DESCRIBED IN ANY OF THE ABOVE STEPS, CONTACT THE PRODUCT SERVICE CENTER IMMEDIATELY. DO NOT ATTEMPT TO LOAD OR USE THE FIREARM.



Firearms are complex mechanisms. Any modification, alteration, or improper fitting of parts may result in a dangerous malfunction, damage to the firearm, and could cause death, serious injury or property damage to you or those around you. The firearm's owner must accept full responsibility for the correct reassembly and functioning of the firearm after any disassembly or replacement of parts.

CHOKE TUBES



Before removing or installing any choke tube, move the safety button fully rearward in the "ON" (SAFE) position and keep the muzzle pointed in a safe direction. Open the action, visually and physically check the chamber, and barrels to be certain the firearm is unloaded (Refer to the Unloading The Firearm section of this owner's manual).



Do not use bent or deformed choke tubes as these may result in tube or barrel damage upon firing which may cause serious personal injury to you or those around you. Inspect choke tubes periodically to insure they are properly installed and in good condition. Pay special attention to the threaded end of the choke tube to be certain it is not deformed or dented.



Never fire the shotgun without a choke tube properly installed. Failure to do so will damage the precision threads on the inside of the barrel. Firing the shotgun with loose choke tubes may lead to damage to the choke tube and barrel, as well as serious personal injury to you or those around you.

The choke controls how open or tight the pattern of the shot will be. The chart below lists the chokes available (from open to tight), and the indicating notches that indicate the specific choke.

	SKEET	IC	M	IM	F
CHOKE TUBE					

Indicating Notches

CARE AND CLEANING: The precision threads on your choke tube should be kept clean and lightly oiled at all times.

During cleaning of the barrel, be certain a choke tube is properly installed. This will avoid residue build-up on threads. See Cleaning and Lubrication section of this owner's manual.

These choke tubes are designed for use with Lead, Steel, and other non-toxic shot. Each durable tube is clearly marked, as a guide, with the pattern it will produce, see chart above.

TO REMOVE CHOKE TUBE: Loosen with choke wrench provided, turning it counterclockwise. When the choke tube is loosened, remove it completely with your fingers. Place choke tube on a clean, dry surface.

TO INSTALL CHOKE TUBE: Screw the tube clockwise into the barrel by hand and then tighten the tube until snug with the choke wrench. **Do not use excessive force or over-tighten when installing.**



Choke tube tightness should be checked periodically to avoid damage to the choke, firearm, and to prevent injury to you or those around you.

Lead, steel and other non-toxic shot patterns will vary substantially depending on the shell length, shot size, brand of ammunition, and the individual barrel. The shooter is urged to conduct pattern tests before field use.



Never shoot steel shot loads in a full choked barrel or an improved modified choked barrel. To do so could cause the barrel to burst and result in death, serious injury, or property damage to you or those around you.

In general, steel shot fired with a modified choke will produce the equivalent of a lead full choke pattern. This will be true of all steel shot sized up to and including No. 2. The improved cylinder chokes will produce the equivalent of a (lead) modified pattern.

All steel shot sized larger than No. 2, and including special sized such as F, T, etc., should be used only with improved cylinder chokes. These steel shot sizes, when used in an improved cylinder choke, will produce equivalent to (lead) full choke patterns. The cylinder choke or bore will produce the equivalent of a modified (lead) pattern.

For additional information concerning the use of steel shot contact the ammunition manufacturer of the ammunition you are using.



After performing any work on your firearm such as cleaning, disassembly, or installation of any accessory, check your firearm for proper functioning before firing any live ammunition (See Function Testing section of this owner's manual).

COMB ADJUSTMENTS



Before performing any comb adjustments on your firearm, move the safety button fully rearward in the "ON" (SAFE) position and keep the muzzle pointed in a safe direction. Open the action, visually and physically check the chamber, and barrels to be certain the firearm is unloaded (Refer to the Unloading section of this owners manual).

Comb adjustments can be made for both cast on and cast off as well as for drop at comb. **CAST ON AND CAST OFF ADJUSTMENTS ARE A MATTER OF TRIAL AND ERROR.** Use the silver allen wrench provided in the choke tube box for comb adjustments.

1. To adjust comb for cast use the silver allen wrench to remove the comb from the stock. Insert the allen wrench in each of the holes and loosen the set screws. Approximately three full turns counterclockwise will loosen the set screws enough to remove the comb (Figure 12).
2. Once the comb is removed, continue to use the silver allen wrench to adjust the posts position at the top of each post to obtain the desired cast. Adjust both posts clockwise to acquire CAST OFF which is desired by right-handed shooters. Adjust both posts counter-clockwise to acquire CAST ON which is desired by left-handed shooters (Figure 13).

NOTE: A combination of moves might need to be made to obtain the desired position of the shooter.



Figure 12

Figure 13

To adjust for drop at comb, spacers have been provided to assist with adjustments which can be found in the choke tube box. Place a spacer around each post gradually to obtain and maintain the desired drop at comb.

3. To decrease the drop at comb, comb must be raised to the desired height. To increase drop at comb, comb must be lowered to desired height. This position may or may not require any spacers. Use the spacers provided to obtain the desired position.
4. When the desired cast and drop at comb have been obtained, replace the comb. Turn the two set screws in the comb clockwise to tighten. **Do not over-tighten.**



After performing any comb adjustments on your firearm, check your firearm for proper functioning before firing any live ammunition (See Function Testing section of this owner's manual).

RECOIL PAD SYSTEM ADJUSTMENTS



Before performing any recoil pad system adjustments on your firearm, move the safety button fully rearward in the "ON" (SAFE) position and keep the muzzle pointed in a safe direction. Open the action, visually and physically check the chamber, and barrels to be certain the firearm is unloaded (Refer to the Unloading section of this owners manual).

Recoil pad system adjustments can be made to lower or raise your recoil pad as well as for pitch. Use the black allen wrench provided in the choke tube box for recoil pad system adjustments.

1. To remove the recoil pad from the stock, insert the black allen wrench provided with the firearm into the left side of the lower plate of the recoil pad. Loosen the screws counter-clockwise, roughly two turns. **Do not remove screws completely.** This will allow you to slide the recoil pad all of the way out of the stock for greater ease of adjustments (Figure 14).

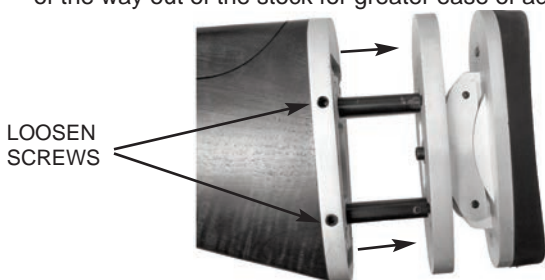


Figure 14

2. To lower the recoil pad use the same allen wrench and loosen the middle screw (Figure 15). Once this is done you can lower and raise the recoil pad to the height that is desired. After adjustment, tighten the screw. **Do not over-tighten.**
3. To adjust the pitch on the recoil pad use the same allen wrench to loosen the top and bottom screws as shown in Figure 16. Once these are loosened you will be able to adjust the pitch of the recoil pad to the desired position.

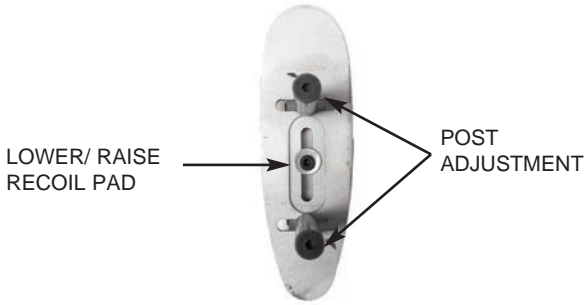







Figure 15



Figure 16

4. By loosening the bottom screw and tightening the top screw you will be able to adjust for drop at toe. By tightening the bottom screw and loosening the top screw you will be able to adjust for the drop at heel (Figure 16).
5. To change the cant of the recoil pad use the same black allen wrench to loosen the screws on the bottom of each post (Figure 15). By loosening these screws you can slide the posts left or right. By sliding the top post to the left and the bottom post to the right, the cant of the top of the recoil pad will be to the right. By sliding the top post to the right and the bottom post to the left, the cant of the top of the recoil pad will be to the left and the bottom of the recoil pad will be to the right offsetting each other. By sliding both posts to the left will shift the recoil pad to the right. By sliding both posts to the right will shift the recoil pad to the left. Once the desired position is found, tighten both screws by turning clockwise on the bottom of each post. **Do not over-tighten.**
6. To adjust the length of pull, use the spacers that were included with the firearm. Each spacer has been engraved for easy indication as to how wide they are. Included are two quarter-inch spacers, two half-inch spacers, and two one-inch spacers. The spacers can be installed by sliding them over the recoil pad posts. This must be done after the recoil pad has been removed from the stock. To install the recoil pad to the stock, slide each post into the slots on the stock plate. Once installed use the same allen wrench to tighten both screws by turning clockwise on the left side of the lower plate. **Do not over-tighten.**

STORAGE

-  Always store this firearm securely and unloaded. Failure to do so could result in an unintentional discharge.
-  Use the locking device supplied with the firearm for storage. The use of a locking device or trigger lock is only one aspect of responsible firearms storage (see Trigger Lock section of this owner's manual).
-  While locking devices are an important aid to security measures, they are not a substitute for safe firearm handling and proper storage. Mechanical and locking devices can fail and/or be bypassed with enough time, knowledge, determination and equipment.
-  Keep out of reach of children. Firearms should be stored unloaded in a location that is secure and inaccessible to children and any other unauthorized person, with ammunition locked securely in a different location.
-  Never act in an irresponsible manner or ignore any established rules of safety when using or storing firearms.

After unloading, cleaning and lubrication and function testing this firearm as instructed in this owner's manual, follow these instructions on storage to properly and securely store your firearm:

1. Select a safe and secure location for storage, one that conforms to the instructions and recommendations of this manual and all applicable laws, including but not limited to use of the trigger lock provided with this firearm (see Trigger Lock section of this owner's manual).
2. If possible, do not store the firearm in the factory-supplied case as moisture may collect and cause damage.
3. If you plan on storing the firearm for extended periods of time between uses, clean and lubricate the firearm per instructions in this manual every six months (see Cleaning and Lubrication section of this owner's manual).

TRIGGER LOCK



Before installing the trigger lock, move the safety button fully rearward to the "ON" (SAFE) position. Visually and physically inspect the chamber, and barrels to be certain the firearm is completely unloaded. Keep the muzzle pointed in a safe direction at all times.



Store your trigger lock keys in a separate location.

To install the trigger lock:

1. Unlock the trigger lock with the key provided, insert the key into the trigger lock and turn clockwise. Pull the two halves of the lock apart.
2. Position the right half of the trigger lock on the right side of the firearm trigger guard (Figure 17).



Figure 17



Figure 18

3. Insert the left half of the trigger lock (the half with the ratchet post and key) through the left side of the trigger guard with the ratchet post ideally behind the trigger. Insert the ratchet post into the right half of the trigger lock.
4. Press both halves of the trigger lock together as tight as possible until there is little-to-no movement (Figure 18).
5. To lock, turn the key counterclockwise and remove.
6. Inspect the trigger lock for fit and function. Pull on the trigger lock halves to make sure they are tight and locked. If there is excessive movement, repeat steps 1-5.
7. Store the key in a separate and secure location away from the locked firearm



Ensure the trigger lock is installed correctly as shown in Figure 18. Improper installation of the trigger lock or storage of your firearm could cause, death, serious injury or property damage to you or those around you.

SERVICE INSTRUCTIONS

Should your firearm or any component of your firearm require service, ship your entire firearm (please do not send components only), via your chosen carrier, postage paid (we do not accept C.O.D. shipments), following these instructions:

Repairs in the U.S.

For repair service, please start the process by filling out our Service Request Form online at <http://www.mossberg.com/service> prior to shipping your firearm.



- **Make absolutely certain your firearm is unloaded.**
- **Do not send ammunition with your firearm.**
- Remove all accessories from your firearm such as scopes, slings, mounts, etc.
- Ship your firearm in a suitable container, packaging it securely to prevent parts from shifting and/or damage during shipping.
- Include a note with a clear description of the service you wish us to perform, your complete return shipping address (no P.O. boxes please), your daytime telephone number and your e-mail address (if available).
- It is advisable to place your correspondence inside your shipping container when shipping.

SHIPPING ADDRESS

Mossberg Product Service Center
1001 Industrial Blvd.
Eagle Pass, TX 78852

If you have any service related questions, please contact the Product Service Center at (800) 363-3555 or service@mossberg.com

TO ORDER PARTS

To order parts from the Product Service Center, you can fax, phone, email, or mail your order to one of the below numbers/addresses.

Fax Number: (203) 230-5420
Phone Number: (800) 363-3555
E-mail Address: service@mossberg.com
Mailing Address: Mossberg Product Service Center
1001 Industrial Blvd.
Eagle Pass, TX 78852
Attn: Order Department

Please provide your name, address, city, state, zip, your daytime phone number and e-mail (if available). The Product Service Center will need the Model #, Serial #, Gauge/Caliber, Finish, Item #, and Part Name. There is a \$7.50 (U.S.) minimum parts order charge. Most major credit cards, money orders, and bank drafts are accepted.

Service outside of the U.S.A.

For Mossberg firearm parts and service requirements outside of the United States, customers are requested to contact the closest Mossberg stocking dealer/distributor.

MOSSBERG® INTERNATIONAL™ WARRANTY
MOSSBERG OVER/UNDER SHOTGUN
ONE (1) YEAR LIMITED WARRANTY

Limited Warranty: Mossberg International™, Inc. ("Mossberg") warrants to you, the original retail purchaser of a new Mossberg International™ firearm (the "Mossberg firearm"), that the Mossberg firearm will be free of defects in material or manufacture for a period of one (1) year from the date of your purchase of the new Mossberg firearm (the "Warranty Period") in the United States or Canada. This is the only express warranty on the Mossberg firearm.

MOSSBERG MAKES NO OTHER WARRANTIES OF ANY KIND OR CONDITIONS, INCLUDING, BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

The implied warranties of merchantability and fitness for a particular purpose, and all other warranties not expressly made herein are expressly disclaimed. All disclaimers and limitations of liability shall still apply even if the limited remedy of repair or replacement fails of its essential purpose. There are no warranties which extend beyond the description on the face hereof. Any action against Mossberg and/or any Mossberg affiliates based on an alleged breach of this limited warranty must be brought within one (1) year of the claimed breach.

This Limited Warranty gives you specific legal rights, and you may have other rights that vary from State to State.

Purchaser's Remedy: During the Warranty Period, Mossberg will, at its sole option and discretion, (1) repair the Mossberg firearm or any part thereof that, upon examination and testing by Mossberg, does not conform to the Limited Warranty without charge to you for parts or labor, or (2) replace the Mossberg firearm with a new or similar model. THIS REMEDY SHALL BE YOUR EXCLUSIVE AND SOLE REMEDY FOR ANY BREACH OF WARRANTY. MOSSBERG SHALL NOT BE RESPONSIBLE FOR ANY OTHER EXPENSES, LOSSES OR INCONVENIENCE THAT YOU MAY SUSTAIN AS A RESULT OF THE PURCHASE, USE, MALFUNCTION OR DEFECTIVE CONDITION OF THE MOSSBERG FIREARM. Mossberg reserves the right to inspect, examine and/or test the Mossberg firearm to assess any claim made under the Limited Warranty.

EXCLUSIONS: THIS WARRANTY DOES NOT COVER THE SURFACE FINISH OF ANY MATERIAL, THE COSMETIC APPEARANCE OF THE MOSSBERG FIREARM OR ANY DAMAGE CAUSED BY:

- (1) NORMAL WEAR AND TEAR;
- (2) FAILURE TO PERFORM PROPER CARE AND MAINTENANCE;
- (3) ACCIDENTS, ABUSE OR NEGLIGENCE;
- (4) BARREL OR BORE OBSTRUCTIONS;
- (5) FAILURE TO FOLLOW THE INSTRUCTIONS AND WARNINGS THAT ACCOMPANY THE MOSSBERG FIREARM; OR
- (6) THE USE OF DEFECTIVE, NON-SAAMI STANDARD, REMANUFACTURED, HAND-LOADED, AND/OR RELOADED AMMUNITION.
- (7) THE USE OF INCORRECT AMMUNITION, EX. WRONG GAUGE
- (8) DISASSEMBLY BEYOND THE INSTRUCTIONS OF THIS MANUAL;
- (9) CRIMINAL, NEGLIGENT OR IMPROPER USE;
- (10) OTHER FACTORS BEYOND MOSSBERG'S CONTROL.

IN ADDITION, ANY UNAUTHORIZED REPAIRS, ALTERATIONS OR MODIFICATIONS TO THE MOSSBERG FIREARM WILL AUTOMATICALLY VOID THE LIMITED WARRANTY.

(CONTINUED ON NEXT PAGE)



LIMITATION OF DAMAGES: EXCEPT WHERE PROHIBITED BY LAW, MOSSBERG AND AFFILIATES, OFFICERS, DIRECTORS, SHAREHOLDERS, EMPLOYEES, OR AGENTS WILL NOT BE LIABLE FOR ANY LOSS OR DAMAGE WHATSOEVER ARISING FROM THE USE OF THIS MOSSBERG FIREARM, WHETHER DIRECT, INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL OR PUNITIVE, REGARDLESS OF THE LEGAL THEORY ASSERTED, INCLUDING CONTRACT, WARRANTY, NEGLIGENCE, OR STRICT LIABILITY. SOME JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, OR THE EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

Warranty Service: To obtain service under this Limited Warranty, you must follow the instructions found in the "Service Instructions" section of the Owner's Manual and return the Mossberg firearm to the authorized Product Service Center. You are responsible for all shipping costs to the Product Service Center. Mossberg will not accept COD shipments of any Mossberg firearm for service. After repair or replacement under warranty, the Mossberg firearm or a similar model will be returned to you, return postage paid by Mossberg. If we replace the Mossberg firearm, we will keep the firearm that you returned to Mossberg, and you hereby relinquish any and all rights in such returned firearm.

Modification of Warranty: No agent, representative, distributor, or authorized dealer of Mossberg firearms has any authority to modify the terms or conditions of the Limited Warranty in any way. The Limited Warranty may only be modified in writing by an authorized officer of Mossberg.

THIS LIMITED WARRANTY IS EFFECTIVE AUGUST 1, 2020.




SILVER RESERVE O/U PARTS LIST

PART	QTY	PART NAME	PART	QTY	PART NAME	PART	QTY	PART NAME
1	1	RECEIVER	24	1	HAMMER LEFT	47	1	EXTRACTOR
2*	1	RECEIVER PLATE	25	2	HAMMER PIN	48	1	FOREND SPRING
3*	1	RECEIVER PLATE SCREW	26	2	HAMMER SPRING GUIDE ROD LEFT&RIGHT	49	1	FOREND PIN
4	1	COCKING ROD	27	2	HAMMER SPRING	50	1	SLING SWIVEL (FRONT)
5	1	COCKING ROD SPRING	28	2	SEAR (LEFT & RIGHT)	51	1	SLING SWIVEL PIN
6	1	TRIGGER	29	2	SEAR SPRING (LEFT & RIGHT)	52	1	CHOKES
7	1	TRIGGER SCREW	30	1	SEAR PIN	53	1	FRONT SIGHT
8	1	TRIGGER SPRING	31	1	SAFETY/SELECTOR	54	1	FOREND
9	1	TRIGGER PIN LONG	32	1	SAFETY PIN LEFT/LONG	55	1	FOREND IRON
10	1	SELECTOR BLOCK	33	1	SAFETY PIN RIGHT/SHORT	56	1	COCKING ARM
11	1	SELECTOR BLOCK PLUNGER	34	1	SAFETY SELECTOR PLATE	57	1	FOREND IRON LONG SCREW
12	1	SELECTOR BLOCK SPRING	35	1	TOP LEVER SPRING PLUNGER	58	1	FOREND IRON SHORT SCREW
13	1	SELECTOR BLOCK PIN	36	1	TOP LEVER SPRING	59	1	FOREND LATCH SCREW
14	1	TRIGGER PIN SHORT	37	1	FIRING PIN RIGHT	60	1	FOREND LATCH FRAME
15	1	TRIGGER GUARD	38	1	FIRING PIN LEFT	61	2	FOREND LATCH
16	1	TRIGGER GUARD PIN SHORT	39	2	FIRING PIN SPRING	62	1	FOREND LATCH FRAME SPRING
17	1	TRIGGER GUARD PIN LONG	40	1	STOCK BOLT	63	1	FOREND LATCH PIN
18	1	RECEIVER BOTTOM PLATE	41	1	STOCK BOLT WASHER	64	1	STOCK
19	1	RECEIVER BOTTOM PLATE PIN	42	1	TOP LEVER	65	1	RECOIL PAD
20	1	TOP LEVER RETAINER SPRING	43	2	FIRING PIN RETAINING PIN	66	2	RECOIL PAD SCREW
21	1	TOP LEVER RETAINER LOCK	44	1	FIRING PIN RETAINING PIN	67	1	SLING SWIVEL (REAR)
22	1	BLOCKER PLATE	45	1	TOP LEVER RETAINER PIN	68	1	STOCK SLING SWIVEL SCREW
23	1	HAMMER RIGHT	46	1	BARREL	69	1	STOCK SLING SWIVEL PIN

*Part no 2 and part no 3 will be only on the aluminum receiver models

SILVER RESERVE O/U EXPLODED VIEW

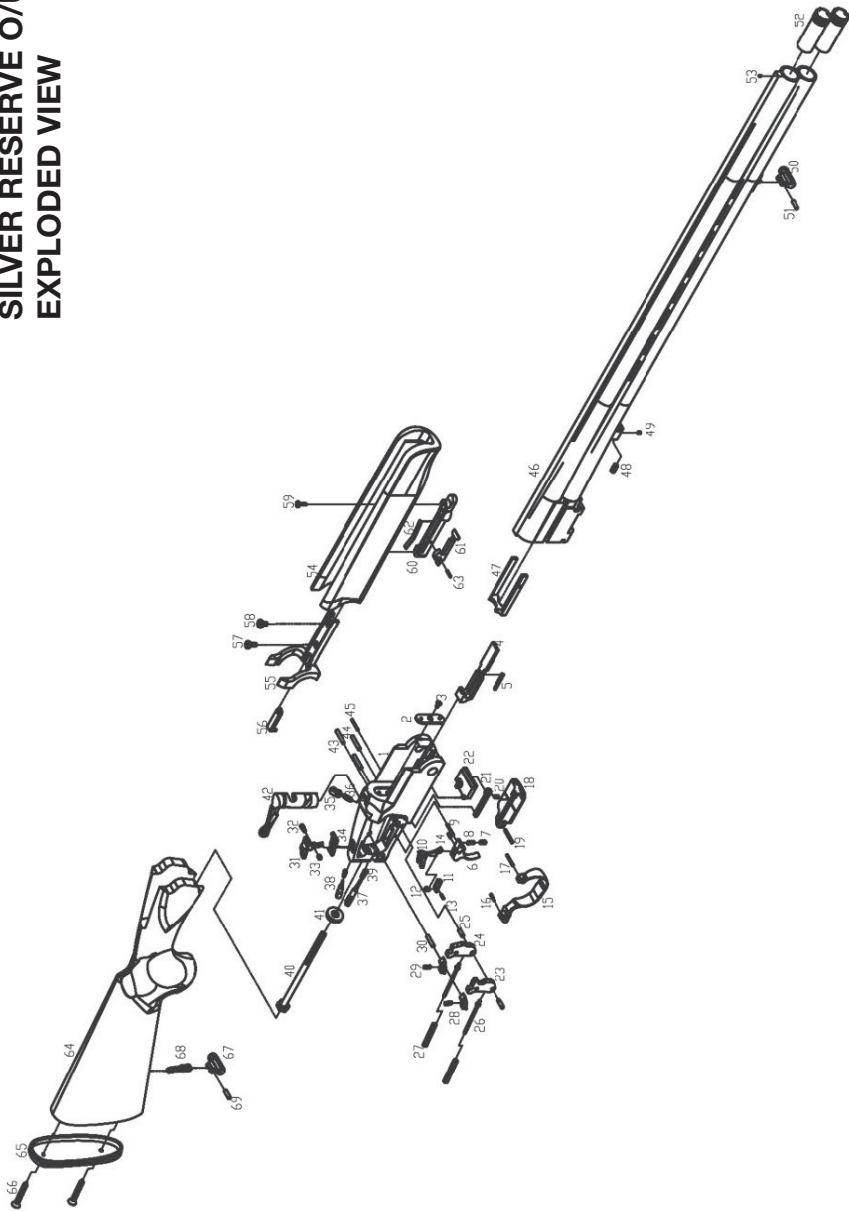


GOLD RESERVE O/U PARTS LIST


1	Receiver	26	Sear (Left)	51	Cheek Adjustment Stud **
2	Hinge Pin	27	Sear Spring	52	Cheek Adjustment Stud Screw **
3	Receiver Bottom Plate	28	Sear Pin	53	Cheek Adjustment Bottom Plate Screw **
4	Receiver Bottom Plate Pin	29	Trigger	54	Cheek Adjustment Stud Screw **
5	Top Lever Lock	30	Trigger Pin	55	Cheek Adjustment Screw Washer **
6	Top Lever Lock Spring	31	Trigger Spring	56	Barrel
7	Top Lever Lock Pin	32	Trigger Detent Pin	57	Ejector (Right)
8	Blocker Plate	33	Transfer Block	58	Ejector (Left)
9	Top Lever	34	Transfer Block Pin	59	Ejector Spring
10	Top Lever Spring	35	Safety Bottom	60	Ejector Spring Pin
11	Top Lever Detent Pin	36	Safety Top	61	Ejector Locking (Right)
12	Top Firing Pin	37	Safety Selector Plate	62	Ejector Locking (Left)
13	Bottom Firing Pin	38	Safety Spring	63	Ejector Locking Spring
14	Bottom Firing Pin Spring	39	Safety Pin	64	Ejector Locking Spring Pin
15	Firing Pin's Retaining Pin	40	Trigger Guard	65	Forearm Lug
16	Cocking Rod (Right)	41	Trigger Guard Pin	66	Front Sight
17	Cocking Rod (Left)	42	Stock	67	Forearm
18	Hammer (Right)	43	Stock Bolt	68	Forearm Iron
19	Hammer (Left)	44	Stock Bolt Washer	69	Forearm Latch Frame
20	Hammer Pin	45	Recoil Pad	70	Forearm Latch
21	Hammer Spring Guide	46	Recoil Pad Screw	71	Forearm Latch Spring
22	Hammer Spring	47	Adjustable Cheek	72	Forearm Latch Pin
23	Hammer Spring Pin Washer	48	Cheek Adjustment Plate **	73	Forearm Latch Screw Pin
24	Hammer Spring Pin Washer Detent Pin	49	Cheek Adjustment Set Screw **	74	Forearm Latch Screw
25	Sear (Right)	50	Cheek Adjustment Bottom Plate **	75	Forearm Bolt
				76	Choke

** Models without adj cheek piece do not include these parts

GOLD RESERVE O/U EXPLODED VIEW

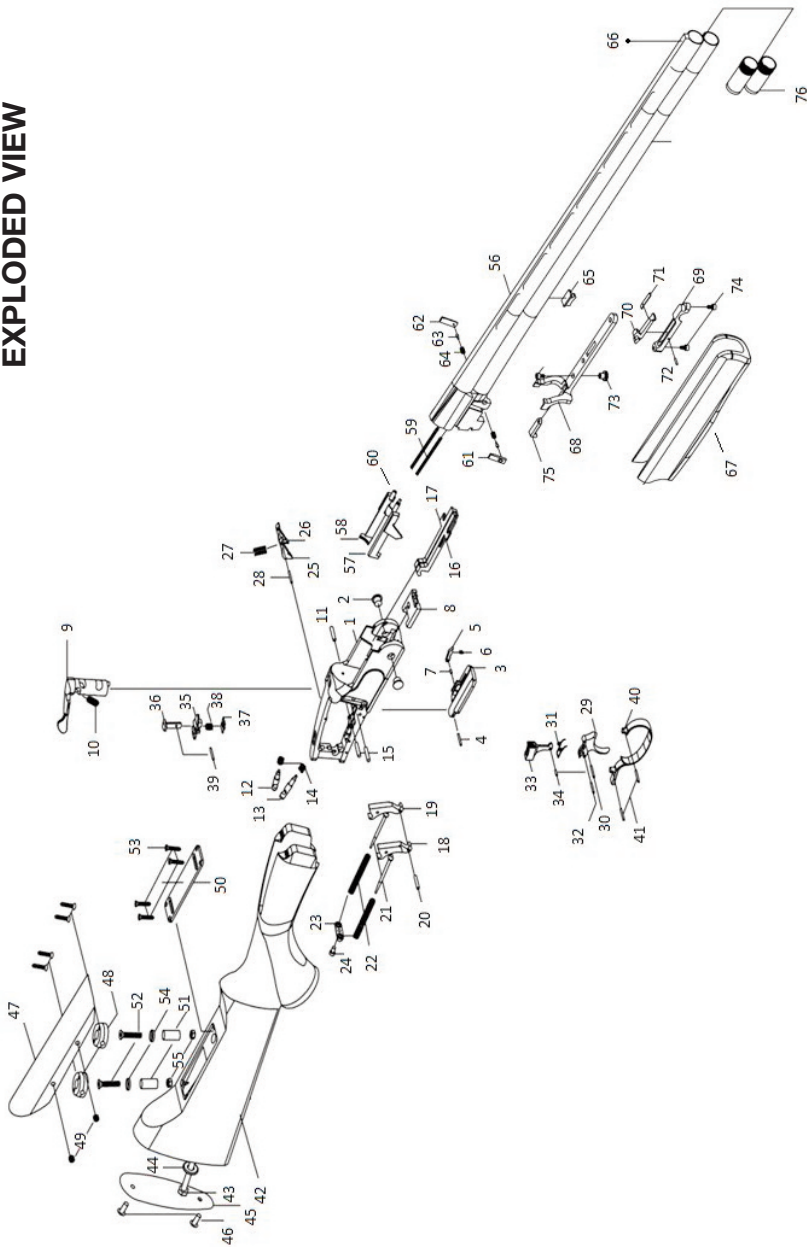


RECOIL PAD SYSTEM EXPLODED VIEW

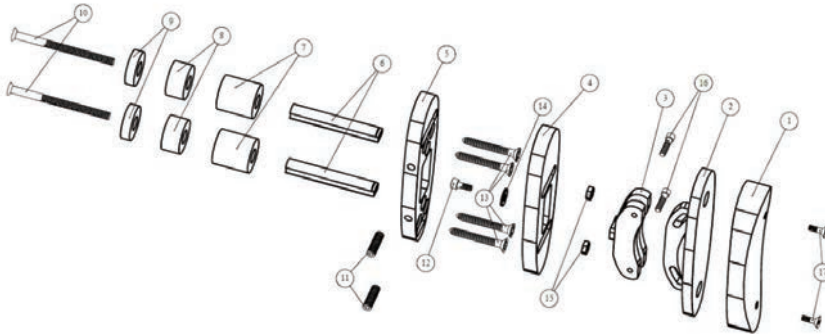

RECOIL PAD SYSTEM PARTS LIST

PART NO	PART NAME	QTY
1	RECOIL PAD	1
2	ALUMINUM RECOIL REDUCER REAR PLATE	1
3	ANGLE ADJUSTMENT JUNCTURE	1
4	ALUMINUM RECOIL REDUCER MIDDLE PLATE	1
5	ALUMINUM RECOIL REDUCER FRONT PLATE	1
6	RECOIL PAD POST	2
7	1" SPACER	2
8	1/2" SPACER	2
9	1/4" SPACER	2
10	RECOIL SYSTEM ADJUSTMENT SCREW	2
11	RECOIL PAD POST ADJUSTMENT SCREW	2
12	ALUMINUM MIDDLE PLATE ADJUSTMENT SCREW	1
13	ALUMINUM FRONT PLATE ADJUSTMENT SCREW	4
14	ALUMINUM MIDDLE PLATE ADJUSTMENT WASHER	1
15	RECOIL PAD ADJUSTMENT NUT	2
16	ANGLE ADJUSTMENT JUNCTURE HINGE SCREW	2
17	RECOIL PAD SCREWS	2

 NOTES







NOTES

A large, empty rectangular box with a double-line border, occupying most of the page. It is intended for the user to write notes.

 NOTES



NOTES

 

FIREARMS SAFETY DEPENDS ON YOU. MAKE NO MISTAKE ABOUT IT!

From the time an individual picks up a firearm, that individual shooter becomes a part of a system over which he or she has complete control. He or she is the only part of the system that can make a gun safe – or unsafe. Hunting and target shooting are among the safest of all sports. This booklet is intended to make them even safer – by re-emphasizing and reaffirming the basics of safe gun handling and storage and by reminding each individual shooter that he or she is the key to firearms safety. You can help meet this responsibility by enrolling in hunter safety or shooting safety courses. You must constantly stress safety when handling firearms, especially to children and non-shooters. Newcomers in particular must be closely supervised when handling firearms with which they may not be acquainted. Don't be timid when it comes to gun safety. If you observe anyone violating any safety precautions, you have an obligation to suggest safer handling practices, such as those in this booklet. Please read these rules carefully and follow the safety procedures outlined. Firearms safety is up to you. Make no mistake about it.

- 1. ALWAYS KEEP THE MUZZLE POINTED IN A SAFE DIRECTION**
- 2. FIREARMS SHOULD BE UNLOADED WHEN NOT ACTUALLY IN USE**
- 3. DON'T RELY ON YOUR GUN'S "SAFETY"**
- 4. BE SURE OF YOUR TARGET AND WHAT'S BEYOND IT**
- 5. USE CORRECT AMMUNITION**
- 6. IF YOUR GUN FAILS TO FIRE WHEN THE TRIGGER IS PULLED, HANDLE WITH CARE**
- 7. ALWAYS WEAR EYE AND HEARING PROTECTION WHEN SHOOTING**
- 8. BE SURE THE BARREL IS CLEAR OF OBSTRUCTIONS BEFORE SHOOTING**
- 9. DO NOT ALTER OR MODIFY YOUR GUN, AND HAVE GUNS SERVICED REGULARLY**
- 10. LEARN THE MECHANICAL AND HANDLING CHARACTERISTICS OF THE FIREARM YOU ARE USING**

*Courtesy of
Sporting Arms and Ammunition Manufacturers' Institute, Inc.*