

HATFIELD

Continuing the Tradition

INSTRUCTION MANUAL FOR OVER/UNDER

**READ THE INSTRUCTIONS AND
WARNINGS IN THIS MANUAL CAREFULLY
BEFORE USING THIS FIREARM**

SAFETY INSTRUCTIONS

Before handling the firearm read this manual carefully and observe the following safety instructions.

Improper and careless handling of the firearm could result in unintentional discharge and could cause injury, death or damage to property. The same consequences can be caused by any unauthorized modifications or adjustments, corrosion, or use of non-standard or damaged ammunition. In these cases the manufacturer shall not be responsible in any manner whatsoever for the resultant consequences.


Before leaving the factory this firearm was tested, carefully inspected, and packed. CZ cannot accept responsibility for product handling while in transit, or upon leaving the factory. Please consider that the wooden parts of the shotgun are not under warranty. Therefore, please examine this firearm carefully at the time of purchase to ensure that it is unloaded and undamaged.

This instruction manual should always accompany the firearm, even in the case of its loan or sale.


Always follow the safety instructions for your safety and the safety of others.

1. Always handle your firearm as if it were loaded.
2. Never point your firearm at anything you do not intend to shoot.
3. Never take anyone's word that a gun is unloaded.
4. Always make sure that your firearm is not loaded before laying it down, or handing it to another person.
5. Always store your firearm unloaded with the firing mechanism released.
6. Never abuse your firearm by using it for any purpose other than shooting.
7. Never leave a loaded firearm unattended.
8. Prior to loading the firearm make sure that barrel bore, chamber, and action are clean and clear of obstructions. Clean a dirty firearm immediately so that it will function properly and safely.
9. Always use only clean, dry, original high quality commercially manufactured ammunition, which is appropriate to the gauge of your firearm.
10. Never drink alcoholic beverages or take drugs before or during shooting.
11. Always wear safety glasses and ear protection during shooting whenever possible.
12. Always keep the safety on when the shotgun is loaded with a cartridge in the chamber, until you are ready to fire. Keep firearm pointed in a safe direction when disengaging the safety.
13. Always keep clear and keep others clear of the ejection port.
14. Never squeeze the trigger or put your finger in the trigger guard until you are aiming at a target and ready to shoot.
15. Always be absolutely sure of your target, and the area behind it, before you squeeze the trigger.
16. Never shoot at a hard surface such as rock, or a liquid surface such as water.
17. Never fire your firearm near an animal unless it is trained to accept the noise.
18. Never indulge in "horseplay" while holding your firearm.
19. Failure to fire: always hold the firearm, keeping it pointed towards the target, or a safe open area and wait 30 seconds when the firearm fails to fire. If a hangfire (slow ignition) has occurred, the round will fire within 30 seconds. If the round does not fire, remove the magazine, eject the round and examine the primer; if the firing pin indent on the primer is light, or non-existent, have the firearm examined by a competent gunsmith.
20. Always make sure your firearm is not loaded before cleaning, storing or traveling.
21. Always keep and store your firearm and ammunition in separate locked receptacles out of reach and sight of children and untrained people.
22. Never alter any parts of your shotgun as the safety and proper function of your shotgun could be seriously compromised.
23. Always be aware that corrosion, use of damaged ammunition, dropping the rifle on hard surfaces or other "coarse treatment" could cause a damage you may not see. If something like this happens allow the firearm to be examined and tested by a competent gunsmith.


ASSEMBLY

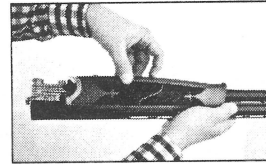


1- Pull the latch on the forearm that is mounted on the barrel.

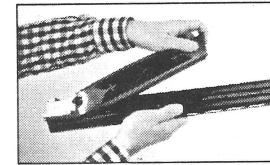


2- Detach the forearm from the barrel.

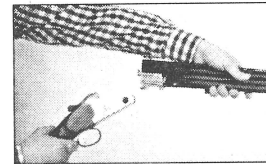


3- Push the top lever fully to the right.

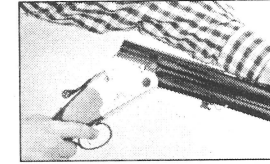


4- While keeping the top lever pushed to right install the barrel to the receiver with an approx 40 - degree angle as it is seen in the figure. Be sure the barrel is completely installed into the receiver otherwise shotgun will not close.

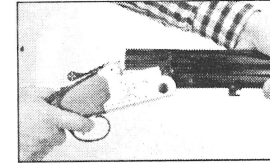

5- Rotate the barrel upwards to close the shotgun, be sure the barrel and receiver are properly aligned and top lever returns to slightly to the right of center. It is normal that the top lever does not return exactly to the center. This allows for wear.

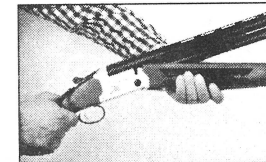


6- Mount the forearm to the barrel as seen in the figure. Be sure the operating latch of forearm is completely closed.

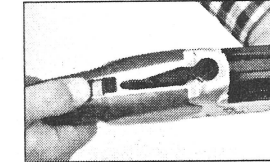


7- Put the safety on by moving the safety switch to rear position.


USAGE

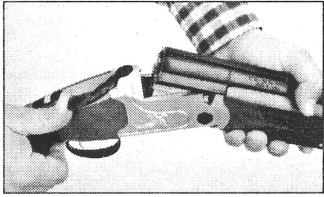


1- Open your shotgun by pushing the top lever right while pushing the barrel downward.

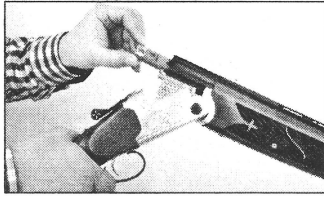


2- MAKE SURE THE SAFETY IS ON. (Moved to rear "S" exposed) Install the suitable cartridges according to your shotgun's gauge and chamber length.

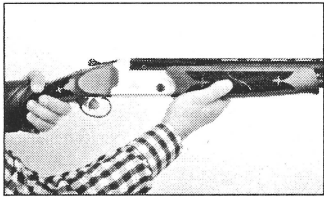

3- Close your shotgun. WARNING: YOUR SHOTGUN IS NOW LOADED. Move the safety to the forward position and pull the trigger to fire.

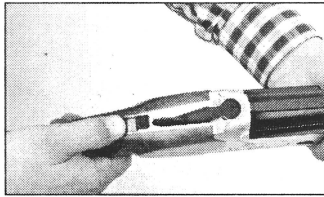

4- Barrel Selection With safety on, move the selector located inside the safety to the right to fire the bottom barrel the top barrel the top barrel will fire with another pull of the trigger.

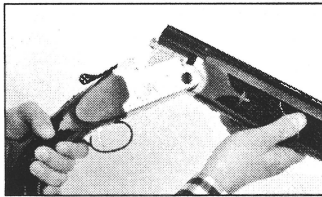

5- After shooting, open the shotgun by pushing the top lever fully to the right. Fired cartridges will be lifted for easy removal or ejected if your gun is fitted with automatic ejector.

DISASSEMBLY

1. Make sure the gun is unloaded and no shells are in the chambers.
2. Close the action. Place the gun butt on your thigh and remove the forearm by pulling the forearm release latch downward while pulling the nose of the forearm away from the barrels, slide the forearm forward until separated from the barrels.
3. Separate the barrels from the receiver by holding the stock of the gun in your right hand and the barrels in your left. Push the top lever to the right with your thumb. Allow the nose of the barrels to drop and lift the barrels upward out of the receiver.
4. Close the top lever by pressing the button located in directly in front of the top lever.

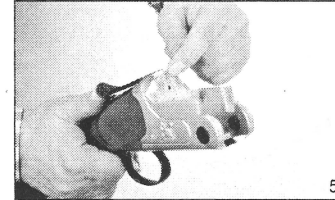



Photo 5

CHOKE TUBE CHART THE CHOKE CONTROL THE PATTERN OF YOUR SHOTGUN THE AVAILABLE CHART BELOW LIST THE CHOKE TUBES AND THE CORRESPONDING MARKINGS


	CVL	IC	M	IM	F
CHOKE TUBE					
BBL	★★★★★	★★★★	★★★	★★	★

Never fire or run gun cleaning tools through a barrel that uses choke tubes without having a choke tube installed. The threads of the choke tube and the internal threads of the barrel should be cleaned after each use and before installation of the tube.

To install a tube, insert the tube into the barrel and tighten with your fingers. Once the tube is finger tight tighten with the appropriate choke-tube wrench until the tube is snug. DO NOT over tighten or forcefully tighten with wrench.

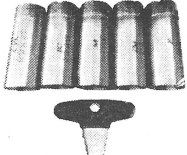Choke Tubes : Best Usage	Full - Turkey
	Imp mod - Waterfowling
	Mod. - Waterfowling, Upland Hunting
	Imp Cyl - Upland Hunting
	Cyl - Upland Hunting

MAINTENANCE

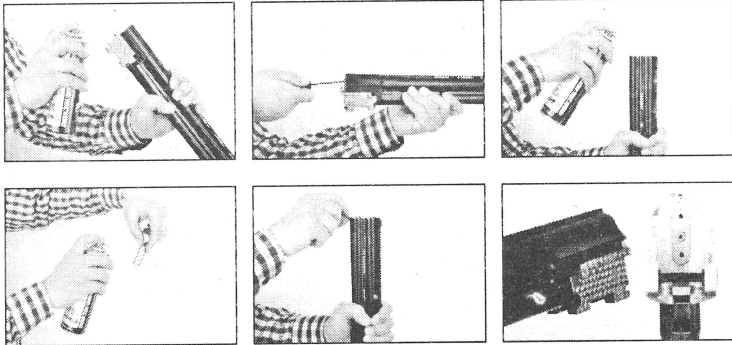

Apply Grease As Shown

- * Clean the barrel bore by passing a swab or cleaning patch through it to remove residue. If necessary, use a cleaning rod with a bore brush soaked in bore cleaning solvent.
- * Run a clean dry cloth through the bore to remove excess residue
- * Lightly oil the inside of the barrel with a clean patch coated with oil
- * Clean all exposed parts with a soft cloth and lightly oil
- * Apply a light coat of lubricant (preferably grease) to the connecting point of the receiver, barrels and forearm.
- * Apply oil to the external surface of the gun to remove any trace of dirt, moisture and fingerprints.

If you need further detailed maintenance contact a professional gunsmith.

AMMUNITION

All HATFIELD Arms over and under shotguns are designed and tested for the use of factory manufactured shotgun shells. Use shot shells of the proper gauge and chamber length as marked on the barrels. 3" chambers will handle all 3" and 2 3/4" shells. 2 3/4" chambers will handle 2 3/4" shells only.

IMPORTANT USAGE OF STEEL SHOT

The choke (bore constriction) in all modern shotguns has been established based on the pattern performance of shot shells loaded with lead shot. When using the steel shot shells, you will notice a different performance in pattern density versus the established lead shot pattern, because the steel shot is harder and lighter than lead shot.

You should be aware of the following differences and cautions: Never shoot steel shot loads in a full choked barrel or full choke tubed barrel. To do so may cause the barrel to swell or rupture. In general, steel shot fired with a modified choke will produce the equivalent of a lead full choke pattern. This will be true of all steel shot size up to and including no. 2. The established improved cylinder chokes will produce the equivalent of a (lead) modified choke pattern. All steel shot sized larger than no. 2, and including special sized such as "F", "T" etc., should be used only with improved cylinder chokes. These steel shot sizes, when used in improved cylinder chokes, will produce patterns equivalent to (lead) full choke patterns. The established cylinder choke or bore will produce the equivalent of a modified (lead) period. Additional information concerning the use of steel shot is available from Remington, Winchester, Federal and other ammunition companies.

INTRODUCTION TO

For many years, HATFIELD has been importing quality shotguns. Combining the old world quality with modern technology, and you have a product of true value and affordable quality.

SERVICE AGREEMENT AND LIMITED WARRANTY

HATFIELD agrees to service its products free of charge for defects in materials and workmanship in accordance with the service agreement listed below. The obligation of HATFIELD under this agreement is limited to the repair or replacement of unserviceable parts and does not cover any incidental or consequential damages.

HATFIELD will repair or replace any unserviceable part(s) for one (1) year from date of purchase provided your firearm has not been altered, abused, willfully damaged, or damaged by overpressure ammunition. This agreement is not transferable; its benefits apply only to the original purchaser.

To obtain free service during the time this agreement is in effect, make sure your firearm is unloaded, and send it to HATFIELD.

This agreement and the warranties contained herein are void if your registration card is not received with a copy of your sales slip within 30 days from date of purchase.

SHIPPING

When returning your gun for service, please take care in packing your gun. Be sure the gun is unloaded. Disassemble your gun, reattach the forearm to the barrels, wrap all parts in paper or other protective material, and place all parts of your gun in the original box. (THIS BOX WILL PROTECT THE GUN BUT IS NOT DESIGNED FOR SHIPPING). Place the box in a cardboard box suitable for interstate shipping. HATFIELD is not responsible for damage incurred during shipping.

Ship the firearm prepaid to: **HATFIELD**
Hatfieldguncompany.com