



HOME SECURITY SAFE ELECTRONIC LOCK OWNER'S MANUAL

Thank you for purchasing your Fortress® Security Product.

Important Note: For maximum protection- hide your override keys in a secure place that only you can access. Never store your override keys inside of your safe.

Programmable Electronic Lock

1. Remove the silver cap on the front of the safe.
2. Use one of the override keys to open the lid. Remove the key and replace the cap on the front.
3. Insert the 4 included AA batteries into the battery compartment.
4. With the door open, press the red reset button found on the inside of the door. The lock will beep and blink yellow. Release the button.
5. Input new code (3-8 digits), and press the “#” button. The lock should blink twice, which indicates the acceptance and storage of the new code. *
6. Your code is now set. To access your safe in the future make sure to press “#” after your code. (For example: 123456#). The light will blink green to let you know that you can turn the dial and open the door.**

Note: When the safe door is open, the Illuminate-it™ feature will turn on. This is a convenient interior light located on the inside of the door.

7. To lock your safe, shut the door and turn the knob to the locked position.
8. Once your safe is locked, press the * button to arm your safe with the Alarm-U™ alarm system. If your safe is tampered with, the alarm will sound for 1 minute. To deactivate the alarm right away, input the correct code.

Your safe contains the high security feature, Alarm-U™ alert system. After 3 wrong attempts at entering the set code, the safe will lock out for 3 minutes and the alarm will sound for 1 minute. After 3 minutes you may attempt your code again. If you cannot remember your code, use your override key to open the safe and reset your code following steps 4-6 again.

*If the yellow light flashes and the lock beeps, the code changing is not effective. Keep the door open and follow steps 4 -6 again.

**If the knob is not turned to the “open” position within 5 seconds of unlocking the safe, it will lock again and the code will need to be re-entered.

Note: If the red light won't turn off, it is time to change the batteries.

Bolt Down Kit

1. Find a secure and convenient place to store your safe.
2. Use the predrilled holes in the back of your safe to mark where you will place your screws on the wall.
3. Pre-drill holes in the wall on your marks.
4. Place the safe on the wall and match up the holes and fasten it to the wall.

IMPORTANT WARNING

Store your safe in a private location. Never leave your safe unattended while open. Keep children away from the safe. Keep batteries away from children and only use batteries as intended and stated in instructions.



Do Not Mix Old And New Batteries. Do Not Mix Alkaline, Standard (Carbon - Zinc), Or Rechargeable (Nickel - Cadmium) Batteries. Non-rechargeable batteries are not to be recharged. Batteries are to be inserted with the correct polarity. Exhausted batteries are to be removed from the product

Customer Service: Questions about your safe? Visit www.FortressSafe.com, or call **1-888-577-9823**.

LIMITED LIFETIME ATTACK WARRANTY

HERITAGE SECURITY PRODUCTS will repair or replace, at the sole discretion of HERITAGE SECURITY PRODUCTS, any Fortress® Security Safe breached by forced entry or forced attack during the lifetime of the original owner, providing homeowner's insurance will not cover the claim. This limited lifetime warranty is limited to the safe itself and expressly excludes any loss associated with the contents of the safe.

HERITAGE SECURITY PRODUCTS reserves the right to receive full evidence of your misfortune, such as a police report and/or homeowner's statement of coverage. This warranty is not valid outside of the 48 neighboring United States. Registration card and copy of sales receipt must be on file at the time of claim.

10 YEAR PRODUCT WARRANTY

HERITAGE SECURITY PRODUCTS warrants your new Fortress® Security Safe to be free from defects in workmanship and materials for TEN (10) years from the date of purchase.

HERITAGE SECURITY PRODUCTS shall only be responsible and liable when the safe is used in compliance with the directions specified with your new Fortress® Security Safe.

HERITAGE SECURITY PRODUCTS shall guarantee the original lock for TWO (2) years for full service lock replacement at no cost. An additional EIGHT (8) years covers the replacement lock you are entitled to the option of self-replacement with the assistance of our customer service, however a technician is recommended.

HERITAGE SECURITY PRODUCTS warrants the painted surface of the safe to be free from rust for TEN (10) years from the date of delivery.

HERITAGE SECURITY PRODUCTS requires that specific guidelines be followed for repair. The safe will be repaired in-home if possible (to include parts and labor); however, if factory replacement is necessary (at HERITAGE SECURITY PRODUCTS's sole discretion), the replacement will be shipped freight prepaid, curbside delivery.

THIS WARRANTY IS INCLUSIVE AND IS IN LIEU OF ANY AND ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. SPECIFICALLY EXCLUDED ARE THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY IS LIMITED TO THE SAFE ITSELF AND/OR ITS VALUE AND DOES NOT INCLUDE CONSEQUENTIAL DAMAGES OF ANY KIND INCLUDING, BUT NOT LIMITED TO, THE CONTENTS IN and OF THE SAFE.

ONE YEAR SATISFACTION GUARANTEE

Fortress® Safes are built to last a lifetime. Your satisfaction is our reward. One (1) year Satisfaction Guarantee is offered to ensure your satisfaction with Fortress® Safes.

HERITAGE SECURITY PRODUCTS will make every reasonable attempt to provide a satisfactory product. You must register your Fortress® Security Safe within 60 days of purchase to be eligible.

To register your Fortress® safe please visit www.FortressSafe.com/register