



M-LOK™ AFG®

Angled Fore Grip



WARNING

BEFORE STARTING! MAKE SURE THE WEAPON IS UNLOADED, THE CHAMBER IS EMPTY & THE SAFETY IS ENGAGED.





READ ALL INSTRUCTIONS BEFORE PROCEEDING TO AVOID LOSING ANY SMALL COMPONENTS.



INSTALLATION INSTRUCTIONS


STOP

IMPROPER INSTALLATION AND/OR IMPROPER USE OF THIS PRODUCT MAY CAUSE WEAPON MALFUNCTION. WEAPON MALFUNCTION MAY CAUSE SERIOUS INJURY, INCLUDING GRIEVOUS BODILY HARM AND/OR DEATH.

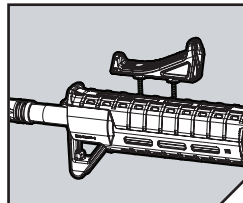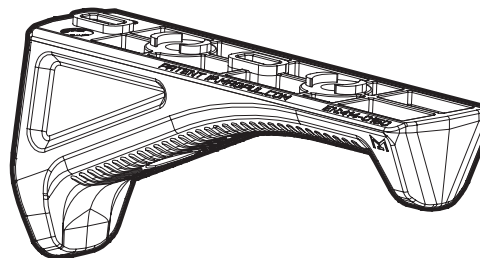


Step 3: Align the M-LOK AFG

Align the AFG using the M-LOK lugs. Place the M-LOK T-Nuts and lugs into the slot at the desired location.

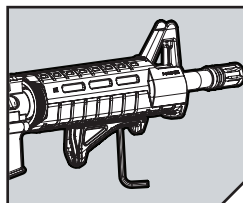

Step 4: Install the M-LOK AFG

When the desired position is reached, secure the M-LOK Screws using a 1/8" hex wrench. See enclosed M-LOK Accessory Instruction Sheet for detailed M-LOK instructions. (072-0087)

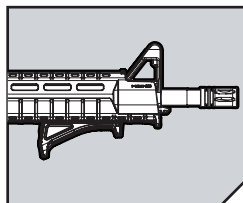

Step 5: Verify Installation

Perform final inspection including function check per US Army TM 9-1005-23&P Unit and Direct Support Maintenance Manual (3-97) to verify proper weapon function.

Always test fire your weapon before using it in an operational environment.

Step 1: Install T-Nuts and Screws to the M-LOK AFG

Insert the Screws through the bottom of the M-LOK AFG and thread the T-Nuts with the "stem" of the nut facing towards the grip. Initial installation may be stiff due to the nylon thread patch on the Screws.

Step 2: Adjust the T-Nuts for Mounting Surface Thickness

The distance between the top of the M-LOK AFG (not the lug) and the top "flat" of the T-Nut should be just wider the mounting surface thickness.

HAND GUARD THICKNESS

