


MS1 SLING USAGE INSTRUCTIONS




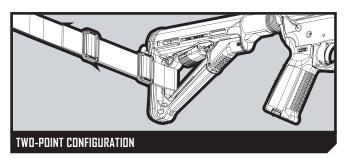

To connect the sling via *sling loop*, run the tail end (the end of the sling with two *Fit Buckles*) of the *MS1* through the *sling loop* on the outside of your rifle stock (the side away from the user when the rifle is slung - to avoid interference) and then back through the *Fit Buckles*. Double the *webbing* back through the upper *Fit Buckle* if possible.


Connect the front end to a *sling loop* or connector hardware via the same method, lacing the webbing through the front *Fit Buckle* and doubling back through the buckle.

The MS1 Sling can also be used with any 1-1/4" sling hardware.

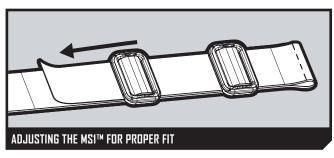

Adjust the length of the sling such that the Slider remains accessible by your non-firing hand both when tight (slung) and loose (rifle in use.) After you have determined the proper length for your $MS1\ Sling$, run the tail end back through both of the $Fit\ Buckles$ provided. Double back any excess material and trim only if necessary.

NOTE: If you do need to trim the webbing, re-bind the frayed end by melting it with a flame.

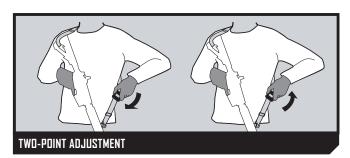

To adjust the MS1 Sling while in two point configuration, simply grab the Slider with your non firing hand and push down to tighten or pull up to loosen the sling.

