

SKULL HOOKER INSTALLATION INSTRUCTIONS




BIG HOOKER™

MOUNTING INSTRUCTIONS:

1. Locate wall stud - do not secure to drywall only.
2. Insert two supplied wall screws securely into wall stud.
Important: Ensure mounting holes are vertically aligned.
3. Insert mounting arm into wall plaque.
4. Determine which of the 2 supplied adjustable prongs fit your trophy's skull by positioning back of the skull facing up, and inserting prong (only) into the skull*. The standard (smaller) prong works best for most species. For extra large skulls such as Australian Water Buffalo and larger skulled Moose and Cape Buffalo, utilize the Extra Large Prong.
5. Attach the adjustable prong and mounting arm: Align the single pivot hole and select angle. Tighten the 2 supplied screws and nuts.
Important: Make sure to **tighten** supplied screws and nuts so the adjustable prong is tight against mounting arm before installing or releasing weight of skull.
6. Install skull: Tilt head or nose up, position over and insert natural spinal cord/brain hole onto center prong. Lower nose of skull and slowly release weight. Visually inspect prong and skull to ensure proper fit during installation.

**Mounting location of skull must not be cut or altered. Minor leveling adjustments may be necessary.*

Package Contents: Wall Plaque (1) with 2" Wall Screws (2), Mounting Arm (1), Standard adjustable Prong (1), Optional extra large adjustable Prong (1) with screws (2) and nuts (2).

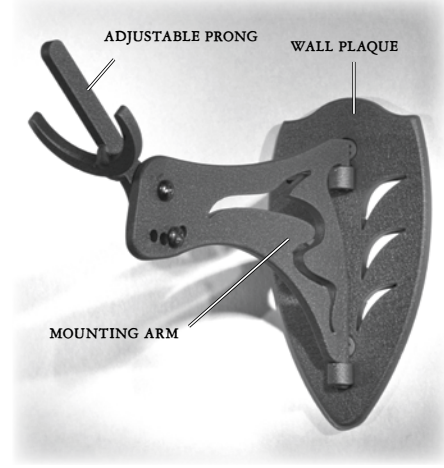

LITTLE HOOKER™

MOUNTING INSTRUCTIONS:

1. Locate wall stud - do not secure to drywall only.
2. Wall plate install: Insert two supplied wall screws securely into stud within wall.
Important: Ensure mounting holes are vertically aligned.
3. Insert mounting arm into wall plaque.
4. Attach Adjustable Prong: Align the single pivot holes of both the adjustable prong and mounting arm, insert screw and lightly tighten.
5. Install skull: Lower the natural hole of the skull onto the center prong. While supporting skull and prong, determine the proper angle of the skull.
6. Insert final screw: Tighten both screws and nuts fully.
7. Visually inspect prong and skull to ensure proper fit during installation*.

**Mounting location of skull must not be cut or altered. Minor leveling adjustments may be necessary.*

Package Content: Wall Plaque (1) with 2" Wall Screws (2), Mounting Arm (1), Adjustable Prong (1), with screws (2) and nuts (2)

Product Disclaimer - The purchaser/user of this product and not Ivent, LLC, assumes any and all risks arising out of or in any connection with the use of SkullHooker™ products, including, without limitation, the risks of death, paralysis or any bodily injury, disability and/or loss or property damage wheresoever and howsoever caused including, but not limited to, defects, normal wear or negligence, lack of maintenance, accident, abnormal operation, or improper installation or service, any Act of God, fire or explosion; or the negligent or deliberate act of another person.



SkullHooker™, Ivent LLC
P.O. Box 257 • Klamath Falls, OR 97601
(541) 887-8622
www.skullhooker.com

Patent Pending
Rev. 03/11