

# SIGSAUER®



## **SIG AIR™ P365®** **AIRGUN BB Pistol**

### **OPERATOR'S MANUAL: HANDLING & SAFETY INSTRUCTIONS**

READ THE INSTRUCTIONS AND WARNINGS IN THIS MANUAL CAREFULLY  
BEFORE USING THIS AIRGUN.  
DO NOT DISCARD THIS MANUAL.

THIS MANUAL SHOULD ALWAYS ACCOMPANY THIS AIRGUN AND BE TRANSFERRED WITH IT  
UPON CHANGE IN OWNERSHIP, OR WHEN THE AIRGUN IS PRESENTED TO ANOTHER PERSON.





# WARNING

## 1.0 SAFETY WARNINGS

READ THIS OWNER'S MANUAL COMPLETELY. DO NOT BRANDISH OR DISPLAY THIS AIRGUN IN PUBLIC. IT MAY BE CONFUSING TO PEOPLE AND MAY BE A CRIME. POLICE AND OTHERS MAY THINK THIS AIRGUN IS A FIREARM. DO NOT USE OR CARRY THE AIRGUN IN SITUATIONS WHERE IT COULD BE MISTAKEN FOR A FIREARM. THIS AIRGUN IS NOT A TOY. TREAT IT WITH THE SAME RESPECT YOU WOULD A FIREARM. ALWAYS CAREFULLY FOLLOW THE SAFETY DIRECTIONS FOUND IN THIS OWNER'S MANUAL AND KEEP THIS MANUAL IN A SAFE PLACE FOR FUTURE USE. MISUSE OR CARELESS USE MAY CAUSE SERIOUS INJURY, ESPECIALLY TO THE EYE. THE USE OF THIS AIRGUN IS NOT RECOMMENDED FOR PERSONS UNDER 18 YEARS OF AGE. MAY BE DANGEROUS UP TO 275 YARDS (250 METERS).

## BASIC RULES OF SAFE AIRGUN HANDLING

ALWAYS treat every Airgun as if it were loaded.

ALWAYS point Airgun in a safe direction.

ALWAYS be sure of your backstop, what lies beyond, and the safety of bystanders before you shoot.

DO NOT brandish, tamper with, or attempt to alter Airgun in any way. Actions may result in injury, especially to the eye.

ALWAYS be sure of your backstop, what lies beyond, and the safety of bystanders before you shoot.

ALWAYS use clean, dry, original factory-made ammunition of the proper type and caliber for your Airgun.

ALWAYS wear ear protection and safety glasses when shooting.

ALWAYS carry your Airgun so that you can control the direction of the muzzle if you fall or stumble.

NEVER shoot at a flat surface or water.

DO NOT leave an unattended Airgun loaded. Airguns and ammunition should be stored separately, locked if possible, beyond the reach of children, careless adults, and unauthorized users.

NEVER allow your Airgun to be used by anyone who has not read and understood this operator's manual.

DO NOT point any Airgun, loaded or unloaded, at any undesired target.


NEVER discharge your Airgun near an animal unless it is trained to accept the noise: an animal's startled reaction could injure it or cause an accident.

ALWAYS be sure that the barrel is clear of any obstruction.

NEVER drink alcoholic beverages or take drugs before or during shooting, as your vision and judgment could be seriously impaired, making your Airgun handling unsafe.



## 1.1 EYE PROTECTION

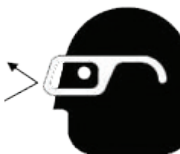

Always wear safety glasses that meet the requirements of American National Standards Institute (ANSI) z87.1 and ear plugs whenever you are shooting. Always make certain that persons close to you are similarly protected. If you wear prescription or reading glasses that do not meet this ANSI rating, be sure to wear safety glasses over your corrective glasses.

## 1.2 PROP 65 WARNING



This product can expose you to chemicals including lead, which is known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to

[www.P65Warnings.com](http://www.P65Warnings.com)

## TABLE OF CONTENTS


1.0 SAFETY WARNINGS	2
1.1 EYE AND EAR PROTECTION	3
1.2 PROP 65	3
2.0 PRODUCT DESCRIPTION	4
3.0 SAFETY	5
4.0 MAGAZINE	5
4.1 INSTALLING AMMUNITION	6
4.2 INSTALLING CO2	6
4.2 INSTALLING MAGAZINE	6
5.0 FIRING/AIMING THE PISTOL	8
6.0 SAFE CO2 HANDLING	8
7.0 MAINTENANCE	9
8.0 STORAGE and TRANSPORTATION	9
9.0 REPAIR/SHIPPING SERVICE	9
10.0 WARRANTY	10

## 2.0 Description of AIRGUN



1. FRONT SIGHT
2. SLIDE
3. REAR SIGHT
4. SAFETY LEVER
5. SLIDE CATCH LEVER
6. MAGAZINE
7. MAGAZINE RELEASE BUTTON
8. TRIGGER
9. TAKEDOWN LEVER
10. PROPRIETARY RAIL

### 3.0 Safety

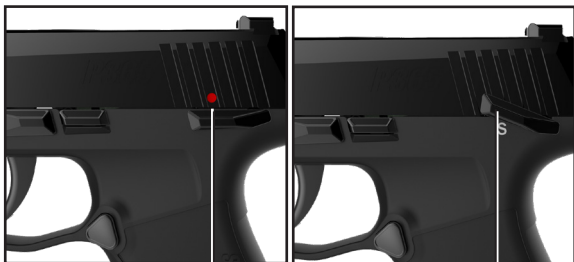

**MANUAL SAFETY OFF:**  
Red Dot Showing

**MANUAL SAFETY ON: S**  
SYMBOL Showing

### 4.0 Magazine

Press the magazine release button. Grip the base of the magazine and guide out.



## 4.1 Installing Magazine with Ammunition

**NOTE:** Ensure that the magazine is the proper type and caliber for the pistol IT IS RECOMMENDED TO USE ONLY PREMEIR 4.5mm STEEL BB FOR OPTIMAL PERFORMANCE

1. Pull down on the magazine follower. See callout A
2. Push the follower into the side notch holder as highlighted by white box in callout B. It is recommended that follower is held into notch while loading as the follower may slip from notch, causing unintentional force of spring to eject loaded ammunition before finished loading.
3. With thumb, hold tab at loading port down and load ammunition by manually inserting each steel 4.5mm BB into loading port shown in callout C. Once full, carefully release follower from notch and slowly return to position.

## 4.2 Installing Magazine with CO<sub>2</sub>

1. Using 1/4" allen wrench provided -unscrew the base cap of the magazine by turning counterclockwise.
2. Fully remove the base cap from magazine. Insert CO<sub>2</sub> neck first up into base of magazine as shown below.
3. Re-apply base cap and gently start to turn clockwise with 1/4" allen wrench provided. Once cap is correctly seated in thread path, tighten until cap becomes snug then rotate one quarter turn more. CO<sub>2</sub> cylinder will pierce during tightening- hissing noise may occur and is normal but will cease once cap is fully tightened.
4. Insert a loaded magazine by pushing it up into magazine well until it locks in place. You should hear an audible click.

**4.1****4.2**

## 5.0 Aiming/Firing at a Safe Target

**WARNING:** Backstops should be inspected for wear before and after each use. Discontinue use if the backstop surface shows signs of failure. Since backstop surfaces eventually fail, always place the backstop in a location that will be safe should the backstop fail. Discontinue the use of the backstop if the projectile rebounds or ricochets.

FOR USE WITH 4.5MM BB'S. USE OF ANY OTHER AMMUNITION MAY RESULT IN INJURY TO YOU, OR DAMAGE TO THE AIRSOFT. DO NOT REUSE AMMUNITION.

To be a consistent marksman, use the correct sight picture each time you fire the pistol.

FOR BEST RESULTS – USE 4.5mm Steel BBs

FOR BEST RESULTS – USE A 6 O'CLOCK HOLD



1. Aim the pistol at a safe target and disengage manual safety if so equipped.
2. Place finger on the trigger and press trigger to fire.
3. Keep pistol aimed at the target and continue to fire as desired or until the magazine is empty.

## 6.0 SAFE USE AND HANDLING OF CO<sub>2</sub> CYLINDERS

It is possible that certain conditions may affect a CO<sub>2</sub> cylinder, which can impact its proper performance. These conditions include the usage, maintenance and storage at temperatures that are higher or lower than (59°F/15°C to 90°F/32°C). Rapid firing of the CO<sub>2</sub> Airgun can affect the performance of the CO<sub>2</sub> cylinder as well.

High temperatures can increase pressure in the CO<sub>2</sub> cylinder and also within the Airgun, leading to higher than standard operating pressure. This excess pressure could cause the Airgun to malfunction or be permanently damaged. Maximum storage or operation temperature should never exceed 122°F (50°C). This temperature can be reached if you leave the Airgun under direct sunlight on a bright day. Thus, to ensure proper Airgun operation, do not expose it or CO<sub>2</sub> cylinders to high temperatures or direct sunlight for long periods of time. Otherwise, the CO<sub>2</sub> cylinder could overheat and explode, which may damage the Airgun and cause injuries or death to people around it.

Fast consecutive shooting may produce a decrease of temperature in the Airgun, as well as the CO<sub>2</sub> cylinder. This could result in lower projectile velocities and may even lower gas pressure enough so that the Airgun will not fire. This condition can be especially apparent when shooting in cold weather and can be avoided by allowing more time between shots. This permits the gas to increase in temperature and pressure and produce normal velocities.

During rapid fire, the muzzle velocity of each shot will diminish. This can affect shooting accuracy and you will get fewer shots per CO<sub>2</sub> cylinder.

Care should be exercised to ensure that the Airgun is not shot with a CO<sub>2</sub> cylinder that is low in pressure. The following are indicators of insufficient pressure:

- A) The sound of the shot is not as loud as when the cylinder is full.



- B) Reduced pellet velocity, which may be indicated by pellets hitting the target lower than observed with a full CO<sub>2</sub> cylinder (That is the shooting speed has dropped).

## 7.0 Maintenance

- Always visually inspect Airgun before use. Function check all levers and buttons, such as magazine catch, safety levers, slide catch lever, etc., before use of Airgun.
- Be sure sights and/or optics are not loose. If secondary sights/optic are mounted, be sure to follow instructions provided with that product.
- If airgun is dropped, visually check to see that it works properly before you use it again. If any questionable changes, such as lowered trigger force and/or shortened trigger travel occur, this may indicate worn out or broken parts. Call SIG SAUER® customer service at (603) 610-3000 Ext. 1, for assistance before using your airgun again. Repairs should only be made by qualified personnel.

## 8.0 Storage/Transportation

- The only safe way to store your Airgun is unloaded, cleared, and secure. Safe and secure storage is one of your most important responsibilities. Store your unloaded Airgun separate from your ammunition and in places inaccessible to children and unauthorized persons.
- When transporting your Airgun, be sure the Airgun is unloaded and cleared. It is your responsibility to familiarize yourself with the laws of any state you will be traveling through with your Airgun.
- When storing always be aware of the Airgun and equipment associated with the product. Be aware of high and low temperatures (59°F/15°C to 90°F/32°C). as parts/equipment such as high pressure gases, seals, etc. can be affected and/or damaged.

## 9.0 Service/Shipping Policy

If you have questions concerning the performance or servicing of your Airgun, please write or call:

SIG SAUER, Inc.  
Attention: Customer Service  
18 Industrial Drive, Exeter, NH 03833  
Phone: (603) 610-3000 ext. 1  
Fax: (603) 766-7002

IF YOU DO NOT UNDERSTAND THE INSTRUCTIONS FOR OPERATING YOUR Airgun, IT IS YOUR RESPONSIBILITY TO CALL OUR CUSTOMER SERVICE DEPARTMENT AT (603) 610-3000 EXT. 1 BEFORE USING YOUR Airgun.

In the event that you need to return your Airgun to the SIG SAUER Service Department, here's what to do:

1. Contact Customer Service at (603) 610-3000 ext. 1 for a return merchandise authorization (RMA) number, which will allow SIG SAUER to track the status of your return from its receipt at SIG SAUER through its return to you. Please do not send your Airsoft until you obtain an RMA number.
2. Make sure that the chamber and magazine(s) are unloaded and that no ammunition is included with your returned Airgun.
3. Package the Airgun securely to prevent damage. Enclose a letter that includes your name, street address, daytime phone number, model and serial number, and a detailed description of the problem you have experienced or the work that you want performed.  
With the exception of extra magazines, do not include any other accessories such as scopes or mounts.
4. SIG SAUER is not responsible for any Airgun until it is received, nor for damage incurred during shipment.
5. Ship your Airgun insured and prepaid (we do not accept collect shipments) to:

SIG SAUER, Inc.  
Attention: Service Department  
18 Industrial Drive Exeter, NH 03833

Don't forget to write your RMA number on the package.

A copy of this instruction manual should always accompany this Airgun and be transferred with it upon change of ownership.

## 9.0 SIG SAUER® LIMITED WARRANTY

SIG SAUER warrants that the enclosed AIRSOFT/AIRGUN/AIR ACCESSORY product was originally manufactured free of defects in material, workmanship, and mechanical function. For the applicable periods listed below, SIG SAUER agrees to correct any defect in the product for the original purchaser by repair, adjustment, or replacement, at SIG SAUER's option, with the same or comparable quality components (or by replacing the product at SIG SAUER's option); provided however, that the product is returned unloaded and freight prepaid to SIG SAUER at 18 Industrial Drive, Exeter, NH, 03833.

Limited Warranty Applicable Periods:

- SIG SAUER® AIR ONE Airsoft Models – Thirty (30) days from date of purchase
- SIG SAUER® PROFORCE Airsoft Models – Ninety (90) days from date of purchase
- SIG SAUER® AIRGUN Models (non-HUNTER models) – One-hundred and eighty (180) days from date of purchase
- SIG SAUER® HUNTER AIRGUN Models – One (1) year from date of purchase
- SIG SAUER® AIR ACCESSORIES – Sixty (60) days from date of purchase

Proof of purchase will be required with any request for warranty repair. This limited warranty is null and void if the product has been misused, damaged (by accident or otherwise), fired with improper ammunition, fired with an obstruction in the barrel, damaged through failure to provide reasonable and necessary maintenance as described in the manual accompanying the product, or if unauthorized repair or any alteration, including of a cosmetic nature, has been performed on the product. This limited warranty does not apply to normal wear and tear of any parts.

Subject to the foregoing, this limited warranty confers the right to have the covered product or its parts repaired, adjusted, or replaced exclusively upon the original purchaser, which right is not transferable to any other person.

ANY WARRANTIES IMPLIED BY LAW, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSLY DISCLAIMED. REPAIR, ALTERATION, OR REPLACEMENT AS PROVIDED HEREIN IS YOUR EXCLUSIVE REMEDY FOR ANY DEFECTIVE PRODUCT. IN NO EVENT SHALL SIG SAUER OR ANY COMPANY AFFILIATED WITH SIG SAUER BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OF ANY KIND ARISING OUT OF THE PURCHASE OR USE OF THIS PRODUCT, WHETHER BASED UPON CONTRACT, TORT, STATUTE, OR OTHERWISE. Some states do not allow the exclusion or limitation of implied warranties, or the exclusion or limitation of incidental or consequential damages, so some or all of the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from State to State.

THIS WARRANTY APPLIES TO U.S. COMMERCIAL CUSTOMERS ONLY, AND DOES NOT APPLY TO GOVERNMENT, MILITARY, LAW ENFORCEMENT, OR NON-US CUSTOMERS. NON-US CUSTOMERS SHOULD CONTACT THEIR LOCAL DEALER OR DISTRIBUTOR FOR APPLICABLE WARRANTY COVERAGE.

The logo for SIG SAUER, featuring the word "SIG" in a smaller, bold, italicized font above the word "SAUER" in a larger, bold, italicized font. A registered trademark symbol (®) is located to the upper right of the "R" in "SAUER".

[sigsauer.com](http://sigsauer.com)

**SIG SAUER, Inc.**  
**72 Pease Boulevard, Newington, NH 03801 USA**

All trademarks, service marks, trade names, trade dress, product names and logos appearing in this manual are the property of their respective owners. No trademark or service mark appearing in this manual may be used without written consent of the mark's owner.