



ata arms






En iyisini hedefleyin...

Aim for the best...

ALR

**KULLANIM KLAVUZU
INSTRUCTION MANUAL
ИНСТРУКЦИЯ**

MADE IN TURKEY

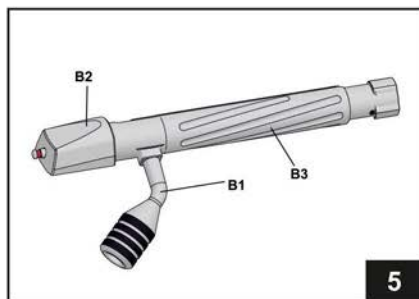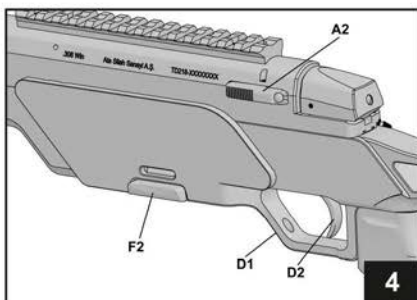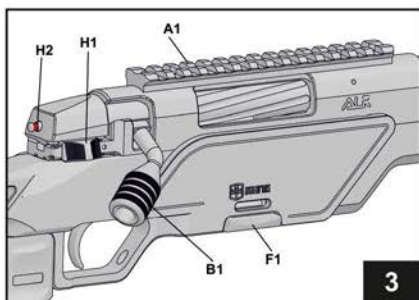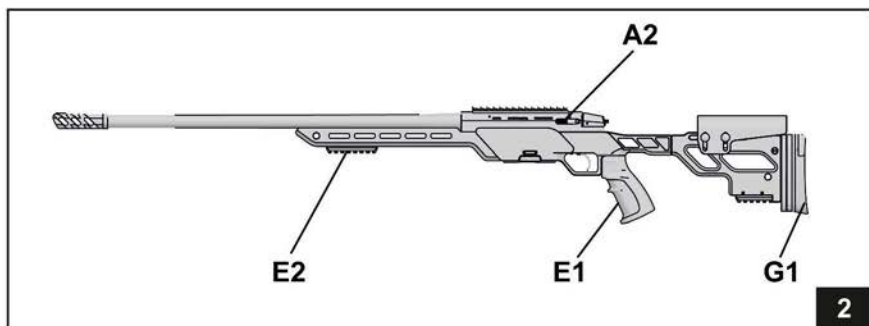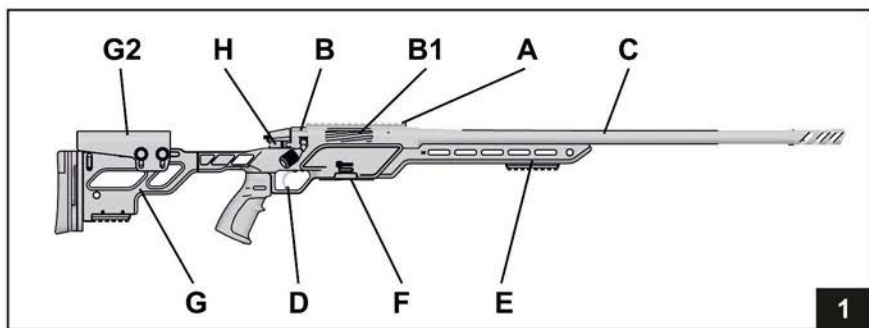

CONTENTS

ABOUT ATA ARMS	20
INDICATIONS IN THIS MANUAL	21
IMPORTANT PRECAUTIONS.....	21
BASIC SAFETY RULES.....	22
NOMENCLATURE.....	23
DESCRIPTION.....	23
ASSEMBLY OF PACKAGED FIREARM	24
OPERATION OF THE SAFETY	24
LOAD CHECK	25
AMMUNITION.....	25
LOADING AND FIRING.....	26
LOADING THE RIFLE.....	26
FIRING	27
UNLOADING THE RIFLE	28
DISASSEMBLY AND ASSEMBLY OF THE RIFLE COMPONENTS.....	29
DISASSEMBLY OF THE RIFLE	29
ASSEMBLY OF THE RIFLE	30
RIFLE ADJUSTMENTS.....	31
ADJUSTMENT OF TRIGGER PULL WEIGHT	31
LENGTH OF PULL ADJUSTMENT	31
BUTTPAD ELEVATION	31
CHEEK PIECE ADJUSTMENT.....	31
ROUTINE CLEANING AND MAINTENANCE.....	32
PROTECTION FROM RUST AND REPAIR.....	34
PERIODIC MAINTENANCE	34
OPERATIONAL CHANGES OR DAMAGES	34
WARRANTY	34

ABOUT ATA ARMS

Being architect of ATA Arms and a gifted master Celal YOLLU began to write his story of success in the middle of Anatolia...

In the county of Incesu of Kayseri Province, where he was born in 1942, he realized his skill in mechanics when he was just a child in Incesu of Kayseri, he achieved a legendary success in disassembling and manufacturing any mechanic device that he saw from scratch. He got over with the firearms that many repairmen could not fix in 1955, when he was 13 years old, the first signs of his success had already begun to appear in that year, he built the first single-shot shotgun, which would open him different gates and turn into a story of success, for which he will commit his entire life. However, it was of course impossible to expect the master to be satisfied with only a single shotgun. Therefore, he opened workshop, where he can always create the better and turn his dreams into reality. This initiation and his successful moves were enough to grant him a say in the local market, in a short period of time. Hence, the story of how a humble workshop became a worldwide known firearms brand began in a small county of Anatolia. By 1967, the innovative and ambitious personality allowed our founder Celal YOLLU to manufacture the first double-barreled hunting shotgun of Turkey.

Every successful design increased the demand and in parallel with this, the production was also increased. This momentum made it inevitable for our founder to take the decision of moving to Duzce, the center of the firearms industry in Turkey.

There, he undersigned another success by becoming an industry leader in a short time; he manufactured the first over-under hunting shotgun of Turkey. In parallel with his professional life, Celal YOLLU was occupied with the training of the new generation of gunsmiths, too. His success and vision led him to give an importance to the R&D works, which would provide him a competition power as well.

By 1990, Celal YOLLU, who moved to Istanbul in order to be close to the world market, had almost become a legend as he was acknowledged wherever he visited thanks to the weapons that he manufactured. His ongoing works in Istanbul gave their fruit in a short time and Celal YOLLU pioneered another innovation; he manufactured the first semi-automatic hunting shotgun of Turkey with the brand of Vursan.

Also, becoming a legend and drawing a lot of attention in the sector, VURSAN began to receive partnership offers from the leading companies of the world, and then established a strong partnership by accepting the offer of Beretta Group in 2000. At the present, ATA Arms is a well-known brand with quality and safety.

ATA Arms continues to its journey of success with same determination and desire under the leadership of the great master's sons; Yavuz YOLLU and Fatih YOLLU.

INDICATIONS IN THIS MANUAL

WARNING: This user manual contains important safety information and must be read carefully before using the rifle.

Please keep a copy of the manual to refer to in the future. If you sell your rifle, please provide the user manual with it. You can also access a copy of this user manual at www.ataarms.com

IMPORTANT PRECAUTIONS

WARNING: Each rifle has a potential to kill you or another person. Accidents occur because of not complying with the safety rules and of carelessness.

WARNING: Firing, unloading, cleaning or maintaining your rifle in a badly ventilated area can expose you to burned gases, solvent solutions and lead. These gases can cause birth defects, permanent damage and other serious injuries. Always maintain your rifle in a well-ventilated environment. Wash your hands after shooting and maintenance.

WARNING:

Unload your rifle;

- 1. Before passing through obstacles,**
- 2. Before climbing over obstacles or into your vehicle,**
- 3. Before going into a building.**
- 4. Before laying down your rifle even if it is temporary.**

WARNING: Using of incorrect or improperly loaded ammunition can damage your rifle due to extreme pressure. This can result in serious injuries or fatal accidents. Therefore, only use factory ammunition loaded to CIP or SAAMI specifications.

WARNING: Using a cartridge of the wrong caliber or type for your rifle can result in damage or can cause serious injuries to the user or bystanders. When you are firing, be certain you are using only ammunition, of the correct caliber and type.

BASIC SAFETY RULES

WARNING: Please read the following safety rules, before using your rifle.

Firearms can be dangerous and cause serious injuries and even death. The following safety and security rules outline the user's responsibilities.

- a) Never point your rifle at a person (whether it is empty or loaded). Always handle your rifle as if it were loaded
- b) Never aim your rifle in a direction, which is unsafe for shooting. Never shoot at hard surfaces or water.
- c) Keep the safety of your rifle on until you are ready to fire (the red warning dot must not be visible).
- d) Keep your finger away from the trigger until ready to fire.
- e) Ensure that the bore and chamber are clean and dry and free from any obstruction
- f) Learn and understand the operating systems and safety features of your rifle. Do not rely on any safety mechanism to replace these safe use procedures.
- g) Keep your weapon out of the reach of children.
- h) Properly maintain your rifle.
- i) Use only factory made ammunitions which are manufactured according to the caliber of the rifle and the specifications of CIP or SAAMI.
- j) Do not use alcoholic beverages, drugs or any medicine that can cause attention deficit before or while using your weapon.
- k) Immediately unload your rifle after use. Do not store your rifle loaded.
- l) Do not make any mechanical changes to your weapon.
- m) Always request professional assistance from a qualified gunsmith for repair.
- n) Ensure that your rifle and ammunition are not used by unqualified persons.
- o) Always store your rifle and ammunition separately.
- p) Ensure that the chamber is empty, while training and checking the functions of your rifle.
- q) Always assume that every rifle is loaded and ready to be fired. Even if you have opened and checked the chamber and ensured that your rifle is empty, always handle your rifle as if it were loaded.
- r) Load your rifle only before using.
- s) Push the safety of your rifle to the safety off position, only when you are ready to fire. Keep the muzzle pointed in a safe direction. Know your target and what lies beyond target
- t) Check the area, where you are shooting before each shot. Aim only at targets which you are able to see clearly
- u) Always use protective glasses and hearing protection, while shooting.

NOMENCLATURE

Please see Picture 1, 2,3,4 and 5 of the Page I.

A Receiver

A1 Picatinny Rail

A2 Bolt Release Lever

B Bolt

B1 Bolt Handle

B2 Bolt Shroud

B3 Bolt Body

C Barrel

D Trigger Assembly

D1 Trigger Guard

D2 Trigger

E Chassis

E1 Grip

E2 Short Rail

F Magazine

F1 Magazine Button, Right

F2 Magazine Button, Left

G Stock

G1 Buttpad

G2 Cheek Piece

H Safety

H1 Safety Button

H2 Cocking Indicator

DESCRIPTION

ALR is a manual operation bolt action system with magazine fed rifle and it has a reinforced aircraft grade aluminum chassis.

ASSEMBLY OF PACKAGED FIREARM

Your Bolt Action rifle's bolt group will be disassembled inside the case or box. Follow the steps below in order to complete the initial assembly.

- Remove the magazine from the rifle. (Picture 6)
- Ensure that the rifle is unloaded and that the chamber and bore are clean from oil and other debris.
- Push the safety button to the "Safety Off, Ready to Fire" position (Picture 10).
- Place the front part of the bolt assembly group into the rear of the receiver (Picture 7).
- Push the bolt assembly into the receiver (Picture 8) (The click sound indicates the spring loaded bolt stop has entered into its groove in the bolt).
- Slide the bolt assembly forward until it stops and rotate the bolt handle downwards.
- In this position, the bolt is in the ready to fire position. The rear of the firing pin will protrude from the bolt sleeve when the firing pin is held to the rear by the cocking piece (Picture 29). The red ring around the end of the firing pin signifies the rifle is cocked.

OPERATION OF THE SAFETY

The safety has 3 positions. (Picture 9, Picture 10, Picture 11) When the rifle is fully assembled and the bolt handle is rotated into the lowest position, you can move the safety button between the three separate "Safety On Bolt Locked", "Safety On" and "Safety Off, Ready to Fire" positions.

SAFETY OFF (READY TO FIRE)

When the safety button is pushed fully forward (towards the direction of the arrow), the rifle is ready to be fired (This position is indicated when a red dot is visible) (Picture 9).

SAFETY ON

When the safety button is pulled rearward to the middle position, the trigger is blocked and the rifle cannot be fired (This position is indicated when only a white dot is visible) (Picture 10).

SAFETY ON AND BOLT LOCKED

When the safety button is pulled back (towards the direction of the arrow) until it stops, while the bolt handle is in the lowest position, the trigger is blocked and the bolt is locked in the receiver (Picture 11) (This position is also indicated with a white dot).

WARNING: Always keeping the safety button in the "Safety On" positions will help minimize potential accidents. Do not rely solely on the safety. Practice safe gun handling at all times.

WARNING: When your rifle is cocked and ready to be fired, the cocking indicator is behind the bolt assembly with red sign. When you see this indicator, you move like the rifle is ready to be fired and loaded.

LOAD CHECK

WARNING: Never check if the barrel of your rifle is blocked or needs cleaning by firing it. If the barrel is even partially plugged with water, dirt, oil or other debris, it can cause extreme pressure, and this situation can cause serious injuries and even death.

- Always check the barrel of your rifle for obstructions, oil and other debris, before assembling and prior to firing the rifle.
- While checking the rifle, always point the muzzle in a safe direction and keep your finger out of the trigger guard.
- Push the safety button to the "Safety On" position (Picture 10). Unload the rifle (See "Unloading Rifle"). Remove the bolt assembly from the rifle (See "Removing The Bolt Assembly From The Rifle"). Visibly inspect the bore. Look from the back of the receiver through to the muzzle.
- If the barrel of your rifle is plugged or contains oil or any other debris, you will need to clean the barrel with a barrel cleaning kit. Always clean the barrel by passing the rod through from the receiver towards the muzzle. Never pass the rod through the barrel from the muzzle end as this can damage the crown of the barrel and degrade accuracy.
- If there is any obstruction or debris which cannot be easily removed with the barrel cleaning kit, you should ask for assistance from a qualified gunsmith.

AMMUNITION

The caliber of the rifle is engraved on the barrel and receiver. Use only factory made ammunitions which are manufactured according to the caliber of the rifle and the specifications of CIP or SAAMI.

WARNING: Before loading your rifle, be sure that there is no crack, damage or any other unusual situation on your ammunitions.

LOADING AND FIRING

LOADING THE RIFLE

WARNING: Using of incorrect or improperly loaded ammunition can damage your rifle due to extreme pressure. This can result in serious injuries or fatal accidents. Therefore, only use factory ammunition loaded to CIP or SAAMI specifications.

WARNING: Using a cartridge of the wrong caliber or type for your rifle can result in damage or can cause serious injuries to the user or bystanders. When you are firing, be certain you are using only ammunition, of the correct caliber and type.

- Always point the muzzle in a safe direction and keep your finger out of the trigger guard.
- When the bolt assembly is installed in the rifle, keep the safety button in the "Safety On and Bolt Locked" position until ready to fire. (Picture 11).
- Load your magazine (Picture 12). Place the loaded magazine in the rifle (Picture 14).
- Get into position to fire your rifle. Be sure to clearly see your target. Be certain your target and what is beyond it are in a safe direction.
- Slide the safety button from the "Safety On and Bolt Locked" position to the "Safety On" position (Picture 10).
- Pull up on the bolt handle rotating it upwards until it stops. Pull it fully rearward until it stops against the bolt stop. Push the bolt handle forward from its most rearward position. As you continue to push the bolt forward the bolt will push the cartridge on top of the magazine into the chamber.
- Slide the bolt assembly forward until it stops, then rotate the bolt handle down until it stops. Your rifle is loaded and ready for firing.
- Until you are aiming at a safe target keep your finger away from the trigger. Keep the safety button in the "Safety On and Bolt Locked" position (Picture 11).

WARNING: When cycling the bolt for repeated rapid firing, remember that the bolt must be pulled rearward until it stops against the bolt stop and then forward and down fully in order to load the chamber correctly.

LOADING THE MAGAZINE

- Crawl the cartridge onto the magazine follower by bearing it to magazine lips (Picture 12). To feed next round, press on existing cartridge and repeat the process.
- Repeat this process until the magazine receives the last cartridge. If necessary, position the cartridges by pushing from the front towards the back so that the rear of the cartridge fits against the magazine's body.

CAUTION: Do not overload your magazine beyond its capacity. There might be functioning issues and ham your magazine.

ASSEMBLING THE MAGAZINE

WARNING: Ensure that the chamber is empty and clean from oil and other foreign debris.

- Ensure the bolt is fully seated in the receiver and the bolt handle is in the lowest position.
- Push the safety button to the "On Safe and Bolt Locked" position (Picture 11).
- Place the magazine into the magazine well. Press on the bottom of the magazine until the magazine seats into the top button sockets and a click sound is heard (Picture 14).

FIRING

WARNING: Never touch the trigger unless you have identified and taken aim at a safe target. Unintentional firing can cause serious injury or death or damage to unintended targets.

WARNING: If the safety button is not in either the "Safety On" or "Safety On and Bolt Locked" position, the rifle is ready to fire. Do not rely solely on the safety. Do not touch the trigger until you are ready to fire.

WARNING: When your rifle is cocked and ready to be fired, the cocking indicator is behind the bolt assembly with red sign. When you see this indicator, you should move like the rifle is ready to be fired and loaded.

WARNING: While repeating shots, in order to proper feeding, you should full the bolt completely backward until it stops to make sure rifle has fully cycled each time.

Always point the muzzle in a safe direction and keep your finger off the trigger and out of the trigger guard.

- Place the recoil pad of the stock on your shoulder. With the scope or the iron sights safely and carefully aim at the target, which you recognize clearly.
- Slide the safety button of the rifle, which is loaded with a cartridge, of the correct caliber and type, to the "Off Safe Ready to Fire" position (Picture 9).
- Pull the trigger by applying an increasing stable pressure.

UNLOADING THE RIFLE

- Always point the muzzle in a safe direction and keep your finger out of the trigger guard. Push the safety button to the "Safety On" position (Picture 10).
- Lift the bolt handle and pull the bolt back until it stops (Picture 13).
- If there was a fired or unfired cartridge in the chamber pulling the bolt rearward should have extracted the cartridge from the chamber and ejected it from the receiver. In order to be sure that there is no loaded or empty cartridge in the chamber, check the chamber visually and by hand.
- If there is a loaded cartridge or an empty shell remaining in the chamber, remove the bolt assembly from the rifle (See "Removing The Bolt Assembly From The Rifle") and bring your rifle to a qualified gunsmith. (Until your rifle is repaired, do not place the bolt assembly back into the receiver.)
- If there are unfired cartridges in the magazine, remove the magazine from the rifle (Picture 6).
- While pressing on the cartridges with your finger push the cartridge, on the top, from back to front and release them from the magazine, (Picture 6). (Be careful that the cartridges, removed from the magazine, do not fall on the ground. Dropped cartridges can be damaged or get dirty. This could cause problems in feeding cartridges from the magazine or into the chamber.)
- Visually and manually inspect the chamber again. Push the bolt assembly forward and rotate the bolt handle down (Picture 15). Finally, put the magazine back to its place.

WARNING: Check the chamber and magazine at least "twice" before sliding the bolt assembly forward and closing it. Otherwise, any cartridge in the chamber can be fired

UNLOADING THE MAGAZINE

- Push the safety button to the "On Safe and Bolt Locked" position (Picture 11).
- Place the magazine into the magazine well. Press on the bottom of the magazine until the magazine seats into the top button sockets and a click sound is heard (Picture 6).

DISASSEMBLING THE MAGAZINE

- Always point the muzzle in a safe direction and keep your finger out of the trigger guard. Push the safety button to the "Safety On" position (Picture 10).
- While pressing on the cartridges with your finger push the cartridge, on the top, from back to front and release them from the magazine, (Picture 16). (Be careful that the cartridges, removed from the magazine, do not fall on the ground. Dropped cartridges can be damaged or get dirty. This could cause problems in feeding cartridges from the magazine or into the chamber.)

DISASSEMBLY AND ASSEMBLY OF THE RIFLE COMPONENTS

DISASSEMBLY OF THE RIFLE

- Before starting to disassemble your rifle, familiarize yourself with the general appearance of the rifle and location of the parts by examining the assembly diagrams and parts lists.
- Slide the safety button to the "Safety On" position (Picture 9).
- Unload the rifle (See "Unloading The Rifle").
- Remove the magazine from the rifle (See "Unloading The Magazine").
- Rotate the bolt handle upwards and pull it back until the bolt assembly stops against the bolt stop (Picture 13).

WARNING: Check the cartridge chamber visually and by hand until you are sure that there are no cartridges in the rifle.

REMOVING THE BOLT ASSEMBLY FROM THE RIFLE

- Rotate the bolt handle up until it stops and pull it rearward until the bolt stops against the bolt stop (Picture 13).
- Press the bolt stop release button (Picture 17) and keep pressing until the bolt assembly is completely removed from the receiver (Picture 18).

DETAILED DISASSEMBLY OF BOLT ASSEMBLY

WARNING: More detailed disassembly of the rifle parts is not recommended. If more than one part needs to be disassembled from each other, please receive help from a certified gunsmith.

- Push the firing pin assembly inside the bolt body as can be seen in Picture 19.
- While continuing to push on the rear of the firing pin assembly, move the firing pin assembly 180 degrees clockwise by holding the bolt stable, until the firing pin assembly is free from the bolt body (Picture 20).
- Separate the firing pin assembly from the bolt body by pulling it rearward (Picture 21).

DISASSEMBLY OF STOCK

- Unscrew the front and rear receiver screws counter clockwise using a 5mm hex wrench (Picture 22).
- Remove the stock by pulling it from the barrel and receiver. (Picture 23)

ASSEMBLY OF THE RIFLE

DETAILED ASSEMBLY OF THE BOLT ASSEMBLY

- Slide the firing pin assembly into the bolt body (Picture 24).
- Push the firing pin assembly inward while holding the bolt stable. While pushing firmly on the rear of the firing pin assembly, rotate the firing pin assembly 180 degrees counter clockwise until it seats into the bolt body and makes a "click" sound (Picture 25).

ASSEMBLY OF STOCK

- Carefully position the receiver and barrel in the stock (Picture 27).
- Tighten the front and rear receiver screws to the trigger guard with a 5mm hex key (Picture 28). It is recommended that these screws be torqued to 7Nm or 62 inch pounds of torque.

INSTALLING THE BOLT ASSEMBLY

WARNING: Ensure that the chamber is empty and clean from oil and other foreign matter.

- Ensure that the chamber is empty and clean from oil and other foreign debris.
- Slide the safety button to the "Safety On" position (Picture 10).
- Insert the front of the bolt assembly into the rear of the receiver with the bolt handle on the right side of the receiver (Picture 7).
- Continue to slide the bolt assembly forward into the receiver. The click sound indicates the bolt stop entered into its groove in the bolt body (Picture 8).
- Slide the bolt assembly forward until it stops and rotate the bolt handle downwards.
- At the position which the bolt handle cannot move down further, the bolt assembly is closed and ready to fire (Picture 29)

WARNING: While mounting the bolt assembly to the rifle, make sure that the magazine is not attached to the rifle.

RIFLE ADJUSTMENTS

ADJUSTMENT OF TRIGGER PULL WEIGHT

WARNING: Ensure the chamber is empty.

- Push the safety button to the "Safety On" position (Picture 10).
- While positioning your rifle, ensure that you are pointing the muzzle of the rifle in a safe direction.
- Remove the magazine from the rifle (Picture 6). Cock your rifle as moving the bolt backward then forward. (Picture 26)
- Turn the safety button to the "Safety Off, Ready to Fire" position (Picture 9).
- To increase the trigger, pull weight, turn the screw, located inside the trigger guard in front of the trigger, clockwise with the 2.5mm hex key (Picture 30). To decrease the trigger, pull weight, turn the screw counter-clockwise. You can adjust the trigger pull weight from 800 gr (1,7lbs) to 1600 gr (3,5lbs)

LENGTH OF PULL ADJUSTMENT

- Slide the safety button to the "Safety On and Bolt Locked" position (Picture 11).
- Press and hold the Stock Adjustment Button. Grab the buttpad and move it forward or backward (Picture 31).
- After reaching to desired position, release the Stock Adjustment Button to lock it in place. (Picture 32). In order to make sure it is locked, try to push buttpad forward gently. If it is not moving, adjust is completed safely (Picture 33).

BUTTPAD ELEVATION

- Slide the safety button to the "Safety On and Bolt Locked" position (Picture 11).
- Rotate the Buttpad Lever counter clockwise. (Picture 34)
- Elevate the Buttpad upward or downward to desired position (Picture 35).
- Rotate the Buttpad Lever clockwise completely to lock it back.

CHEEK PIECE ADJUSTMENT

- Slide the safety button to the "Safety On and Bolt Locked" position (Picture 11).
- In order to adjust the cheek piece, loosen the cheek piece nuts by rotating them counter clockwise. (Picture 36), according to your request, adjust the cheek piece and cheek piece nuts by rotating them anti counter clockwise (Picture 37).
- You can elevate the cheek piece to upward or downward by pushing or pulling. You can also move it forward or backward together with its slide. (Picture 37).

ROUTINE CLEANING AND MAINTENANCE

In order to ensure that your rifle works safely and fulfills its functions completely, protect it against powder residues, dirt, dust and humidity after each use or prior to long-term storage. Always clean and oil it so as to prevent corrosion. During cleaning, check that the rifle components work in accordance with these instructions.

The basic cleaning materials include a ramrod of appropriate size, barrel cleaning brush and soft cloth patches, small soft bristle brush, gun cleaning solvent, quality gun oils and lint free rags.

Use a threaded ramrod to which you can attach jags and brushes to aid in cleaning the bore of your rifle.

In order to clean your rifle properly, you must first disassemble the rifle (See “Disassembly And Assembly Of The Rifle Components”).

CAUTION: Apply solvent solutions and oils in accordance with manufactures instructions. Do not spray solvents or oils on ammunition. Solvent solutions or oils can degrade the primer and gunpowder and this can prevent the ignition of the ammunition.

However, If there is sufficient energy to push the bullet into the barrel but not through it, this obstacle would cause subsequent fired rounds to damage the rifle and cause serious injuries to the shooter and any bystanders

CLEANING OF THE BARREL

- Remove the bolt assembly from the rifle (See “Removing The Bolt Assembly From The Rifle”)
- Attach the barrel cleaning brush of appropriate size to the ramrod and add solvent solution on the brush.
- Push the ramrod with brush a couple of times from end to end up to the muzzle starting from the chamber. Exit the brush from the muzzle before pulling the brush back through the barrel.
- Place a clean patch on the tip of the ramrod and starting from the chamber end of the barrel push the patch through the barrel until it exits the muzzle. Then remove the dirty patch from the ramrod and pull the rod back out of the chamber.
- Repeat the previous step until a clean patch comes out of the muzzle.
- Clean any solution residue on the tip of the muzzle by using a clean piece of rag.
- Using a good quality gun oil place a lightly oiled patch on the tip of the ramrod, and insert the ramrod from the chamber and push it through the barrel until it comes out of the muzzle. Remove the oiled rag from the tip of the ramrod and pull the ramrod through the barrel until it comes out of the receiver.

WARNING: Residual oil at chamber can cause over pressure or blockage at barrel. That might damage your rifle and cause serious injuries to shooter or third person nearby. Make sure to clean chamber properly.

CLEANING OF THE BOLT ASSEMBLY

- Disassemble the Bolt Assembly (See “Detailed Assembly Of The Bolt Assembly”).
- Clean all the pieces in the bolt assembly with a solvent solution and later dry it with a clean patch or a lint free rag. You can clean the unreachable areas of the bolt assembly and firing pin spring by using a small brush.
- Oil the assembly by using a mild coating of gun oil.

CLEANING OF THE EXTERIOR SURFACE

- Clean all the surfaces you can reach on the barrel and receiver with a clean lint free rag soaked in solvent solution. (A clean toothbrush will help you clean the parts and corners you cannot reach with the rag.)
- Clean off all the solvent solution you applied with a clean and dry lint free rag.
- With good quality gun oil on a clean lint free rag apply it lightly on the barrel and outer surfaces of the receiver by making sure no excess oil is cumulated.

CLEANING OF THE MAGAZINE

- Apply solvent solution on the outer surface of the magazine and magazine follower with a lint free clean rag and dry it with a clean rag immediately after.
- With good quality gun oil on a clean piece of rag apply it lightly on all the surfaces of the magazine you can reach

CLEANING OF THE STOCK

Generally, it is sufficient to wipe the stock with a clean and dry rag. However, if you hunted or shot in rainy weather, you need to clean the stock completely.

PROTECTION FROM RUST AND REPAIR

During normal rifle maintenance, after cleaning, leave your rifle in a room temperature room from 2-3 hours so as to let all metal surfaces dry. After drying, apply plenty of high quality rifle oil on all the metal parts of your rifle and clean the excess oil with a clean and dry rag. If there is rust on the surface, its cause is due to extreme humidity. You can clean the rust on the metal surfaces by using a stiff plastic cleaning brush and a solvent solution. If the rust is not cleaned in this way; you can get assistance from a qualified gunsmith. In order to prevent irreparable rust damage to your rifle, you must take immediate precautions. Seek help from a qualified gunsmith.

PERIODIC MAINTENANCE

In rifles used constantly, periodic maintenance should be done more frequently after 1 year. Also periodic maintenance should be carried out to prevent corrosion in long-term stored rifles.

- Follow the steps of Routine Cleaning And Maintenance.
- Clean the dirty, rust and deposits remaining in the specified parts fine with cotton patch lubricated with care oil.
- Use a clean and dry cotton patch to remove remaining oil waste after cleaning.
- Please lubricate the all parts with a thin layer of oil.

CAUTION: You make sure that the tools use for cleaning such as patch or brush are products that will not damage rifle parts.

OPERATIONAL CHANGES OR DAMAGES

WARNING: Do not make any mechanical revision on your rifle.


If you notice any changes in the functioning of your firearm, **STOP SHOOTING IMMEDIATELY!** You should take the rifle to an authorized gunsmith or ship it to the manufacturer/importer if you experience any occurrences similar to the following: the functioning of the trigger mechanism has changed, the rifle does not fire the cartridge, safety does not operate, there is any cartridge malfunction or a changed sound when firing.









WARRANTY








Your rifle has warranty. Please contact with your distributor to learn details and legal procedure of your country.



















SPARE PART MAP

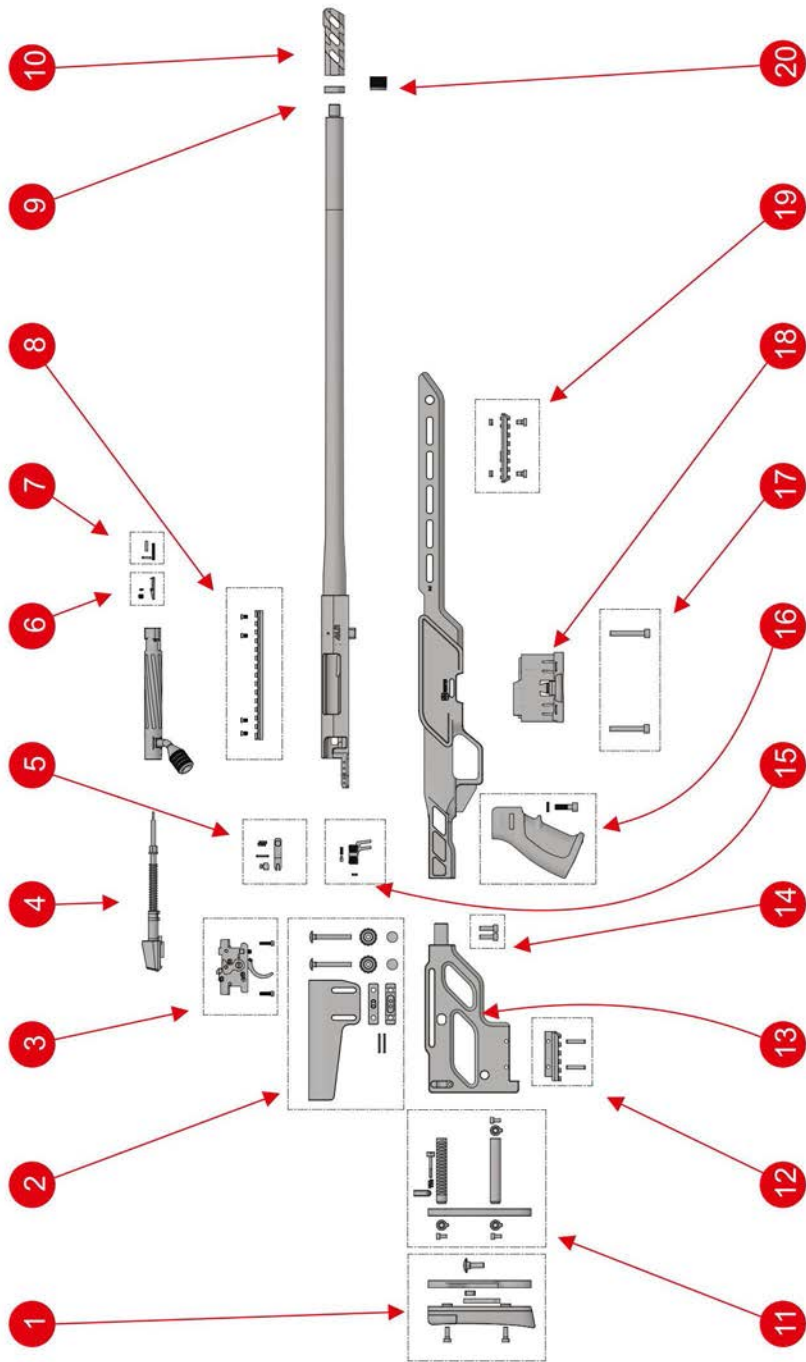

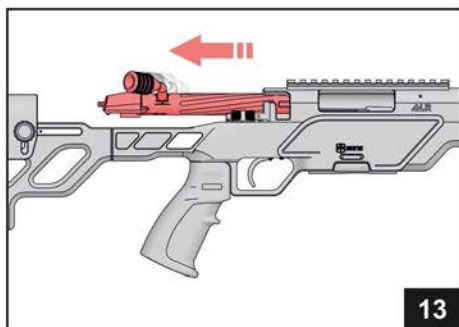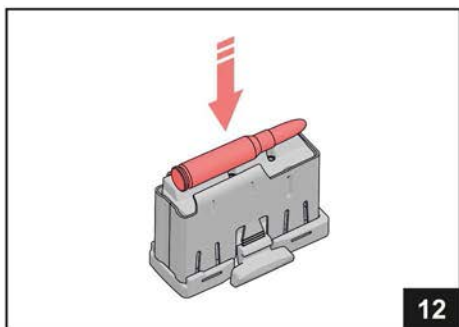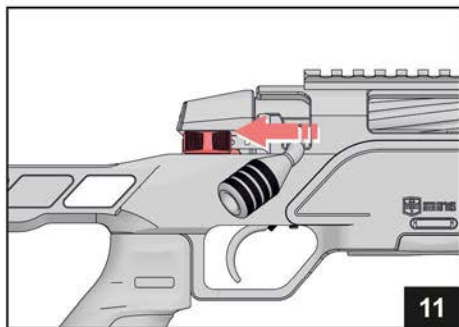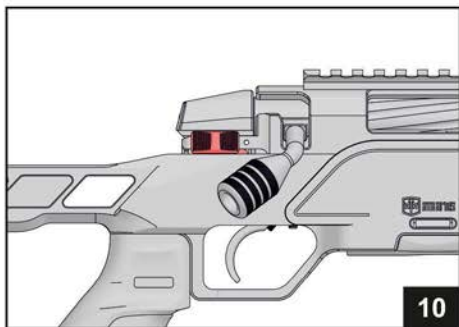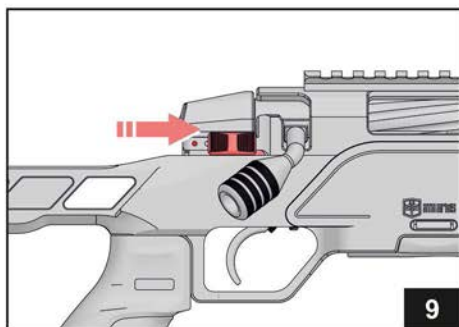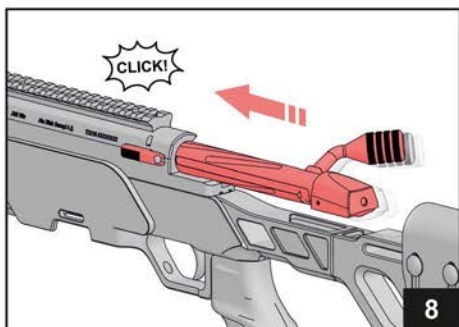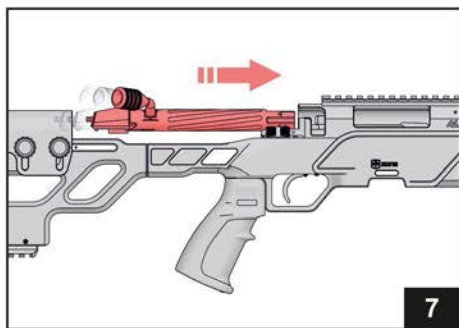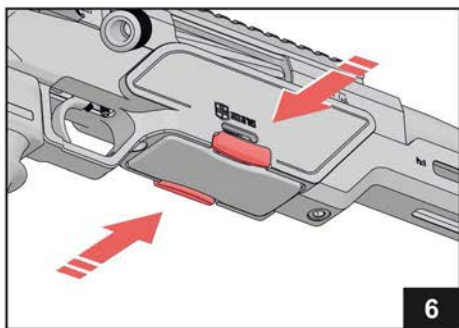

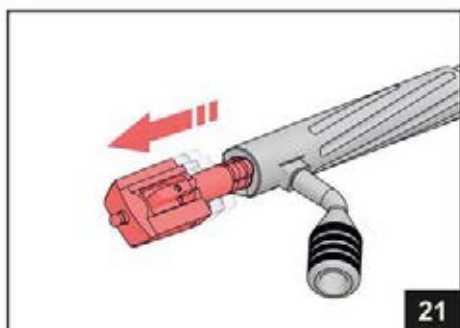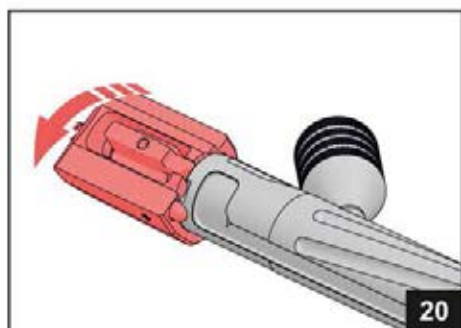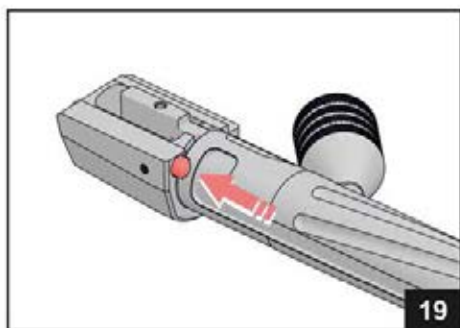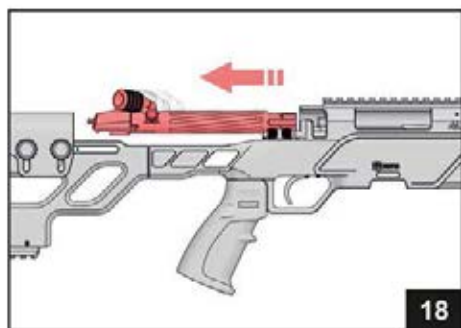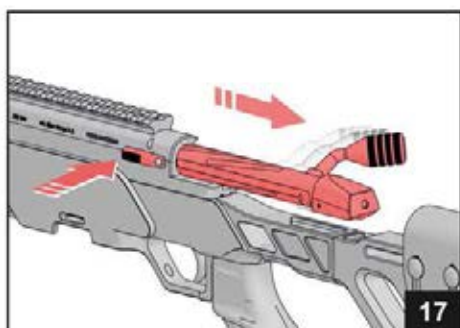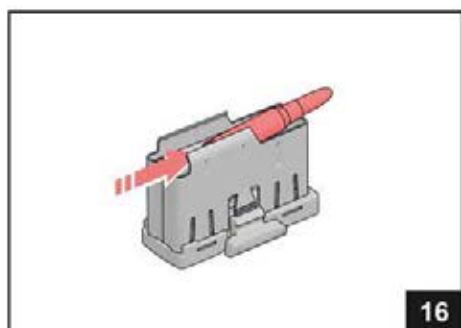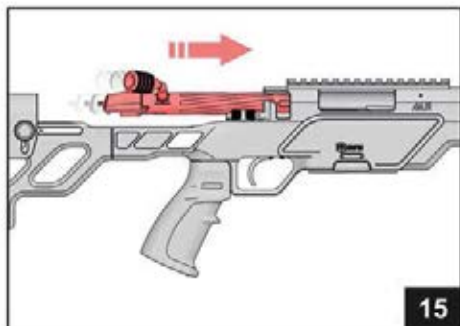

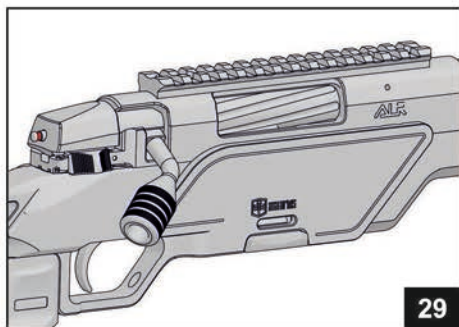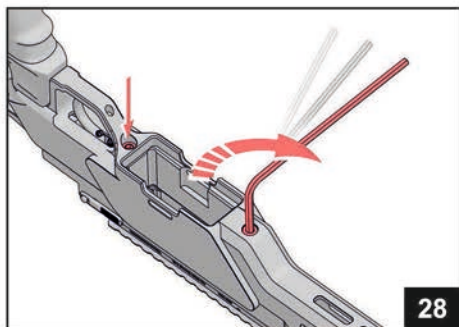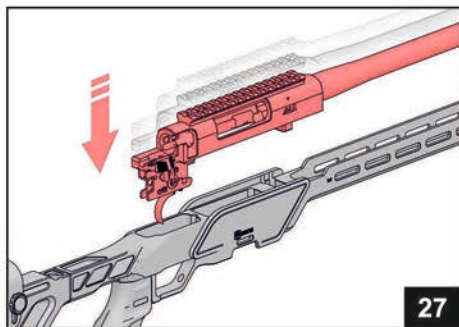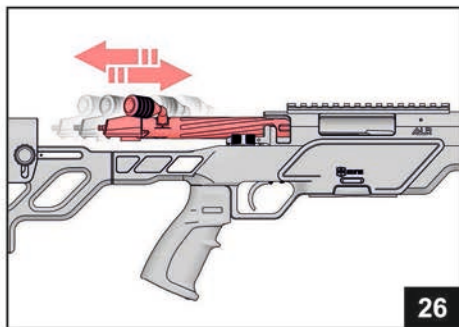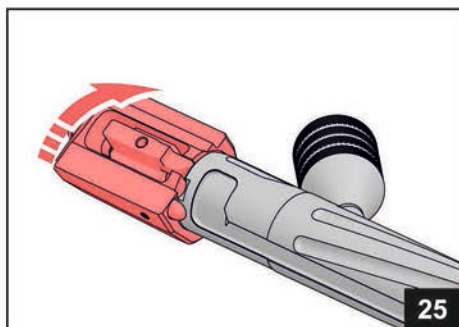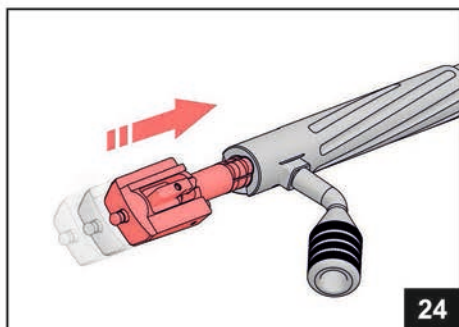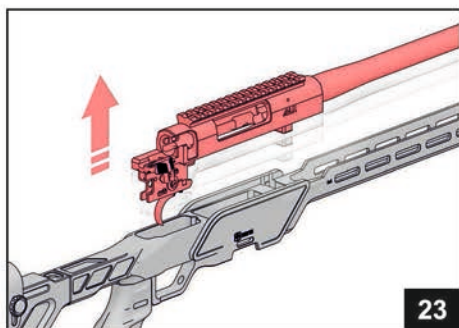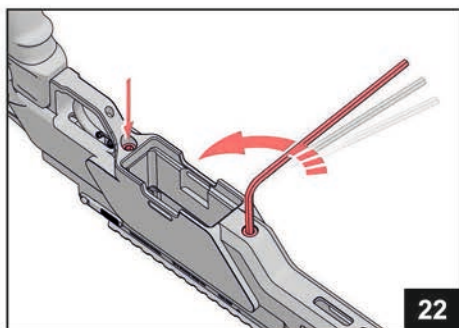

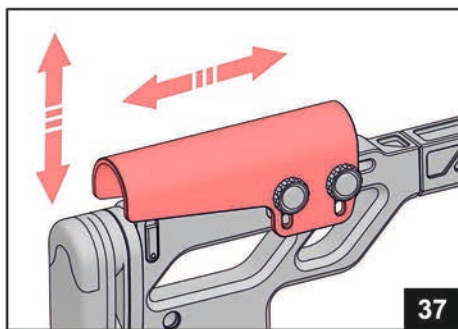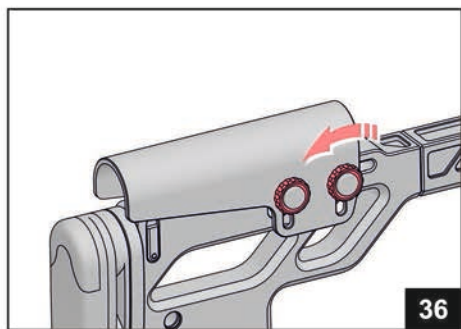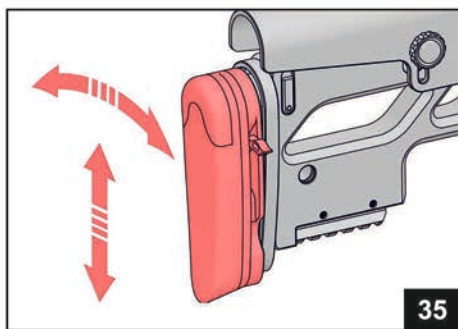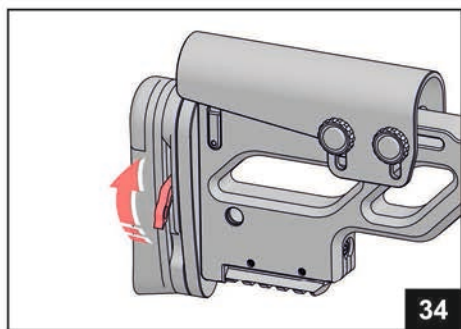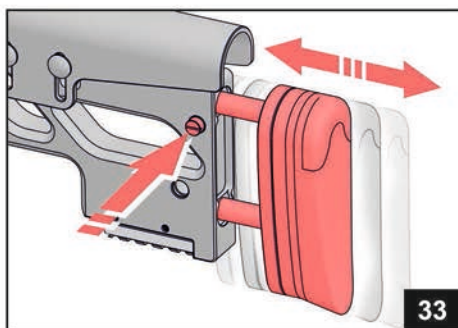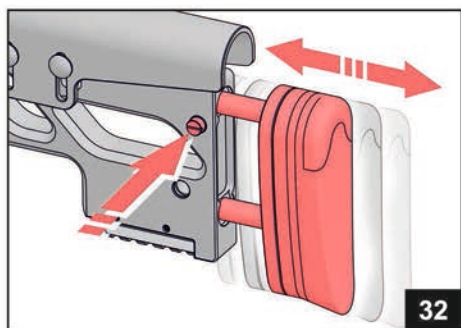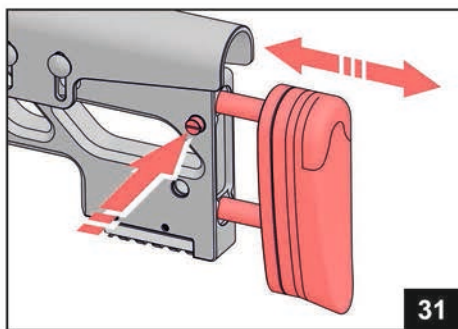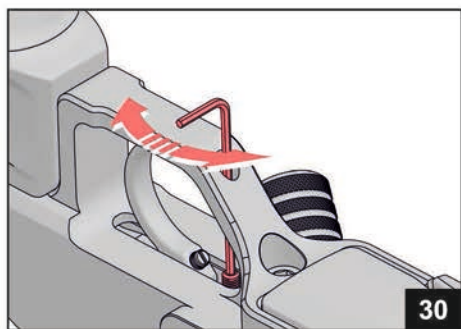






 
ATA Silah San. A.Ş.

Alemdağ Mah. Elmalı Sk. No:5/A Çekmeköy 34794
İstanbul - Türkiye T: +90 216 466 45 68 F: +90 216 466 45 71

 ataarms.com

 [ataarmstr](https://www.facebook.com/ataarmstr)

 [ataarmstr](https://www.instagram.com/ataarmstr)

 [ataarms](https://www.youtube.com/ataarms)