

## Owner's Manual



# RAPiD® SAFE

*With patented RFID technology.*

## AR GUNLOCKER

Item No. 98190



## AR GUNLOCKER XL

Item No. 98191





## READ THIS FIRST

**Warning:** NEVER store a loaded firearm in the Hornady Security® RAPID® Safe under any circumstances. The risks associated with storage of a loaded firearm include, but are not limited to, unintentional discharge upon insertion or removal of the firearm. Unintentional discharge may result in bullet and safe fragments dispersing in multiple directions, which may cause serious injury or death. Hornady Security® is not liable for any misuse of the RAPID® Safe.

**Warning:** No safe is entirely secure. The RAPID® Safe is only as secure as your maintenance of the keys, code and RFID tags. You are solely responsible for maintaining your keys, code and RFID tags. Keep your keys and RFID tags in a secure location at all times. Store your RAPID® Safe in a secure location away from your keys and RFID tags. Hornady Security® is not liable for unauthorized access, including damage to, or loss of property, or personal injury. Again, NEVER store a loaded firearm in your Hornady® RAPID® Safe, as this may result in unauthorized access to the loaded firearm.

**Warning:** Except as expressly provided in the RAPID® Safe Limited Warranty, Hornady Security® is not liable for any expense or damage associated with your inability to open the RAPID® Safe. Electronic systems may fail. Verify that the keys furnished operate the lock. Keep your keys in a secure location at all times. For your security, Hornady Security® WILL NOT send replacement keys.

**Warning:** Hornady Security® is not liable for any loss, theft, or damage to personal property. The RAPID® Safe is not intended to protect the contents from fire, water, humidity, or other environmental conditions. Do not, under any circumstances, return the RAPID® Safe to Hornady Security® with any personal property inside.

## Important Information

- *RFID Tag* refers to the chip in any of the RFID “keys” included with the RAPID® Safe (watchband tag, key fob or decals). You may also purchase additional RFID tags.
- For trouble-free operation of your RAPID® Safe, please read and understand all instructions before use.
- Questions? Call our tech line at 800-338-3220.
- Never store loaded firearms in the RAPID® Safe. Follow local laws for firearm storage.

# Table of Contents

**Warnings and Important Information**..... Page 1  
**Items Included**..... Page 2  
**Setup and Operation** ..... Page 3  
**Warranty**..... Page 9  
**Product Registration and Service** ..... Page 10  
**Frequently Asked Questions** ..... Page 10

## Items included with your RAPiD® Safe

- 1. Wall Power Supply**  
(Item No. 399157)
- 2. One (1) RFID Watchband Tag**  
(Item No. 98159)
- 3. Two (2) RFID Adhesive Decals**  
(Item No. 98168)
- 4. One (1) RFID Key Fob Tag**  
(Item No. 98161)
- 5. Two (2) Circular Barrel Keys**
- 6. Security Cable**  
(Item No. 970010)
- 7. Owner's Manual**
- 8. Warranty Card**



### RAPiD Safe AR Gunlocker

Item No. 98190  
Exterior: 42" x 15.25" x 6.75"  
Interior: 40.5" x 13.5" x 5.5"  
Weight: 55 lbs.  
Power: 12V 1.0A or four (4)  
AA batteries (*not included*)

### RAPiD Safe AR Gunlocker XL

Item No. 98191  
Exterior: 42" x 15.25" x 10.0"  
Interior: 40.5" x 13.5" x 8.75"  
Weight: 62 lbs.  
Power: 12V 1.0A or four (4)  
AA batteries (*not included*)

# RAPiD® Safe Setup and Operation

Congratulations on purchasing the technologically advanced RAPiD® Safe. You have taken a significant step in securing the safety of your handgun.

 
 
To achieve the best experience with your RAPiD® Safe, please read all instructions carefully, and understand its operation.

**After the RAPiD® Safe has been taken out of the box, please check to be sure both circular barrel keys fit and unlock your RAPiD® Safe. Contact Hornady® at 800-338-3220 if the keys do not work. Store keys in a secure location outside the safe.**

## AC Power

The RAPiD® Safe is designed to be powered by either the AC power supply or four AA batteries.

To connect the AC power supply, first open the safe with the circular key. Locate the square hole in the back of the safe and insert the power cord into this hole. Route the power cord under the foam and toward the front of the safe. Plug the power cord into the jack on the back of the door. Use the integrated cord hook in the door to help retain the power cord.

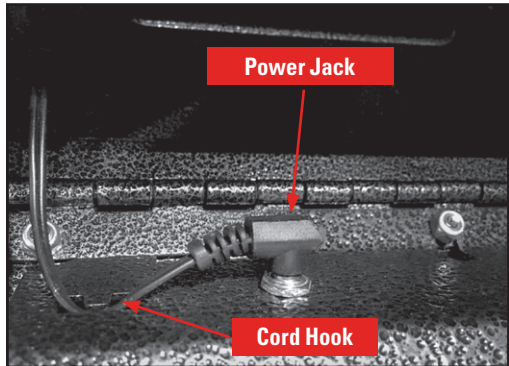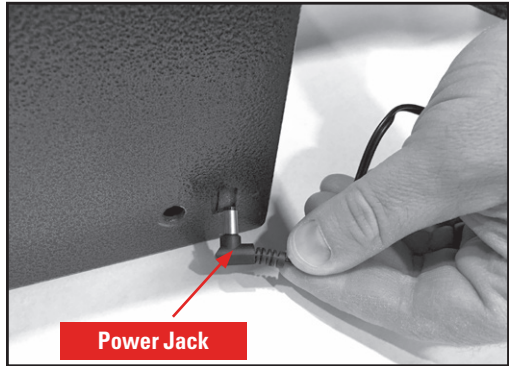

## Keypad Tones On/Off

Press and hold the “H” button on the keypad for 5 seconds until the light turns off to toggle sound on and off.

# Batteries

 
To install batteries, open door with barrel keys and locate battery compartment on the back of the door. Remove battery cover and insert four (4) high quality AA batteries. Replace all batteries at the same time.

### To check battery level:

1. Disconnect from AC power source.
2. Press and release "H" button on the lid.
3. The LED light on the "H" button will flash.
  - a. Flashing Green – Good battery
  - b. Flashing Yellow – Low battery
  - c. Flashing Red – Dead battery

4. After 10 seconds the safe will return to normal operation.

**NOTE:** Replace batteries every twelve months or if they become weak.

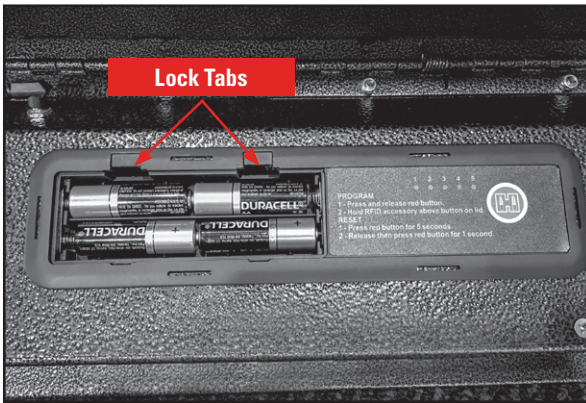


# Battery Power Mode

When the RAPiD® Safe is unplugged, and is operating on battery power, **you must press any button on the lid to activate the reader.**

Pressing any **button on the lid** causes the system to go from battery saving mode to ready status.

 **For example:** To open your safe with an RFID tag, while the system is running on battery power, first press any **button on the lid** to bring it to ready status. Place your RFID tag within 1" of the center of the RFID reader to open the safe.

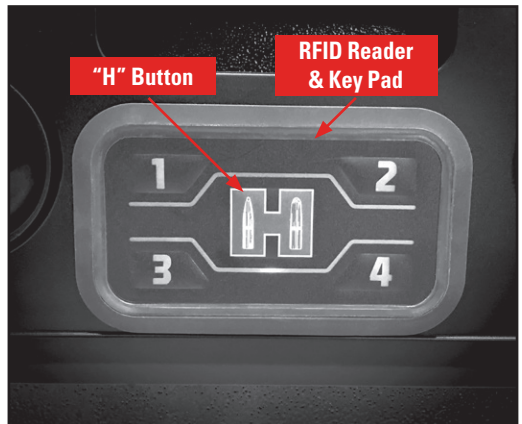

# How to Program Your RFID Tags

Your RAPiD® Safe includes three (3) styles of RFID tags, including:

- 1 Watchband Tag
- 1 Key Fob
- 2 Decals

*\*Additional styles can be purchased separately.*

**The RAPiD® Safe can store up to 5 tags.**

**To program these tags:**

1. Open the RAPiD Safe with either the key or a previously programmed RFID tag or key code. (The key code safe does not ship with pre-programmed RFID tags. A RFID tag must be programmed to work with this safe.)

2. Locate the red program button. Press and release the button to begin programming a RFID tag. The first available program location will begin to blink.

 
3. **Hold the RFID tag within 1"** of the illuminated RFID reader area on the top of the safe lid. If the programming was successful, the safe should beep two times and the available slot should go from blinking to solid red for approximately ten seconds.

**NOTE:** *If the user attempts to program a RFID tag that is already stored into the safe, the safe will beep three times and the RFID tag will not be programmed into the duplicate slot. The RFID tag can only be programmed into one location.*

4. Verify the RFID tag is programmed by holding the tag over the RFID reader with the lid open. The motor should cycle after each scan.

5. If the RFID tag does not program into the safe, the program function will time out after ten seconds and the safe will return to normal operation. If multiple attempts to program a RFID tag fails, please contact Hornady® at 800-338-3220.

6. One to five RFID tags can be programmed into the safe.

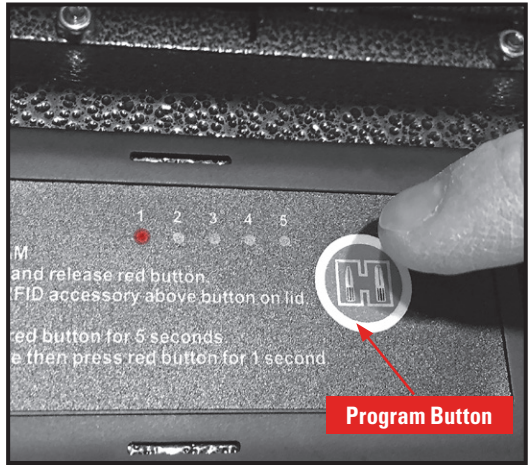



**NOTE:** Due to potential interference from the body (attenuation), the RFID watchband tag should be worn on the outside or bottom of the wrist and may need to be brought within 1-inch of the reader to activate the safe. The RFID reader will likely not read through the wrist.



**NOTE:** The RFID decal can be placed on a variety of objects. However, metal surfaces may cause interference and reduce the read distance. The integrated metal housing on some cell phones combined with potential interference from other wireless signals such as Bluetooth, NFC, etc., may reduce the read distance of the RFID decal.

Before adhering the RFID decal to a mobile phone, we recommend trying different locations on the back of the device to find the optimum read distance. Placing the decal on the outside of an accessory cover will also improve the read distance, but may cause excessive wear, resulting in a shortened life of the decal. When placing the decal on the inside of an accessory cover, DO NOT face it toward the mobile phone. The decal must face outward (away from the phone) to work optimally.

Before placing the RAPID Safe into service, verify the decal works properly under various conditions (i.e. the wireless apps on your mobile phone are on).

## How to Program Your Key Code

A single user defined 4 to 6 digit code can be entered into the RAPiD® Safe.

1. Open the RAPiD Safe with either the key or a previously programmed RFID tag or key code. The safe ships with a default code and should be reprogrammed before first use.
2. Locate the red program button to begin programming your key code. The first available tag location will begin to blink to indicate program mode.
3. With the lid open, enter a 4 to 6 digit code into the keypad on the lid. Press the “H” after entering your code. Verify your code is correct by re-entering your code and pressing “H”. The motor should cycle.
4. Your key code can now be used to open the safe.

**NOTE:** *Only one key code can be entered into the safe. If a second code is entered, it will override the previous code. \*\*A total of 5 RFID tags and 1 key code can be entered into the safe.*

## How to Remove All Tags From Safe

1. Open the RAPiD® Safe with either the key or a previously programmed RFID tag or key code. Locate the red program button. Press and hold the button for five seconds to erase all tags from the safe. All five red LEDs will begin to blink in sequence. (The safe does not allow individual tags to be removed. They must all be erased at one time. The intended RFID tags can then be reprogrammed back into the safe with the instructions above.)

**NOTE:** *To abort the erase procedure, press the “H” button on the lid of the safe or do not touch anything and the erase procedure will automatically abort after 10 seconds and return to normal operation. **Test RFID tags and the key code to confirm they are operational.***

2. To confirm erasing procedure, press and release the program button again. All five LEDs will blink three times to visually confirm all RFID tags have been removed. All RFID tags will no longer work until they are programmed back into the safe with the instructions in the “How to Program Your RFID Tags” section.



## Closing the Safe

The safe has a latch closure sensor that will illuminate the LED in the keypad when the lid is closed.

 
**Green – Latch has fully closed.**

**Blinking Red – Latch has NOT fully closed.**

To close the safe, hold the door closed while rotating the lock knob on the front to the “locked” position. Verify green light appears on the keypad.

## Security Cable

The RAPiD® Safe includes a security cable that can be looped around a stationary object. With the door open, feed the lug end through the loop end of the cable and then insert the threads of the lug into one of the round holes on the back of the safe. Thread the washer and nut onto the lug from the inside of the safe and tighten firmly.

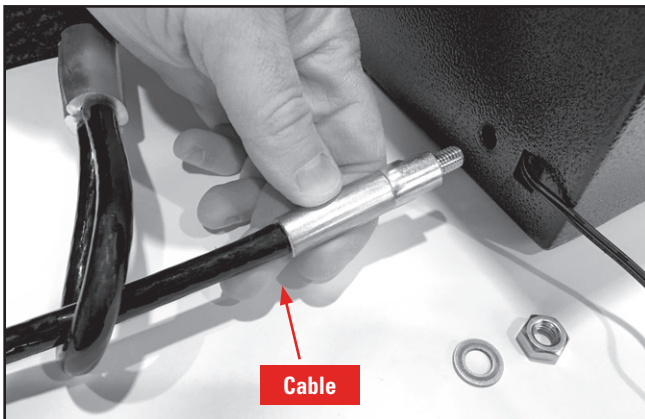


## Door Dampener Removal

If mounting the safe in a vertical or upright position, the door dampener should be removed to allow the door to open more freely.

Using a small pliers, remove the cotter pin and press the clevis pin out of the clevis to release the door dampener.

 **NOTE:** When mounted in the upright position (door on top), the lock will release with activation, but the door must be manually lifted open. In the horizontal or vertical position, the springs in the door should begin to open the door after activation.

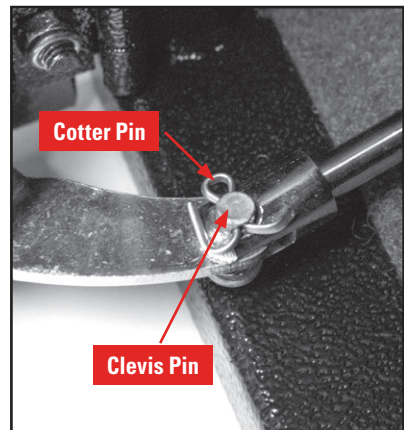

# RAPiD® Safe Limited Warranty

Hornady Security® warrants the RAPiD® Safe will, in normal use and service, be free from defects in workmanship or materials for one (1) year from date of purchase.

This Limited Warranty does not cover any of the following:

- (a) Damage, deterioration, or malfunction resulting from accident, negligence, misuse, improper installation, or lack of maintenance;
- (b) Any defects not discovered and reported to Hornady Security® during the one (1) year warranty period;
- (c) Usual and customary deterioration or wear resulting from normal use.

This Limited Warranty is not transferable and is enforceable by the original owner only. In the event that Hornady Security® receives notice from the original purchase of a warranty claim in conformity herewith, Hornady Security® will promptly undertake an investigation of such claim. If the warranty claim is covered by the Limited Warranty, Hornady Security® will, in its sole discretion, repair the defect(s) or replace RAPiD® Safe at the expense of Hornady Security®.

**Disclaimer of Implied Warranties.** EXCEPT AS IS OTHERWISE EXPRESSLY SET FORTH IN THE ABOVE LIMITED WARRANTY, HORNADY SECURITY® MAKES NO OTHER REPRESENTATIONS OR WARRANTIES OF ANY KIND, WHETHER EXPRESSED OR IMPLIED, BY OPERATION OF LAW OR OTHERWISE WITH RESPECT TO THE RAPiD® SAFE OR ANY COMPONENT PART THEREOF, INCLUDING WITHOUT LIMITATION ANY REPRESENTATION OR WARRANTY WITH RESPECT TO MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE OR USE.

**Limitation on Liability.** THE OBLIGATION OF HORNADY SECURITY® TO REPAIR OR REPLACE AS PROVIDED ABOVE SHALL BE THE SOLE AND ONLY REMEDY RESPECTING ANY DEFECT IN THE RAPiD® SAFE, OR ANY COMPONENT PART THEREOF. IN THE EVENT THAT THE FOREGOING REMEDY FAILS OF ITS ESSENTIAL PURPOSE, THE LIABILITY OF HORNADY SECURITY® TO PURCHASER SHALL NOT, IN ANY EVENT, EXCEED THE ACTUAL PURCHASE PRICE OF THE NON-CONFORMING GOODS; AND

**Limitation on the Nature of Damages.** HORNADY SECURITY® SHALL NOT, UNDER ANY CIRCUMSTANCES, BE LIABLE TO THE PURCHASER OR ANY THIRD PARTY FOR ANY SPECIAL, INDIRECT, INCIDENTAL, CONSEQUENTIAL, LIQUIDATED OR PUNITIVE DAMAGES OF ANY NAME, NATURE OR DESCRIPTION. HORNADY SECURITY® IS NOT RESPONSIBLE FOR DAMAGE TO OR THEFT OF THE RAPiD® SAFE, OR ITS CONTENTS.

# Product Registration and Service

You must register your RAPiD® Safe in order to obtain Warranty Service. Simply complete and return the enclosed product registration card or submit through our website by going to [hornady.com/warranties](http://hornady.com/warranties).

## To Receive Warranty Service

In order to report a warranty claim, call Hornady Security® at 800-338-3220 to request a return authorization number. Returns will not be accepted without prior return authorization by Hornady Security®. When a return authorization number has been obtained, be sure all contents have been removed from the RAPiD® Safe before sending it for service. Hornady Security® is not liable for any loss, theft, or damage to personal property.

## Post-Warranty Service Information

For issues concerning service after the Limited Warranty expires, contact Hornady Security® at 800-338-3220.

# Frequently Asked Questions

## I've lost my keys. Can I get a replacement?

For security reasons, Hornady® **WILL NOT** provide replacement barrel keys for the RAPiD® Safe. Consult a locksmith if needed.

## Where can I find the serial number?

The serial number is located on the back of the safe. Prior to mounting the safe, record the serial number for future reference.

## How long should the batteries last?

Quality batteries should last approximately 12 months, depending on use.

## How do I return my RAPiD® Safe for warranty work?

Call Hornady® at 800-338-3220 and one of our technicians will assist you.

## Why isn't my RFID watchband tag, key fob, or decals opening the safe?

- Be sure the RFID tag is programmed to your safe. The RAPiD® Safe allows five (5) RFID tags to be programmed for use.
- Check the power source. If the unit is plugged into an electrical outlet, the green LED light should be on. If the unit is on battery power, press the button on the top of the safe to bring the system to ready before placing the RFID tag on the reader.



This is a California-approved Firearm Safety Device that meets the requirements of Penal Code section 23655 and the regulations issued thereunder.

This product has been tested and certified to conform to ASTM F2456, Youth Resistant Firearms Container.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Instructional videos for Hornady Security® products are available at [hornady.com](http://hornady.com).



P.O. Box 1848, Grand Island, Nebraska 68802-1848  
308-382-1390 • 800-338-3220 • Fax: 308-382-5761  
[Hornady.com/contact](http://Hornady.com/contact)