

# TrekLite® Lock Box XXL

Item No. 95260

To open your new lockbox:

- The lock box ships with the default code 0-0-0-0. Align each digit along the center of the lock body and then rotate the knob to unlock.

**NOTE:** The default code must be changed to ensure the security of the lock box.

To change the code:

- Move all 4 digits to 0-0-0-0 (or previously programmed code).
- Make sure all digits are aligned then rotate the handle to the unlocked position.
- Once opened, move the program lever from A to B on the back of the lock housing.
- Enter your new combination being very careful each new number is centered and aligned.
- With the new code entered, move the program lever back from B to A.

Before shutting the lock box, test the new code multiple times to verify the new combination has been correctly set.

**NOTE:** The new code must be stored in a safe location, but is required to reprogram the code in the future.



P.O. Box 1848, Grand Island, Nebraska 68802-1848  
308-382-1390 • 800-338-3220 • Fax: 308-382-5761 • [Hornady.com/contact](http://Hornady.com/contact)