

Owner's Manual

RAPID[®] SAFE AR WALL LOCK

With patented RFID technology.



Item No. 98185



Instructional videos for Hornady Security[®]
products are available at hornady.com.



READ THIS FIRST

Warning: **NEVER** store a loaded firearm in the Hornady Security® RAPID® Safe AR Wall Lock under any circumstances. The risks associated with storage of a loaded firearm include, but are not limited to, unintentional discharge upon insertion or removal of the firearm. Unintentional discharge may result in bullet and safe fragments dispersing in multiple directions, which may cause serious injury or death. Hornady Security® is not liable for any misuse of the RAPID® Safe.

Warning: No safe is entirely secure. The RAPID® Safe is only as secure as your maintenance of the keys, code and RFID tags. You are solely responsible for maintaining your keys, code and RFID tags. Keep your keys and RFID tags in a secure location at all times. Store your RAPID® Safe in a secure location away from your keys and RFID tags. Hornady Security® is not liable for unauthorized access, including damage to, or loss of property, or personal injury. Again, **NEVER** store a loaded firearm in your Hornady® RAPID® Safe, as this may result in unauthorized access to the loaded firearm.

Warning: Except as expressly provided in the RAPID® Safe Limited Warranty, Hornady Security® is not liable for any expense or damage associated with your inability to open the RAPID® Safe. Electronic systems may fail. Verify that the keys furnished operate the lock. Keep your keys in a secure location at all times. For your security, Hornady Security® **WILL NOT** send replacement keys.

Warning: Hornady Security® is not liable for any loss, theft, or damage to personal property. The RAPID® Safe is not intended to protect the contents from fire, water, humidity, or other environmental conditions. Do not, under any circumstances, return the RAPID® Safe to Hornady Security® with any personal property inside.

Important Information

For trouble-free operation of your RAPID® Safe, please read and understand all instructions before use.

- *Questions? Call our tech line at 800-338-3220.*
- *Read all instructions BEFORE using this firearm locking device. KEEP INSTRUCTIONS FOR FUTURE USE.*
- *WARNING: – using this device with a loaded firearm may result in discharge which may cause death or serious injury. Completely unload the firearm before using this device.*
- *Read the owner's manual and instruction supplied with your firearm before attempting to operate the firearm and before attempting to use this firearm locking device.*
- *Always keep the muzzle pointed in a safe direction when handling any firearm.*
- *Always store unloaded and locked firearms in a safe place, inaccessible to children and other unauthorized persons. Store ammunition in a separate locked or secure location.*
- *Do not store the key or combination to the firearm locking device in the same place as your firearm.*
- *While your firearm safe is an important part of rendering your firearm inaccessible to children and other unauthorized persons, it is not a substitute for safe and responsible firearm handling and proper storage.*

Table of Contents

Warnings and Important Information.....	Page 2
Items Included.....	Page 3
Setup and Operation	Page 4
Warranty.....	Page 9
Product Registration and Service	Page 10
Frequently Asked Questions	Page 10
Mounting Template	Page 11

Items included with your RAPiD® Safe

1. RAPiD® Safe AR Wall Lock
2. One (1) RFID Adjustable Wristband (No. 98166)
3. Two (2) RFID Adhesive Decals (No. 98168)
4. One (1) RFID Key Fob Tag (No. 98167)
5. Two (2) Circular Barrel Keys
6. Five (5) 1/4" x 2.0" Lag Screws
7. Muzzle Ring
8. Wall Power Supply



RAPiD® Safe AR Wall Lock

Item No. 98185

Exterior Dimensions: 14.5" x 11.0" x 4.7"

Power: 12 V 1.0A or four (4) AA batteries
(batteries not included)

U.S. Patent No. 9,530,266

U.S. Patent No. 10,233,687

Not Pictured:

- Owner's Manual
- Warranty Card

RAPiD® Safe Setup and Operation

Congratulations on purchasing the technologically advanced RAPiD® Safe. You have taken a significant step in securing the safety of your firearm.

To achieve the best experience with your RAPiD® Safe, please read all instructions carefully, and understand its operation.

After the RAPiD® Safe has been taken out of the box, make sure both circular barrel keys fit and unlock your RAPiD® Safe. Contact Hornady® at 800-338-3220 if the keys do not work. Store keys in a secure location outside the safe.

AC Power

The RAPiD® Safe is designed to be powered by either the AC power supply or four AA batteries.

To connect the AC power supply, first open the safe with the circular key. Remove the foam from both compartments and insert the power jack through the square hole in the bottom of the safe. Plug the jack into the AC power supply located near the battery door. The cord should be routed across the hinge by tucking it under the fabric cover and plastic clip.


Batteries

For backup or remote use, your safe requires four AA batteries (not included).

To install batteries, press and lift the battery door on the inside of the safe. Only use new, high-quality AA batteries. Replace all batteries at the same time.

To check battery level:

1. Disconnect from AC power source.
2. Press and release "H" button on the lid.

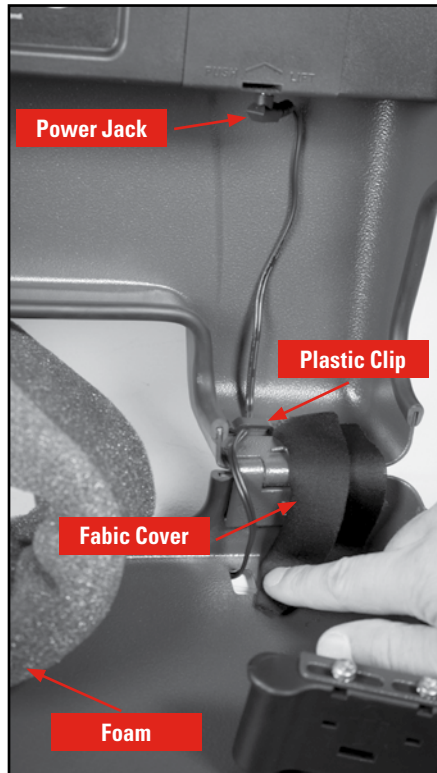

3. The LED light on the “H” button will flash.
 - a. Flashing Green – Good battery
 - b. Flashing Yellow – Low battery
 - c. Flashing Red – Dead battery
4. After 10 seconds, the safe will return to normal operation.

NOTE: Replace batteries every 12 months or once they become weak.

Battery Power Mode

When the RAPID® Safe is unplugged, and is operating on battery power, **you must press any button on the lid to activate the reader.**


Pressing any **button on the lid** causes the system to go from battery saving mode to ready status.

For example: To open your safe with an RFID tag, while the system is running on battery power, first press any **button on the lid** to bring it to ready status. Place your RFID tag within 1-inch of the center of the RFID reader to open the safe.

To open your safe with a key code, the first button pressed wakes up the safe and is entered as the first digit. For example, if your code is **1-2-3-4** and you press **1** to wake up the safe, you may then enter **2-3-4** to finish your code. Otherwise you will need to press the ‘H’ before entering your code to clear the first button pressed.

Keypad Tones On/Off

To turn the sound on and off, press and hold the “H” button on the keypad for 5 seconds until the light turns off.

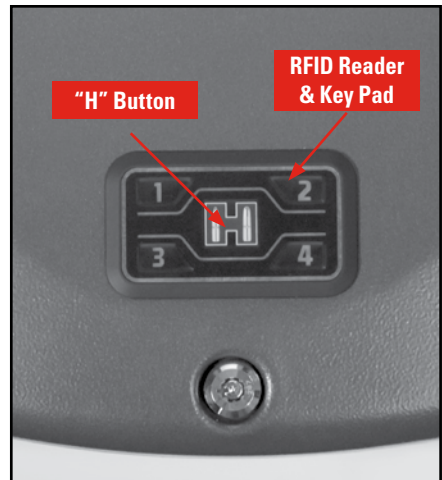

How to Program Your RFID Tags

Your RAPiD® Safe includes these RFID tags:

- 1 Adjustable Wristband
- 1 Key Fob
- 2 Decals

**Additional RFID tags can be purchased separately.*

The RAPiD® Safe can store up to 5 tags. To program these tags:

1. Open the RAPiD Safe with either the key or a previously programmed RFID tag. (The safe may not ship with pre-programmed RFID tags. A RFID tag must be programmed to work with this safe.)
2. Locate the red program button. Press and release the button to begin programming a RFID tag. The first available program location will begin to blink.
3. **Hold the RFID tag within 1-inch** of the illuminated RFID reader area on the top of the safe lid. If the programming was successful, the safe should beep two times and the available slot should go from blinking to solid red for approximately 10 seconds.

NOTE: *If the user attempts to program a RFID tag that is already stored into the safe, the safe will beep three times and the RFID tag will not be programmed into the duplicate slot. The RFID tag can only be programmed into one location.*

4. Verify the RFID tag is programmed by holding the tag over the RFID reader with the lid open. The motor should cycle after each scan.
5. If the RFID tag does not program into the safe, the program function will time out after 10 seconds and the safe will return to normal operation. If multiple attempts to program a RFID tag fails, please contact Hornady at 800-338-3220.



NOTE: *The RFID chip is located in the bulge of the wristband near the clasp. It is designed to be worn on the bottom of the wrist for maximum read distance.*



NOTE: *The RFID decal can be placed on a variety of objects. However, metal surfaces may cause interference and reduce the read distance. The integrated metal housing on some cell phones combined with potential interference from other wireless signals such as Bluetooth, NFC, etc., may reduce the read distance of the RFID decal.*

Before adhering the RFID decal to a mobile phone, we recommend trying different locations on the back of the device to find the optimum read distance. Placing the decal on the outside of an accessory cover will also improve the read distance, but may cause excessive wear, resulting in a shortened life of the decal. When placing the decal on the inside of an accessory cover, DO NOT face it toward the mobile phone. The decal must face outward (away from the phone) to work optimally.

Before placing the RAPiD Safe into service, verify the decal works properly under various conditions (i.e. the wireless apps on your mobile phone are on).

6. One to five RFID tags can be programmed into the safe. If there is an attempt to program a sixth RFID tag, the safe will not enter program mode.

WARNING: After programming, confirm all RFID tags are either programmed or not. All programmed RFID tags must be kept in a safe place to prevent use from unauthorized users.



How to Program Your Key Code

A single user-defined 4 to 6 digit code can be programmed into the RAPiD® Safe.

1. Open the RAPiD Safe with either the key or a previously programmed RFID tag.
2. Locate the red program button to begin programming your key code. The first available tag location will begin to blink to indicate program mode.
3. With the lid open, enter a 4 to 6 digit code into the keypad on the lid. Press the “H” after entering your code.

Verify your code is correct by re-entering your code and pressing “H.” The motor should cycle.

4. Your key code can now be used to open the safe.

NOTE: Only one key code can be programmed into the safe. If you attempt to program a second code, the previous code will be overwritten. **A total of 5 RFID tags and 1 key code can be programmed into the safe.**

How to Remove All RFID Tags From Safe

1. Open the RAPiD® Safe with either the key, the key code or a previously programmed RFID tag. Locate the red program button. Press and hold the button for five seconds to erase all tags from the safe. All five red LED lights will begin to blink in sequence. (The safe does not allow individual tags to be removed. They must all be erased at one time. The intended RFID tags can then be reprogrammed back into the safe with the instructions on page 5.)

NOTE: To abort the erase procedure, press the “H” button on the lid of the

safe or do not touch anything and the erase procedure will automatically abort after 10 seconds and return to normal operation. **Test RFID tags and the key code to confirm they are operational.**

2. To confirm erasing procedure, press and release the program button again. All five LED lights will blink three times to visually confirm all RFID tags have been removed. All RFID tags will no longer work until they are programmed back into the safe with the instructions in the “How to Program Your RFID Tags” section.

Closing the Safe

The safe has a latch closure sensor that will illuminate the LED in the keypad when the lid is closed.

Green – Latch has fully closed.



Blinking Red – Latch has NOT fully closed.

Press lid down to fully close or re-open and check for interference.



How to Mount Safe to the Wall

WARNING: In order to ensure the proper functionality of the RAPiD® Safe AR Wall Lock, the mounting instructions below must be followed. Any deviation in how the safe is mounted may affect the operation and reliability. It is critical that the RAPiD® Safe is securely attached to a stud or concrete surface to prevent the safe from inadvertently falling, damaging the rifle and/or injuring the user.

1. Before mounting the safe to the wall, check the function of the safe and mechanical key according to the instructions in the Owner's Manual.
2. Using the included template, locate an area of the wall with enough clearance to allow the safe unobstructed operation and safe removal of the firearm.
3. Position the mounting holes of the template on the center of a stud. Mark the 3 bolt holes onto the wall.
4. If using the included 1/4" lag screws in a wood stud, pre-drill a 5/32" diameter hole for each of the 3 holes.
5. Remove the inner foam from the safe and, if using AC power, insert the included AC power cord into the back of the safe. Position the safe over the drilled holes, being careful not to pinch the power cord.
6. Place a washer onto the 1/4" lag screw and tighten until firm using a 7/16" socket. Do not over tighten.
7. Replace the inner foam. Place the rifle into the safe and adjust the grip block so it slightly lifts the rifle off the chamber block.

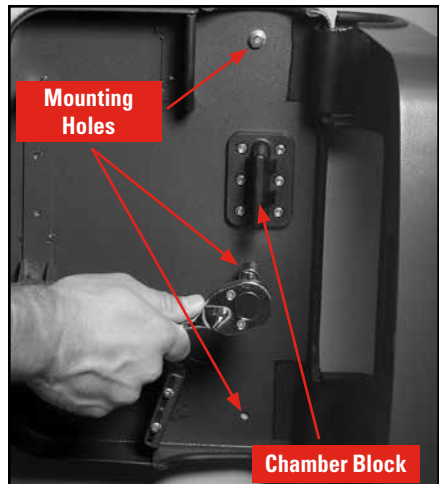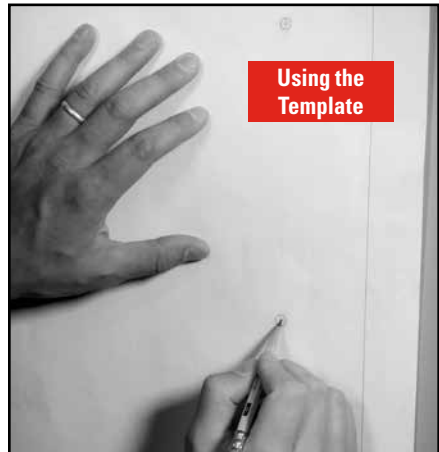


8. Place the muzzle ring over the tip of the barrel so it is at least $1\frac{3}{4}$ " below the end of the muzzle.
9. Verify the muzzle ring is centered on the stud and mark the two mounting holes for the muzzle ring and remove the rifle.
10. If using the included $\frac{1}{4}$ " lag screws in a wood stud, pre-drill a $\frac{5}{32}$ " diameter hole for each of the 2 holes.
11. Place the muzzle ring back over the two mounting holes. Place a washer onto the $\frac{1}{4}$ " lag screw and tighten until firm using a $\frac{7}{16}$ " socket. Do not over tighten.
12. With the rifle removed, verify the function of the safe while mounted to the wall.
13. If functioning properly, place the barrel of the rifle into the muzzle ring and check the fit in the safe. Open the safe a few times while holding the rifle to become familiar with the operation and security of the rifle.

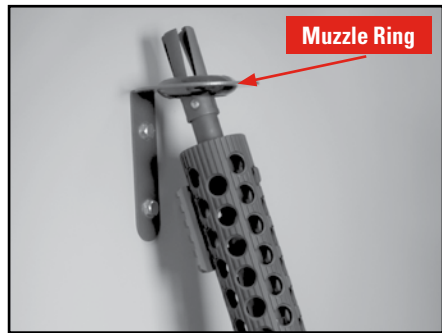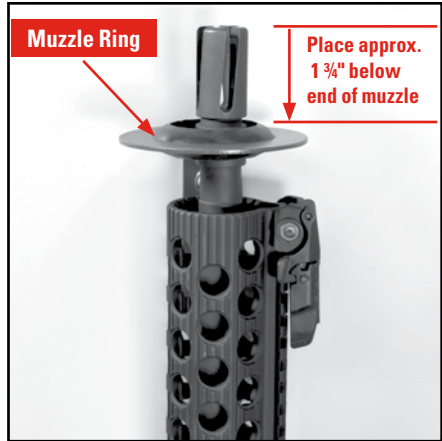


Placement of Firearm in Safe

First, insert the barrel into the muzzle ring. Position the firearm on the chamber block to align with its ejection port. Adjust the grip block so it supports the firearm.

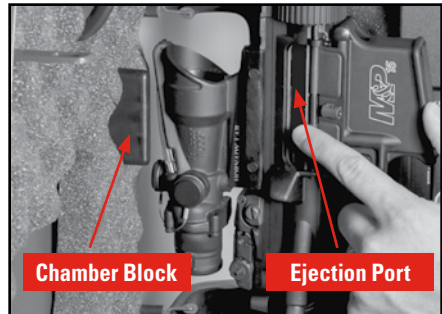

Adjusting the Grip Block

In order to accommodate various sized firearms, adjustment to the grip block may be necessary. Loosen screws to allow the block to slide in the appropriate position, then retighten screws.

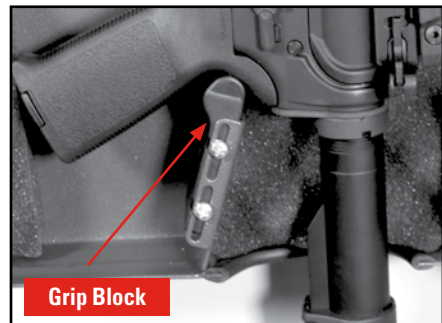

RAPiD® Safe Limited Warranty

Hornady Security® warrants the RAPiD® Safe will, in normal use and service, be free from defects in workmanship or materials for one (1) year from date of purchase.

This Limited Warranty does not cover any of the following:

- (a) Damage, deterioration, or malfunction resulting from accident, negligence, misuse, improper installation, or lack of maintenance;
- (b) Any defects not discovered and reported to Hornady Security® during the one (1) year warranty period;
- (c) Usual and customary deterioration or wear resulting from normal use.

This Limited Warranty is not transferable and is enforceable by the original owner only. In the event that Hornady Security® receives notice from the original purchase of a warranty claim in conformity herewith, Hornady Security® will promptly undertake an investigation of such claim. If the warranty claim is covered by the Limited Warranty, Hornady Security®, will, in its sole discretion, repair the defect(s) or replace RAPiD® Safe at the expense of Hornady Security®.

Disclaimer of Implied Warranties. EXCEPT AS IS OTHERWISE EXPRESSLY SET FORTH IN THE ABOVE LIMITED WARRANTY, HORNADY SECURITY® MAKES NO OTHER REPRESENTATIONS OR WARRANTIES OF ANY KIND, WHETHER EXPRESSED OR IMPLIED, BY OPERATION OF LAW OR OTHERWISE WITH RESPECT TO THE RAPiD® SAFE OR ANY COMPONENT PART THEREOF, INCLUDING WITHOUT LIMITATION ANY REPRESENTATION OR WARRANTY WITH RESPECT TO MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE OR USE.

Limitation on Liability. THE OBLIGATION OF HORNADY SECURITY® TO REPAIR OR REPLACE AS PROVIDED ABOVE SHALL BE THE SOLE AND ONLY REMEDY RESPECTING ANY DEFECT IN THE RAPiD® SAFE, OR ANY COMPONENT PART THEREOF. IN THE EVENT THAT THE FOREGOING REMEDY FAILS OF ITS ESSENTIAL PURPOSE, THE LIABILITY OF HORNADY SECURITY® TO PURCHASER SHALL NOT, IN ANY EVENT, EXCEED THE ACTUAL PURCHASE PRICE OF THE NON-CONFORMING GOODS; AND

Limitation on the Nature of Damages. HORNADY SECURITY® SHALL NOT, UNDER ANY CIRCUMSTANCES, BE LIABLE TO THE PURCHASER OR ANY THIRD PARTY FOR ANY SPECIAL, INDIRECT, INCIDENTAL, CONSEQUENTIAL, LIQUIDATED OR PUNITIVE DAMAGES OF ANY NAME, NATURE OR DESCRIPTION. HORNADY SECURITY® IS NOT RESPONSIBLE FOR DAMAGE TO OR THEFT OF THE RAPiD® SAFE, OR ITS CONTENTS.

Product Registration and Service

You must register your RAPiD® Safe in order to obtain Warranty Service. Simply complete and return the enclosed product registration card or submit through our website by going to hornady.com/warranties.

To Receive Warranty Service

In order to report a warranty claim, call Hornady Security® at 800-338-3220 to request a return authorization number. Returns will not be accepted without prior return authorization by Hornady Security®. When a return authorization number has been obtained, be sure all contents have been removed from the RAPiD® Safe before sending it for service. Hornady Security® is not liable for any loss, theft, or damage to personal property.

Post-Warranty Service Information

For issues concerning service after the Limited Warranty expires, contact Hornady Security® at 800-338-3220.

Frequently Asked Questions

I've lost my keys. Can I get a replacement?

For security reasons, Hornady® **WILL NOT** provide replacement barrel keys for the RAPiD® Safe. Consult a locksmith if needed.

Where can I find the serial number?

The serial number is located on the back of the safe near the hinge. Prior to mounting the safe, record the serial number for future reference.

How long should the batteries last?

Quality batteries should last approximately 12 months, depending on use.

How do I return my RAPiD® Safe for warranty work?

Call Hornady® at 800-338-3220 and one of our technicians will assist you.

Why isn't my RFID wristband, key fob, or decals opening the safe?

- Be sure the RFID tag is programmed to your safe. The RAPiD® Safe allows five (5) RFID tags to be programmed for use.
- Check the power source. If the unit is plugged into an electrical outlet, the green LED light should be on. If the unit is on battery power, press the button on the top of the safe to bring the system to ready before placing the RFID tag on the reader.



This is a California-approved firearms safety device that meets the requirements of California Penal Code Section 12088 and the regulations issued thereunder.

 
This product has been tested and certified to meet the requirements of ASTM F2369 for Non-Integral Firearm Locking Devices.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



P.O. Box 1848, Grand Island, Nebraska 68802-1848
308-382-1390 • 800-338-3220 • Fax: 308-382-5761
Hornady.com/contact



Mounting Template RAPiD® Safe AR Wall Lock (Item No. 98185)

How to Mount Safe to the Wall

WARNING: In order to ensure the proper functionality of the RAPiD® Safe AR Wall Lock, the mounting instructions below must be followed. Any deviation in how the safe is mounted may affect the operation and reliability. It is critical that the RAPiD® Safe is securely attached to a stud or concrete surface to prevent the safe from inadvertently falling, damaging the rifle and/or injuring the user.

1. Before mounting the safe to the wall, check the function of the safe and mechanical key according to the instructions in the Owner's Manual.
2. Using this template, locate an area of the wall with enough clearance to allow the safe unobstructed operation and safe removal of the firearm.
3. Position the mounting holes of the template on the center of a stud. Mark the 3 bolt holes onto the wall.
4. If using the included 1/4" lag screws in a wood stud, pre-drill a 5/32" diameter hole for each of the 3 holes.
5. Remove the inner foam from the safe and, if using AC power, insert the included AC power cord into the back of the safe. Position the safe over the drilled holes, being careful not to pinch the power cord.
6. Place a washer onto the 1/4" lag screw and tighten until firm using a 7/16" socket. Do not over tighten.
7. Replace the inner foam. Place the rifle into the safe and adjust the grip block so it slightly lifts the rifle off the chamber block.
8. Place the muzzle ring over the tip of the barrel so it is at least 1 3/4" below the end of the muzzle.
9. Verify the muzzle ring is centered on the stud and mark the two mounting holes for the muzzle ring and remove the rifle.
10. If using the included 1/4" lag screws in a wood stud, pre-drill a 5/32" diameter hole for each of the 2 holes.
11. Place the muzzle ring back over the two mounting holes. Place a washer onto the 1/4" lag screw and tighten until firm using a 7/16" socket. Do not over tighten.
12. With the rifle removed, verify the function of the safe while mounted to the wall.
13. If functioning properly, place the barrel of the rifle into the muzzle ring and check the fit in the safe. Open the safe a few times while holding the rifle to become familiar with the operation and security of the rifle.

