




MOE[®] K GRIP

MOE

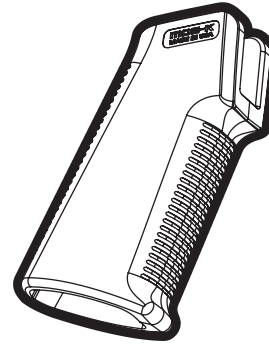

⚠ WARNING

BEFORE STARTING! MAKE SURE THE WEAPON IS UNLOADED,
THE CHAMBER IS EMPTY & THE SAFETY IS ENGAGED.




READ ALL INSTRUCTIONS BEFORE PROCEEDING
TO AVOID LOSING ANY SMALL COMPONENTS.



MOE K GRIP INSTALLATION INSTRUCTIONS


STOP

IMPROPER INSTALLATION AND/OR IMPROPER
USE OF THIS PRODUCT MAY CAUSE WEAPON
MALFUNCTION. WEAPON MALFUNCTION MAY
CAUSE SERIOUS INJURY, INCLUDING GRIEVOUS
BODILY HARM AND/OR DEATH.

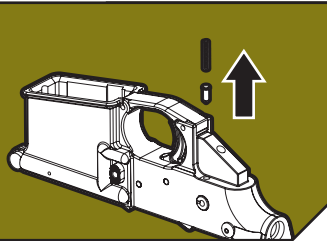


STEP 1: REMOVE ORIGINAL GRIP

Turn rifle upside down. Remove original grip
per armory guidelines, taking care not to lose
the *fire control selector/safety detent parts*
held in place by the grip. Remove *selector*
spring, leaving the *selector detent* in place.

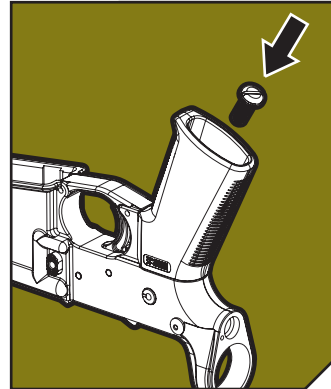

STEP 3: INSTALL MOE K GRIP

Using a *flat-head screw driver*, install the
supplied *Pan-Head Screw* through the
hole and hand tighten to receiver.
A locking compound is factory applied to
prevent loosening. **DO NOT re-use original**
mounting screw/lock washer.

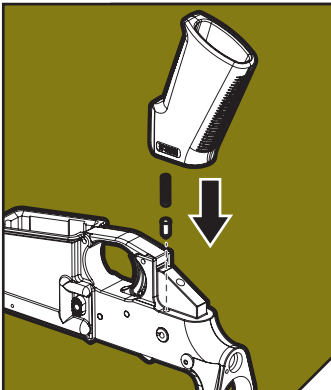

STEP 2: POSITION GRIP

Verify *selector detent* is in the receiver and
install *selector spring* in the *Grip Body* right
side top hole. Fit *MOE K Grip* onto *lower*
receiver, making sure the *selector spring*
engages the *receiver hole* without binding.

STEP 4: VERIFY INSTALL

⚠ **IMPORTANT:** Test safety selector and general
function prior to firing.

Perform final inspection including function check
per *US Army TM 9-1005-319-23&P Unit and*
Direct Support Maintenance Manual (3-97)
to verify proper weapon function.

**Always test fire your weapon before using it in
an operational environment.**

