





MOE® AK/AKM HAND GUARD

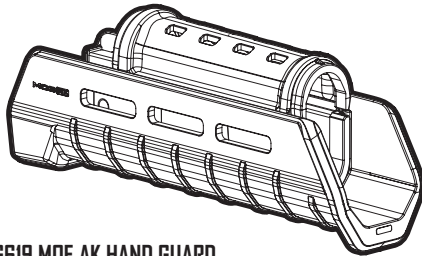


MAG619 MOE AK HAND GUARD

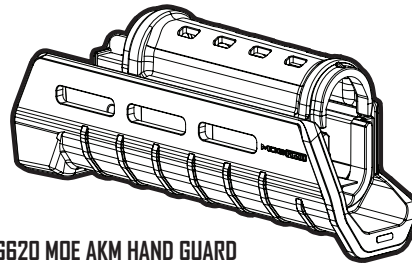

MAG620 MOE AKM HAND GUARD

INSTALLATION INSTRUCTIONS


⚠ WARNING: BEFORE STARTING, MAKE SURE THE WEAPON IS UNLOADED, THE CHAMBER IS EMPTY, AND THE SAFETY ENGAGED.

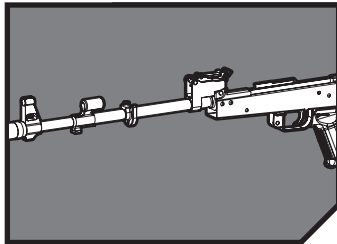

STEP 1: FIELD STRIP RIFLE


Remove existing hand guard by lifting up on lever on hand guard retainer and sliding retainer forward. Pull hand guard from receiver. Remove old upper hand guard from gas tube by rotating upper hand guard 180 degrees until ends are no longer engaged by retaining caps. Gripping or clamping the gas tube flats at the rear of the gas tube in a vise may be helpful as upper hand guard could be tight.

Do not over-tighten vise, as this may damage the gas tube.

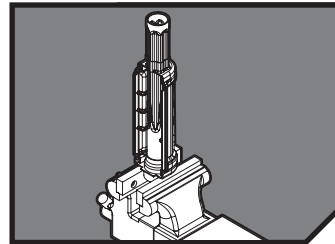


STEP 4: INSTALL UPPER HAND GUARD

Install Upper Hand Guard over gas tube by placing open side of Hand Guard on bottom of gas tube, engage the ends of the Upper Hand Guard in the retaining caps on the gas tube, and rotate 180 degrees until in place. (MOE Upper Hand Guard installs the same as a standard AK upper hand guard.)

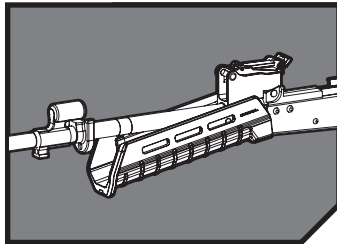

STEP 2: INSTALL


Insert lugs at rear of AK/AKM Hand Guard into rifle receiver under barrel (fit may be tight).

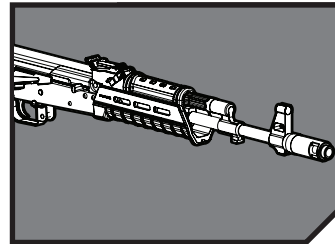

STEP 5: VERIFY INSTALL

Reassemble rifle and conduct functions check.

CAUTION: When handling rifle take care to avoid hot gas tube.

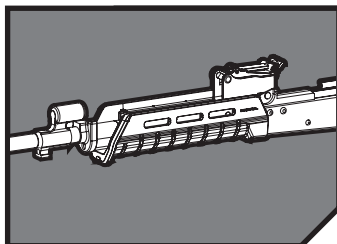

STEP 3: INSTALL

Slide hand guard retainer along barrel until it contacts the front interface of the Hand Guard. Flip down lever to lock retainer in place. If hand guard retainer does not line up with its corresponding cut in the top of barrel, check that Hand Guard is fully seated.

NOTE – MOE AK Hand Guard is intended for hand guard retainers lacking a sling loop. If sling loop is present on retainer, either install MOE AKM Hand Guard, or remove sling loop with Dremel or other high-speed tool and cutoff wheel prior to installing MOE AK.