





This document is subject to the Arms Export Control Act (22 U.S.C. 7228) and the International Traffic in Arms Regulations (22 C.F.R. Parts 120-130). A prior authorization or license from the U.S. State Department Directorate of Defense Trade Controls is required to export, re-export, re-transfer, or show this document to any foreign person whether in the United States or abroad.

MAGPUL[®] MOE[™] SL[™] HAND GUARD

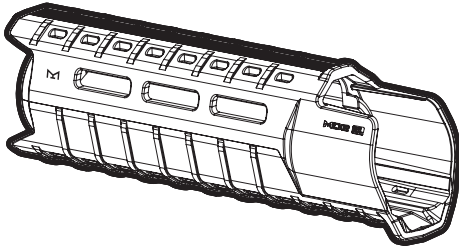


MAG538
CARBINE LENGTH

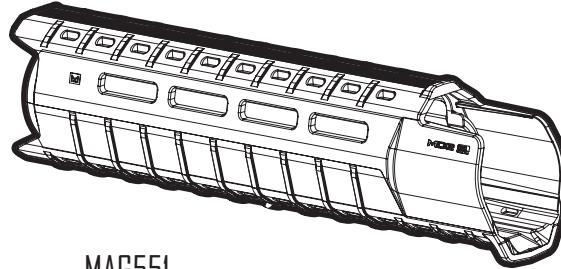

MAG551
MID-LENGTH

INSTALLATION INSTRUCTIONS


! WARNING: BEFORE STARTING, MAKE SURE THE WEAPON IS UNLOADED, THE CHAMBER IS EMPTY, AND THE SAFETY ENGAGED.

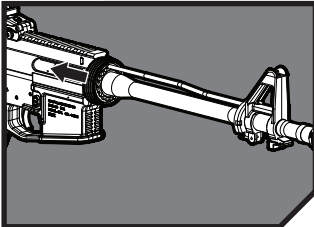

STEP 1: REMOVE EXISTING HAND GUARDS

To remove existing *hand guards*, FIRMLY pull back on the *delta ring* and pull the *hand guards* out. If there is a *front swing swivel* attached to the *front sight base*, it must be removed.


Refer to M16 Operator's Manual (US ARMY TM9-1005-319-10) for assistance.

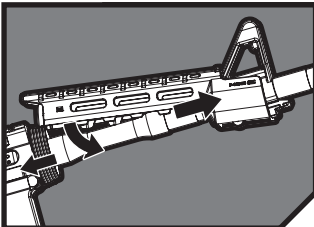

STEP 2: INSTALL UPPER HAND GUARD


Slide the front flange of the *Upper Hand Guard* piece into the metal *hand guard cap*, located behind the front sight base/gas block. Pull back FIRMLY on the *delta ring* and rotate the top *Hand Guard* into place.

Hand Guard will wrap around the front sight when mounted. DO NOT attempt to install the *Hand Guard* backwards.

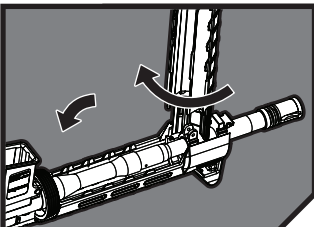


STEP 3: INSTALL LOWER HAND GUARD

Fit between *Upper Hand Guard* and *Lower Hand Guard Assembly* will be tight. Insert the *Lower Hand Guard Assembly* perpendicular to the *Upper Hand Guard*, twist slightly and fit between the forward cover extensions of the *Upper Hand Guard* as shown. Twist and rotate the *Lower Hand Guard Assembly* parallel to the *Upper Hand Guard*.

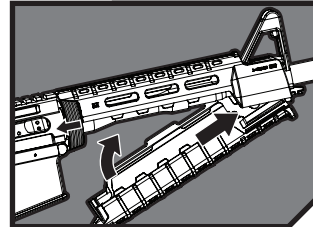

STEP 4: INSTALL LOWER HAND GUARD


Push the front flange of the bottom *Hand Guard Assembly* fully into the metal *hand guard cap*. Pull back firmly on the *delta ring* and rotate the assembly into place.

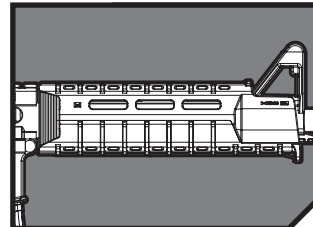

STEP 5: RESET DELTA RING

When both halves are in place, make sure your *delta ring* is securing BOTH upper and lower rear flanges of the *Hand Guards*.

The *Hand Guards* should be firmly mounted with minimal play.

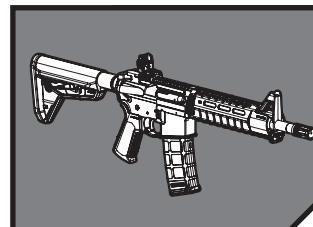

STEP 6: VERIFY INSTALLATION

Perform final inspection including function check per US ARMY TM 9-1005-319-23&P Unit and Direct Support Maintenance Manual to verify correct installation.

Always test fire your weapon before using it in an operational environment.