

Remington 700 HIT Trigger




The World's Finest Triggers®

TRIGGER INSTALLATION INSTRUCTIONS

Thank you for purchasing this Timney Trigger. It has been designed and manufactured to provide you with a lifetime of dependable service. Each trigger is hand tested and calibrated on a rifle action before leaving our factory. Please read these instructions **fully** before you begin installing the trigger, you'll be glad you did.

1. Remove bolt from the action by pressing upwards on the bolt stop release. Afterwards, detach the stock from the action and barrel (See image 1)
2. Using a punch, remove the mounting pins to release the original trigger. Hint: do not pull the pins all the way out to ensure the bolt release assembly does not fall out, just enough to remove the stock trigger. Also ensure to hit the pins on the small end of the pin. (See image 2 & 3)
3. Note the directions in which you remove the pins because you will have to reverse this process when installing your Timney Trigger (See image 3)
4. Remove the trigger and reverse the process. When installing the new trigger make sure that the top sear is being held in place when reinserting the rear mounting pin. You can see that the top sear has a circular notch where the mounting pin slides overtop of. If this step is not done the sear will not allow the bolt to be reinserted after you have reassembled your rifle (See image 4 & 5). After inserting, tap the pin until it is flush with the bolt release
5. Insert the front pin, but do not tap it in too far, it will prevent the bolt release from functioning (see image 6)
6. Press up on the bottom of the bolt stop release to verify that it functions and moves freely. (See image 6)
7. By looking, you can see that bolt stop release lever on the action has a notch where the bolt stop release tang sits. If the tang is not seated properly in that notch, gently bend the tang using needle nose pliers until it properly seats without binding (See image 7)
8. Reinstall the stock to the action and barrel
9. Ensure the chamber is clear, put safety selector to the FIRE position and check to see that the trigger functions properly.

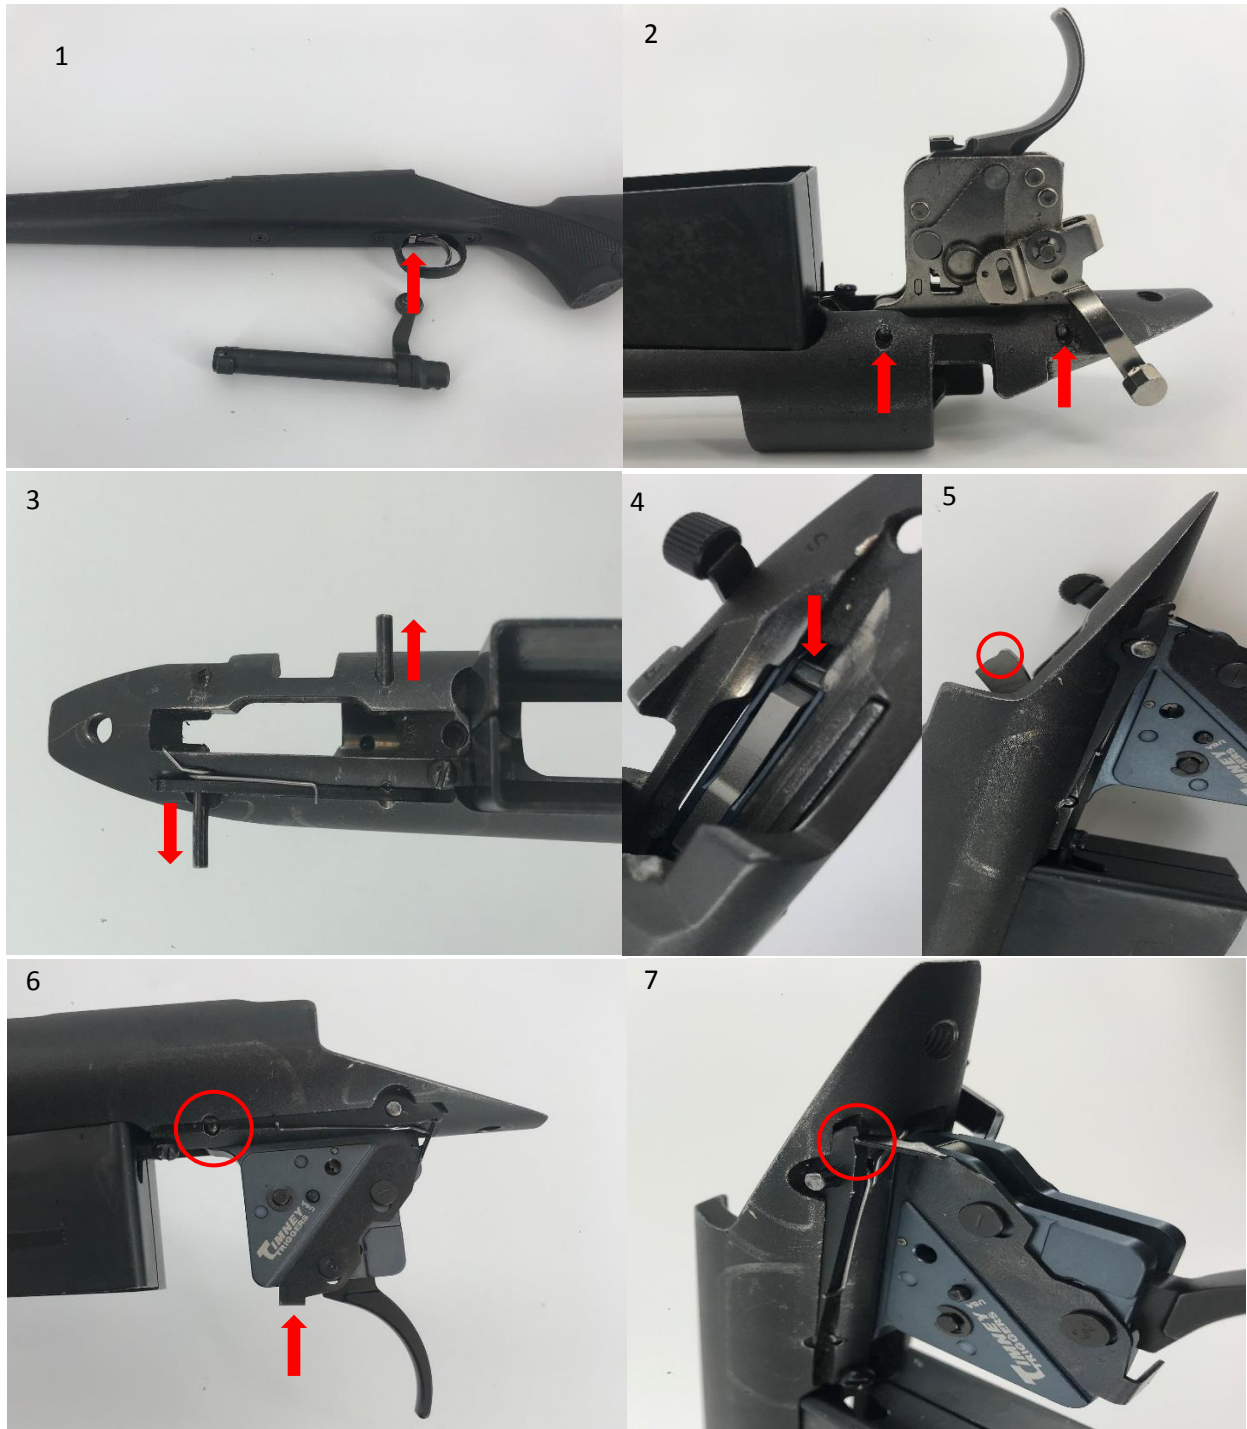

NOTE: *If you have any trouble, contact Timney or Check out the troubleshooting steps on the Timney website. Timney will also install your trigger for \$ 40.00 plus \$35.00 shipping and handling.*

TIMNEY TRIGGER GUARANTEE

Material and workmanship:

This Timney trigger has been carefully inspected, tested and adjusted to give a lifetime of dependable service. Every possible care has been exercised in its design and construction. If any defect in workmanship or material should develop under conditions of normal use and service, any necessary repairs, including parts and labor will be made at NO CHARGE to the purchaser providing that our inspection reveals parts were not damaged through accident, alteration, misuse, abuse or other causes beyond our control. We neither assume nor imply any oral or statutory warranties, and we neither assume nor authorize any person to assume for us any obligation or liability in connection with this trigger. Repairs or disassembly of this trigger in any manner without specific authorization, voids the guarantee.

PHONE – 623-223-1111

FAX – 623-223-1112

2020 W QUAIL AVE, PHOENIX AZ. 85027

TECHNICALSUPPORT@TIMNEYUSA.COM

www.timneytriggers.com